


RT115

Tier 3

Parts Manual

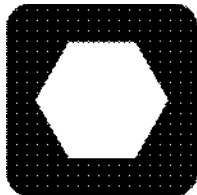

Ditch Witch®

RT115 (Tier 3)

ISSUE NO. 11PL-8/17

For Replacement Copy Order **P/N 053-1191**

This product and its use may be covered by one or more patents at <http://patents.charlesmachine.works> .

This manual contains information concerning the following models:
RT115 Tractor

Copyright 2008, 2011, 2012, 2013, 2014, 2017 by The Charles Machine Works, Inc.



**Ditch
Witch®**

, Ditch Witch, AutoCrowd, Roto Witch, and CMW are registered trademarks of The Charles Machine Works, Inc.

FOREWORD

This manual contains illustrated parts lists to help you select quality Ditch Witch® replacement parts for your Ditch Witch equipment. Using other replacement parts will lessen the productivity of your equipment.

- Descriptions and specifications in this book were current at publication. However, the Charles Machine Works, Inc. reserves the right to improve equipment, so this manual might not reflect the most current improvements.
- Part numbers enclosed in a box or marked as “obsolete” in the remarks column are no longer available from The Charles Machine Works, Inc. Your local Ditch Witch dealer may be able to locate the part for you.
- Footnotes provide more information to help you identify parts shown in the manual.
- Assembly instructions referenced in footnotes are available through your local Ditch Witch dealer.
- Instructions on recommended equipment use and maintenance are in the Operator’s Manual that was shipped with your equipment.

Keep the following in mind when ordering Ditch Witch replacement parts:

- ◆ Specify parts you need by part number and description, not by illustration reference numbers.
- ◆ Have equipment model and serial number on hand to help ensure you get the right parts for your machine whether it’s old or new.

Thank you for buying and using Ditch Witch equipment and replacement parts.



A CHARLES MACHINE WORKS COMPANY

WARRANTY

DW WARRANTY Policy
August, 2016

POLICY 1: DITCH WITCH® EQUIPMENT AND REPLACEMENT PARTS LIMITED WARRANTY POLICY

Subject to the limitation and exclusions herein, free replacement parts will be provided at any authorized Ditch Witch dealership for any Ditch Witch equipment or parts manufactured by the Ditch Witch factory that fail due to a defect in material or workmanship within one (1) year of first commercial use. Free labor will be provided at any authorized Ditch Witch dealership for installation of parts under this warranty during the first year following "initial commercial" use of the serial numbered Ditch Witch equipment on which it is installed. The customer is responsible for transporting their equipment to an authorized Ditch Witch dealership for all warranty work.

EXCLUSIONS FROM PRODUCT WARRANTY

- All incidental or consequential damages.
- All defects, damages, or injuries caused by misuse, abuse, improper installation, alteration, neglect, or uses other than those for which products were intended.
- All defects, damages, or injuries caused by improper training, operation, or servicing of products in a manner inconsistent with manufacturer's recommendations.
- All engines and engine accessories (these are covered by original manufacturer's warranty).
- Tires, belts, and other parts which are subject to another manufacturer's warranty. (Such warranty will be available to purchaser.)
- ALL IMPLIED WARRANTIES NOT EXPRESSLY STATED HEREIN, INCLUDING ANY WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY.

IF THE PRODUCTS ARE PURCHASED FOR COMMERCIAL PURPOSES, AS DEFINED BY THE UNIFORM COMMERCIAL CODE, THEN THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE FACE HEREOF AND THERE ARE NO IMPLIED WARRANTIES OF ANY KIND WHICH EXTEND TO A COMMERCIAL BUYER. ALL OTHER PROVISIONS OF THIS LIMITED WARRANTY APPLY INCLUDING THE DUTIES IMPOSED.

Ditch Witch products have been tested to deliver acceptable performance in most conditions. This does not imply they will deliver acceptable performance in all conditions. Therefore, to assure suitability, products should be operated under anticipated working conditions prior to purchase.

Defects will be determined by an inspection within thirty (30) days of the date of failure of the product or part by Ditch Witch Product Support (DWPS) or its authorized dealer. DWPS will provide the location of its inspection facilities or it's nearest authorized dealer upon inquiry. DWPS reserves the right to supply remanufactured replacement parts under this warranty as it deems appropriate.

Extended warranties are available upon request from your local Ditch Witch dealer or the Ditch Witch factory.

Some states do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply. Further, some states do not allow exclusion of or limitation of how long an implied warranty lasts, so the above limitation may not apply. This limited warranty gives product owner specific legal rights and the product owner may also have other rights which vary from state to state.

For information regarding this limited warranty, contact the DWPS, P.O. Box 66, Perry, OK 73077-0066, or contact your local dealer.

CONTENTS

Decals

Decal Location – RT115T3	8
--------------------------------	---

Engine Components

Engine	16, 18
Engine Service	20, 22
Muffler and Air Filter	26
Muffler Guard Kit	28
Muffler Support	30
Radiator/Oil Cooler	32
Rear Engine Support	24

Power Train

Axle – Axle Housing, Rigid	46
Axle – Axle Housing, Steerable	58
Axle – Bvl Gear/Pinion Set	54
Axle – Diff Lock, Steerable/Rigid	56
Axle – Differential, Rigid	48
Axle – Differential, Steerable	60
Axle – Double Joint Steerable	64
Axle – Rear Steer Sensor	68
Axle – Reduction Gears	50
Axle – Swivel Housing & Steering Cylinder	66
Axle – Wheel Hub/Reduction Gear Steerable	62
Axle – Wheel Hub Rigid	52
Brake Calipers	76
Differential	44
Ground Drive Transmission Mount	38
Hydrostatic Drive Line	74
Manual Shift Transmission	40
Park Brake	80
Service Brake System	78
Tilt Frame Diff Mount – RT90/95/115	70
Tilt Frame Diff Mount – RT95M/95H/115	72
Tire & Wheel – 38X18.00-20 E16TL	82

Frame Components

4-Post ROPS	124
Air Conditioning Kit	134
Backfill Blade Assembly	86
Backfill Blade Cylinder Guard	88
Battery Installation	120
Cab Heater Assembly	132
Cab Kit	128
Canopy & Light Kit	136
Counterweight/Grille	94
Engine Enclosure	98
Fenders & Covers	104
Front Counterweight	96

Fuel Tank	108
Fuse Block Assembly	122
Gauge Panel Assembly	102
Hydraulic Reservoir	112
ROPS	126
Seat Platform	116
Seat Swivel & Base	118
Sound Blankets	138
Tape Dispenser	142
Tilt Steering	100
Trench Depth Meter Module	90
Trench Depth Meter/Odometer Mount	92
Weight Rack	140

Control Components

Attachment Control Handle	154
BFB Blade Controls	146
Cruise Control	156
Cruise Foot Control	160
Cruise Hand Control	158
Ground Speed Direction Foot Control	150
Ground Speed Direction Hand Control	148
Hydrostatic Shift	152
Rear Steer Control	162
Rear Steer Manual Control Kit	164

Hydraulics

Auxiliary Hydraulics	180
Backfill Blade Hydraulics	168
Backfill Blade Valve	170
Control Valve	196
Cylinder – 2" x 1" x 3.38"	198
Cylinder – 2.0" x 1.25" x 8.0"	200
Cylinder – 3.0" x 1.75" x 8.0"	202
Filter – Hydrostatic T2	184
Filter Guard	186
Frame Tilt Hydraulics	192
Hydrostat Pump Attach Hydraulics	182
Motor Shift/Diff Lock Hydraulics	176
No Frame Tilt/No Rear Steer Option	194
Power Steering Valve Hydraulics	188
Pump Drive Hydraulics	172
Pump Hydrostatic Assembly	174
Rear Steer Hydraulics	190
Remote Crowd Hydraulics	178

CONTENTS

Electrical


Backup Alarm Kit 206

Miscellaneous


Bolt/Nut Torque Chart 210
Filters 214
Optional Kits 214
Parts Manual Change Request 215
Related Publications 214
Replacement O-Ring Chart..... 213
Warranty Registration 218

DECALS


DECAL LOCATION RT115 TIER III

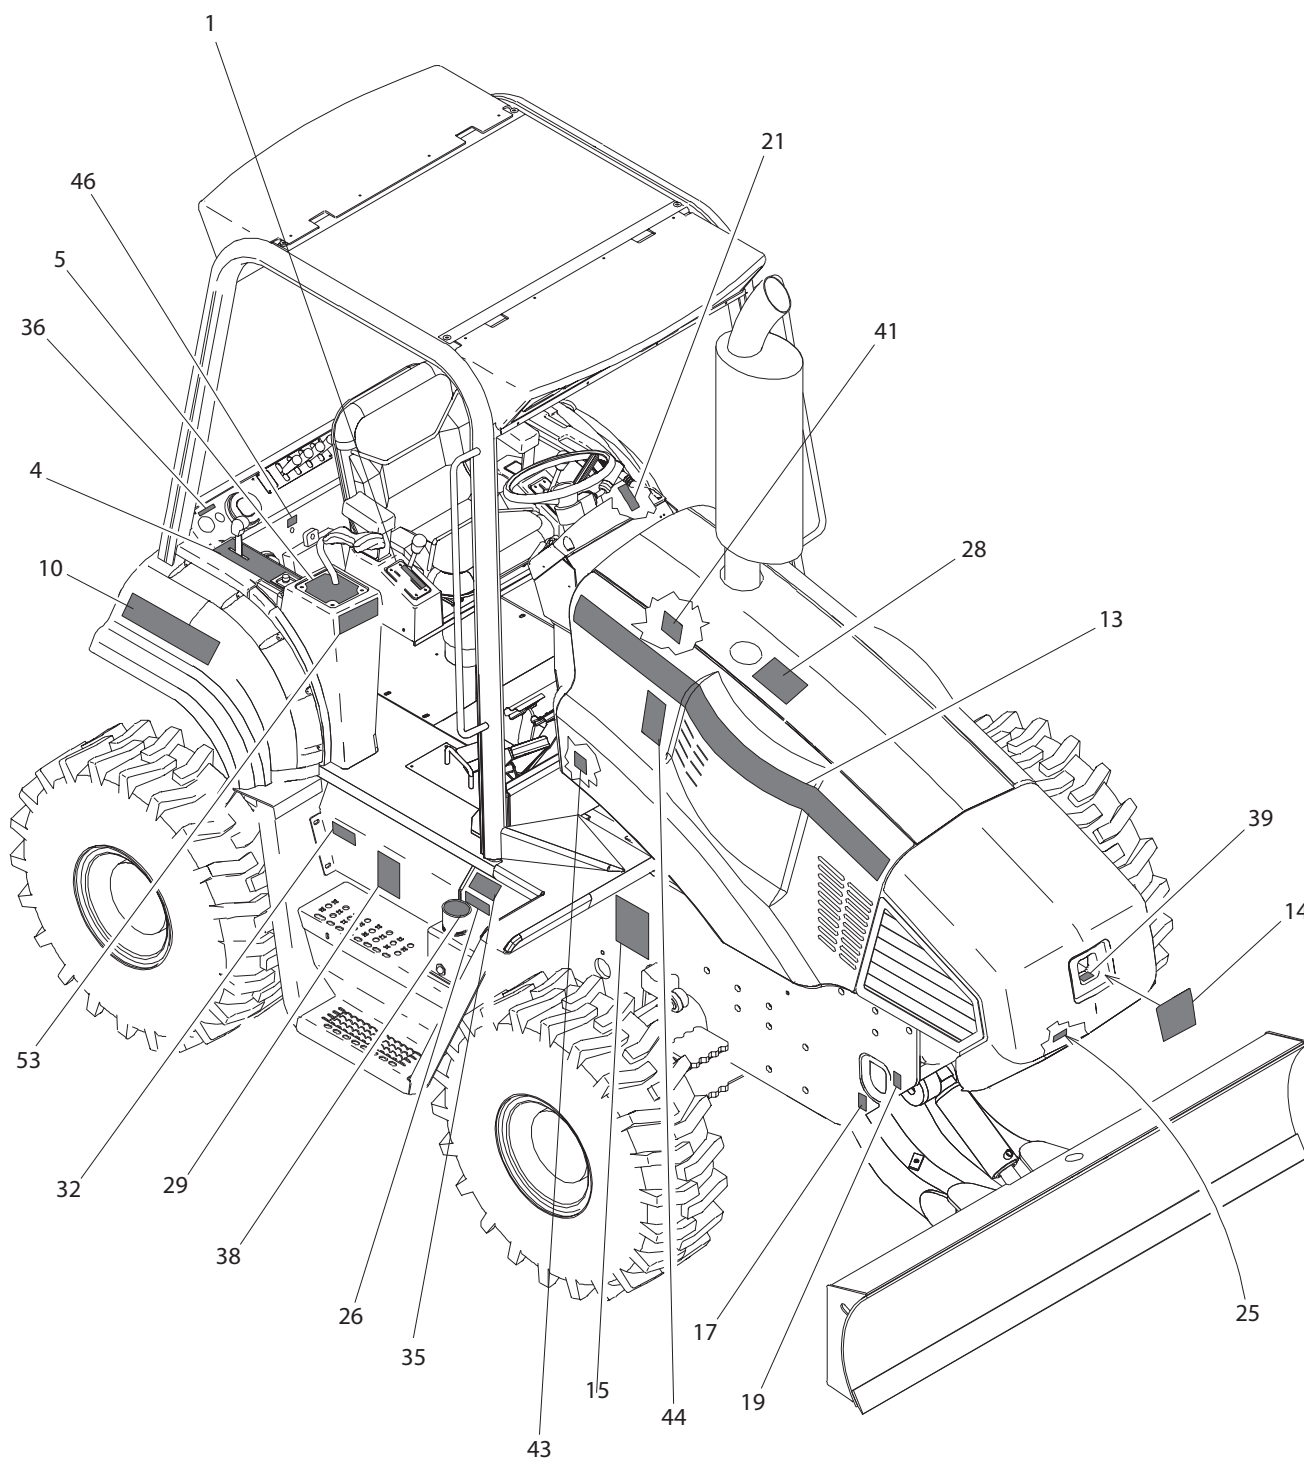

DECAL LOCATION RT115 TIER III

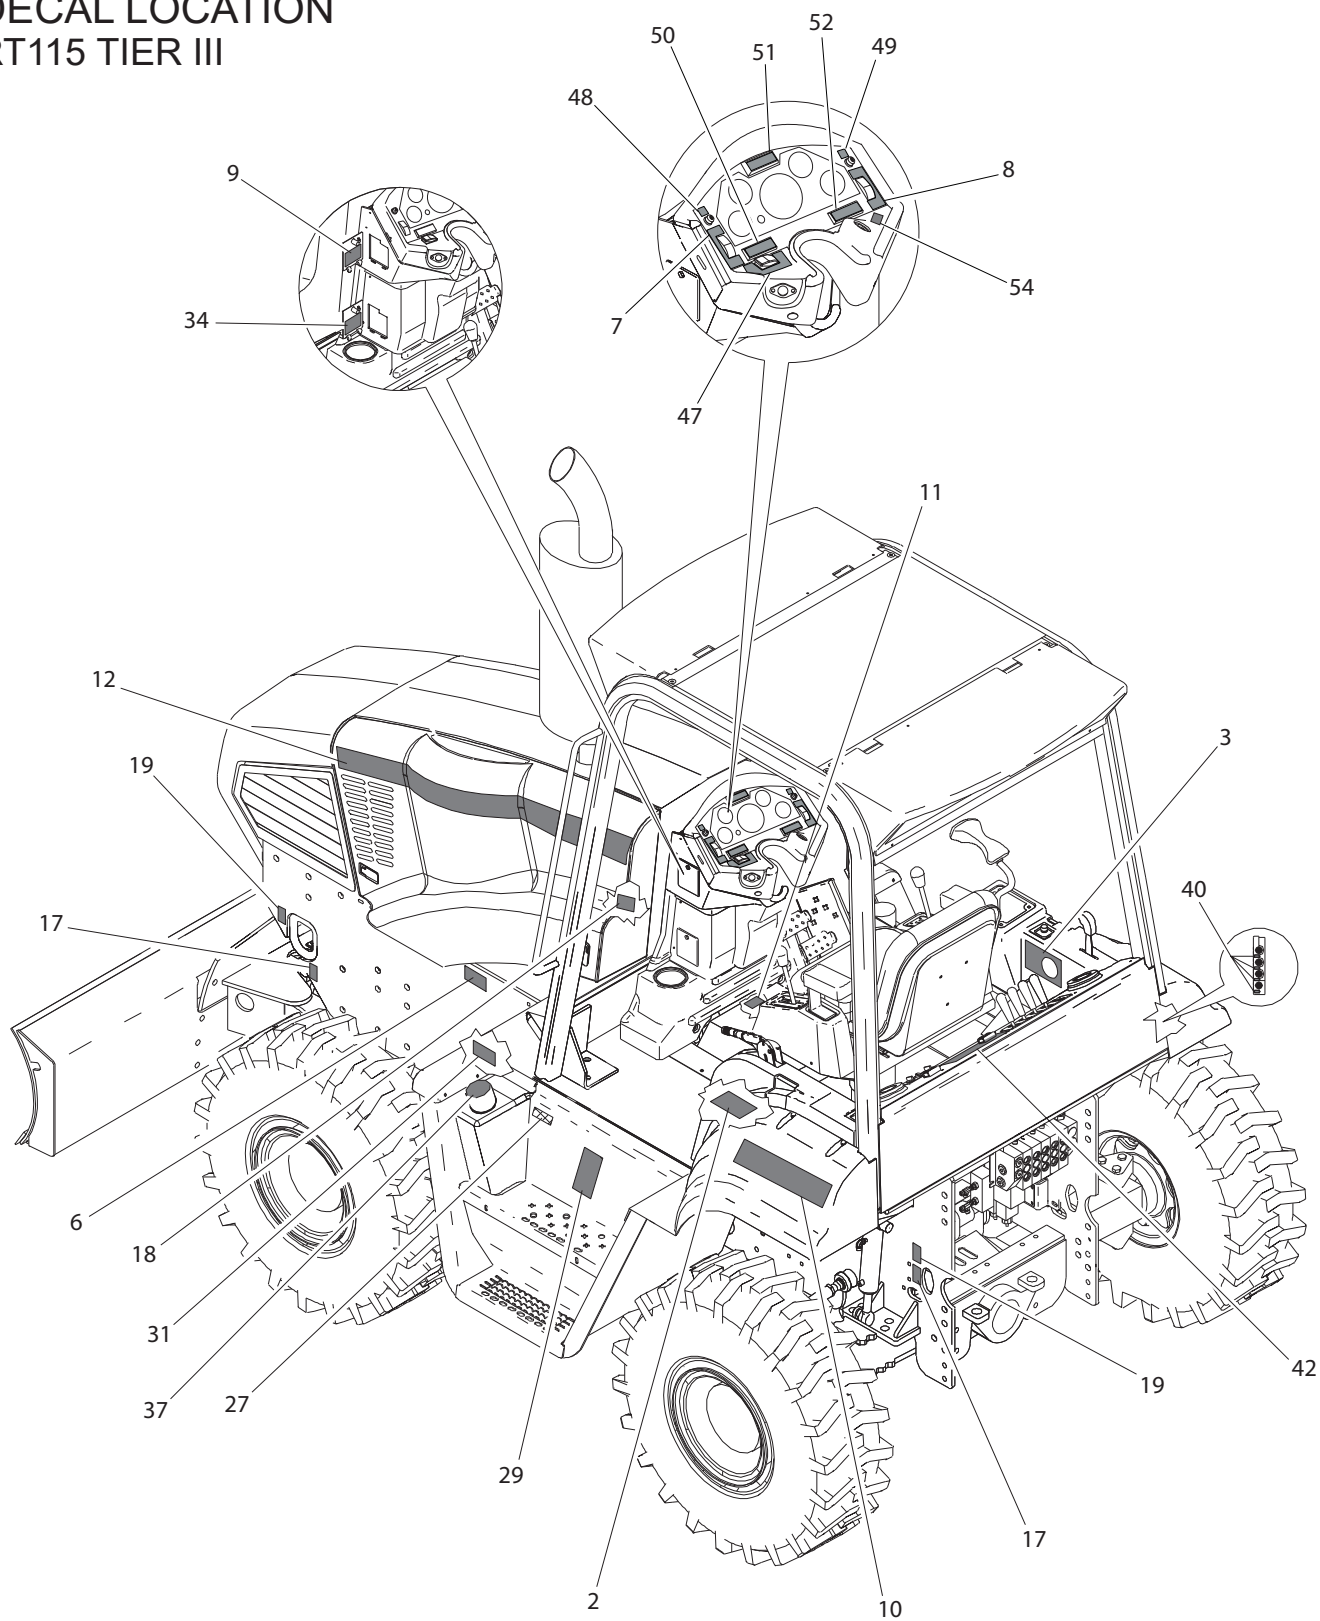

DECAL LOCATION RT115 TIER III

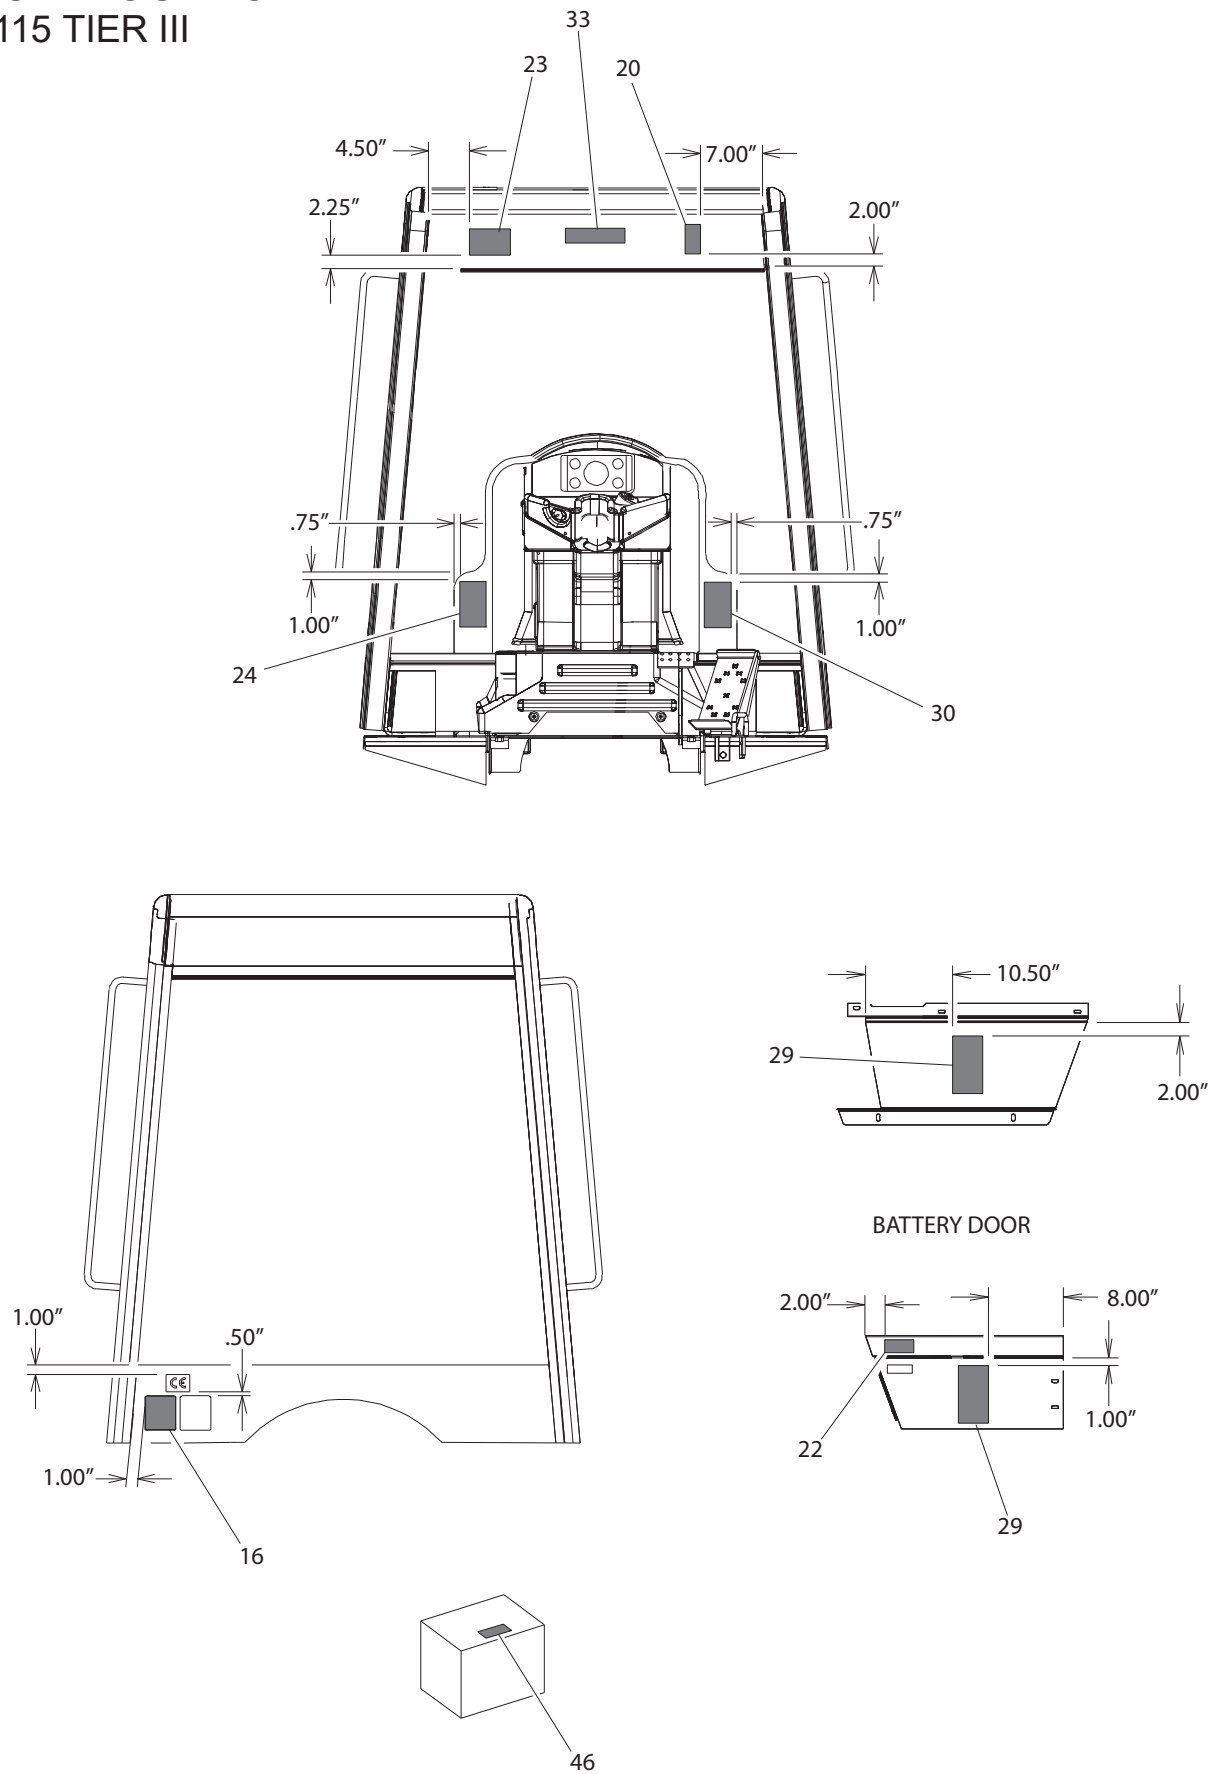

DECAL LOCATION

RT115 TIER III

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	270-2010		DECAL KIT - RT115 TIER III	
1	273-092	1	GROUND DRIVE CONTROL	
	700-151	1	GROUND DRIVE CONTROL	SEE FOOTNOTE 3
2	273-263	1	1 AND 2 SHIFT	
3	273-094	1	AXLE LOCK/AUXILIARY	
4	273-095	1	STEER/TILT/THROTTLE	
5	273-100	1	BFB FUNCTIONS	
6	275-400	1	NOTICE OIL LEVEL	
7	270-1865	1	REEL CARRIER	
8	270-1864	1	ROTATION DIRECTION	
9	273-454	1	FUSE PANEL	
10	270-1268	2	DITCH WITCH LOGOTYPE	
11	273-109	1	TEST PORTS	
12	700-126	1	LEFT RT115 MODEL ID	
13	700-127	1	RIGHT RT115 MODEL ID	
14	273-246	1	RIGID LOGO PLACARD	
15	273-455	1	LUBRICATION CHART	
16	274-291	1	SOUND POWER	SEE FOOTNOTE 1
17	274-318	4	TIE DOWN LOCATION	
18	274-375	1	MASTER DISCONNECT SWITCH	
19	274-442	4	LIFT LOCATION	
20	274-724	1	WARNING ONE CALL	
21	275-361	1	PARKING BRAKE	
22	275-033	1	NOTICE ELECTRICAL SYSTEM	
23	273-475	1	WARNING READ MANUAL	
24	275-070	1	WARNING RUNAWAY	
25	700-064	1	POWER BEYOND/RETURN/PRESSURE	
26	275-120	1	RESERVOIR (THF)	
27	275-148	1	FUEL TANK (DIESEL)	
28	273-452	1	NOTICE COOLANT	
29	275-185	2	WARNING SINGLE OPERATOR	
30	275-303	1	WARNING ROLLOVER	
31	275-497	1	OIL DRAIN-ID	
32	270-5127	1	BATTERY	
33	273-197	1	OVERHEAD CONSOLE	SEE FOOTNOTE 2
34	273-456	1	RELAY PANEL	
35	274-198	1	NOTICE OIL LEVEL	
36	273-457	1	DIAGNOSTIC GAUGE AND CONNECTION	
37	700-062	1	DIESEL FUEL CAP	
38	700-063	1	HYDRAULIC OIL CAP	
39	273-292	1	FRAME NOSE CASTING WEIGHT	
40	273-448	1	CAN MULTIPOINT MODULE	
41	273-459	1	WARNING NO ETHER/STARTER FLUID	
42	270-1934	1	CRUISE CONTROL	SEE FOOTNOTE 3
43	270-1681	1	PREHEAT SOLENOID	
44	274-206	1	WARNING NO ETHER/STARTER FLUID	
45	273-267	2	DITCH WITCH BATTERY	

FOOTNOTES

1. NOT PART OF KIT.
2. NOT PART OF KIT. SEE LIGHT KIT 601-329.
3. NOT PART OF KIT. SEE CRUISE CONTROL KIT 350-1921.

DECAL LOCATION

RT115 TIER III

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
46	273-458	I	EDT	SEE FOOTNOTE I
47	270-I866	I	GROUND DRIVE SPEED	
48	270-I863	I	IGNITION	
49	270-I862	I	HORN	
50	270-I539	I	LED DISPLAY	
51	270-I538	I	LED DISPLAY	
52	270-I540	I	LED DISPLAY	
53	270-4537	I	REAR STEER	
54	275-087	I	IGNITION SWITCH DECAL	

FOOTNOTES
I. NOT PART OF KIT.

NOTES:


[illegible]

ENGINE COMPONENTS

DEERE ENGINE

TIER 3

BEGINS WITH S/N: CMWR15T3EC0000257

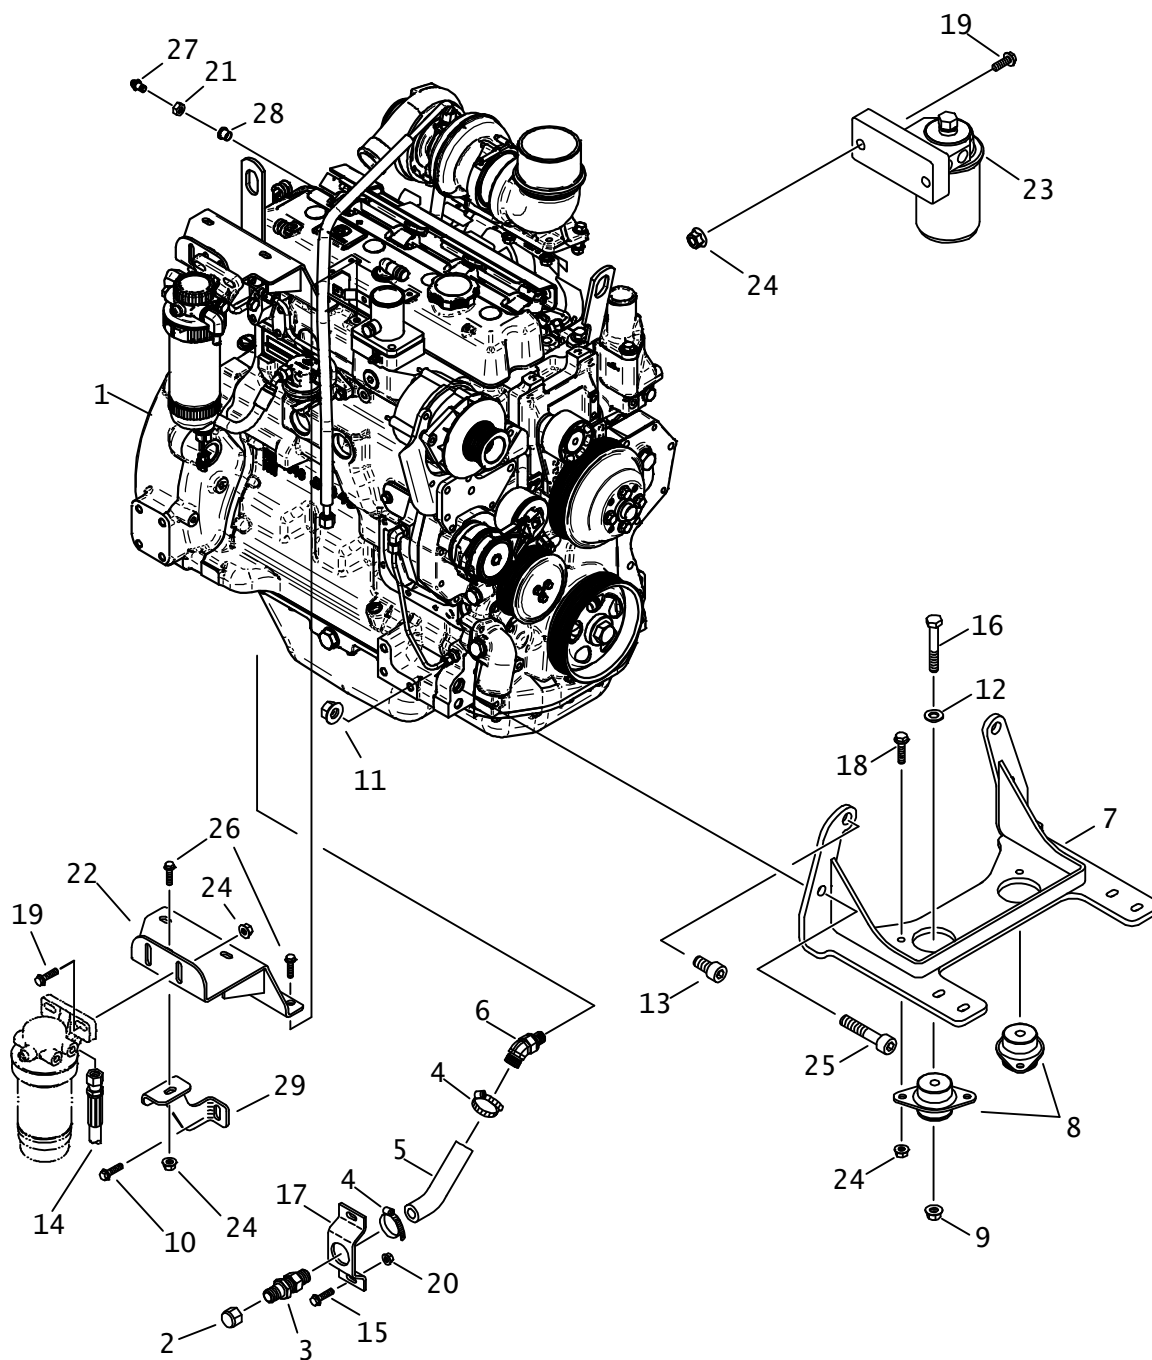

DEERE ENGINE

TIER 3

BEGINS WITH S/N: CMWR15T3EC0000257

REF	PART				
NO.	NUMBER	QTY	DESCRIPTION	REMARKS	
1.	195-1721	1	ENGINE-JOHN DEERE PE4045HF285(T3 FLEX)		
2.	154-324	1	CAP (100F)		
3.	149-624	1	BK S/O COUPLER (100-10H)		
4.	110-353	2	WORM CLAMP (3/4" TO 1-1/2")		
5.	116-044	AR	BULK HOSE (5/8", SOLD PER 1")	USE 1 @ 5.75"	
6.	153-160	1	S/O COUPER (18M-10H45)		
7.	337-369	1	FRONT ENGINE BRACKET		
8.	116-946	2	ENGINE SHOCK MOUNT	POSITION METAL FACE TO FRAME BOTTOM	
9.	106-709	2	FLG LK NUT (M12-1.75)		
10.	107-009	1	FLG LK SCREW (M12-1.75 X 25MM)		
11.	106-545	2	LOCKNUT (M16-2.0, PRV TRQ, 10.9)		
12.	105-475	2	WASHER (1/2")		
13.	106-643	2	SCREW (M16-2.00 X 25mm, SOC)		
14.	159-625	1	FUEL FILTER HOSE (060)	SEE FOOTNOTE 1	
15.	106-989	2	FLG LK SCREW (M8-1.25 X 35mm)		
16.	106-336	2	SCREW (M12-1.75 X 90mm)		
17.	310-599	1	MOUNT		
18.	107-001	4	FLG LK SCREW (M10-1.50 X 25mm)		
19.	107-002	4	FLG LK SCREW (M10-1.50 X 30mm)		
20.	106-386	2	FLG LOCKNUT (M8-1.25)		
21.	156-277	1	COMPRESSION NUT (05T)		
22.	323-634	1	FILTER MOUNT		
23.	194-478	-	ENGINE OIL FILTER		
24.	106-266	9	FLG NUT (M10-1.50)		
25.	107-723	2	SCREW (M16-2.00 X 70mm, SOC)		
26.	106-382	4	FLG LK SCREW (M10-1.5 X 20mm)		
27.	156-275	1	TUBE CONNECTOR (04H-05T)		
28.	156-276	1	FERRULE (05T)		
29.	323-365	1	FILTER MOUNT SUPPORT		

FOOTNOTES:

- I. REF # 14 (159-625) REQUIRES:
 I PIECE 70" & I PIECE 60" FOR RT SERIES
 I PIECE 82" & I PIECE 72" FOR HT 115


NOTE:

- I. REF NO'S 2 THRU 6, 10, 11, 12 & 14 THRU 29 ARE SUPPLIED WITH ENGINE (195-1087).

DEERE ENGINE

TIER 3

ENDS WITH S/N: CMWH15T3TB0000031 / CMWR15T3HC0000256

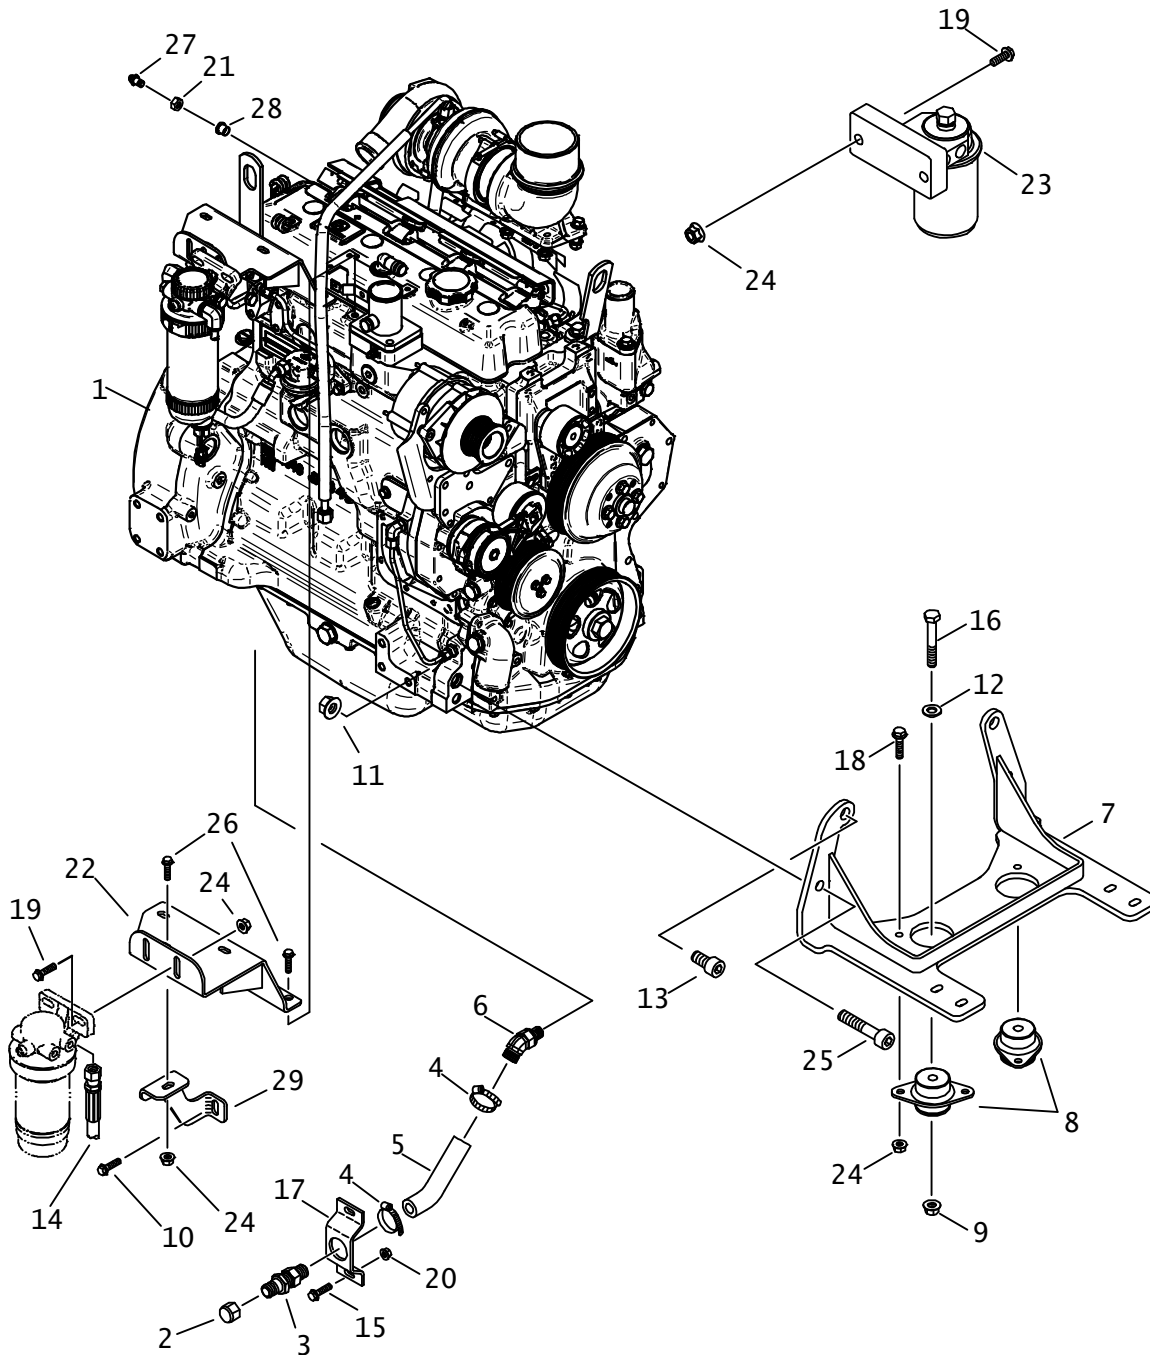

DEERE ENGINE TIER 3

ENDS WITH S/N: CMWH15T3TB0000031 / CMWR15T3HC0000256

REF	PART				
NO.	NUMBER	QTY	DESCRIPTION	REMARKS	
1.	195-1087	1	ENGINE-JD 4045 (TIER 3)		
2.	154-324	1	CAP (100F)		
3.	149-624	1	BK S/O COUPLER (100-10H)		
4.	110-353	2	WORM CLAMP (3/4" TO 1-1/2")		
5.	116-044	AR	BULK HOSE (5/8", SOLD PER 1")	USE 1 @ 5.75"	
6.	153-160	1	S/O COUPER (18M-10H45)		
7.	337-369	1	FRONT ENGINE BRACKET		
8.	116-946	2	ENGINE SHOCK MOUNT	POSITION METAL FACE TO FRAME BOTTOM	
9.	106-709	2	FLG LK NUT (M12-1.75)		
10.	107-009	1	FLG LK SCREW (M12-1.75 X 25MM)		
11.	106-545	2	LOCKNUT (M16-2.0, PRV TRQ, 10.9)		
12.	105-475	2	WASHER (1/2")		
13.	106-643	2	SCREW (M16-2.00 X 25mm, SOC)		
14.	159-625	1	FUEL FILTER HOSE (060)	SEE FOOTNOTE 1	
15.	106-989	2	FLG LK SCREW (M8-1.25 X 35mm)		
16.	106-336	2	SCREW (M12-1.75 X 90mm)		
17.	310-599	1	MOUNT		
18.	107-001	4	FLG LK SCREW (M10-1.50 X 25mm)		
19.	107-002	4	FLG LK SCREW (M10-1.50 X 30mm)		
20.	106-386	2	FLG LOCKNUT (M8-1.25)		
21.	156-277	1	COMPRESSION NUT (05T)		
22.	323-634	1	FILTER MOUNT		
23.	194-478	-	ENGINE OIL FILTER		
24.	106-266	9	FLG NUT (M10-1.50)		
25.	107-723	2	SCREW (M16-2.00 X 70mm, SOC)		
26.	106-382	4	FLG LK SCREW (M10-1.5 X 20mm)		
27.	156-275	1	TUBE CONNECTOR (04H-05T)		
28.	156-276	1	FERRULE (05T)		
29.	323-365	1	FILTER MOUNT SUPPORT		

FOOTNOTES:

- I. REF # 14 (159-625) REQUIRES:
 I PIECE 70" & I PIECE 60" FOR RT SERIES
 I PIECE 82" & I PIECE 72" FOR HT I15


NOTE:

- I. REF NO'S 2 THRU 6, 10, 11, 12 & 14 THRU 29 ARE SUPPLIED WITH ENGINE (195-1087).

DEERE ENGINE SERVICE PARTS

TIER 3

BEGINS WITH S/N: CMWR15T3EC0000257 / CMWR115QEC0000299

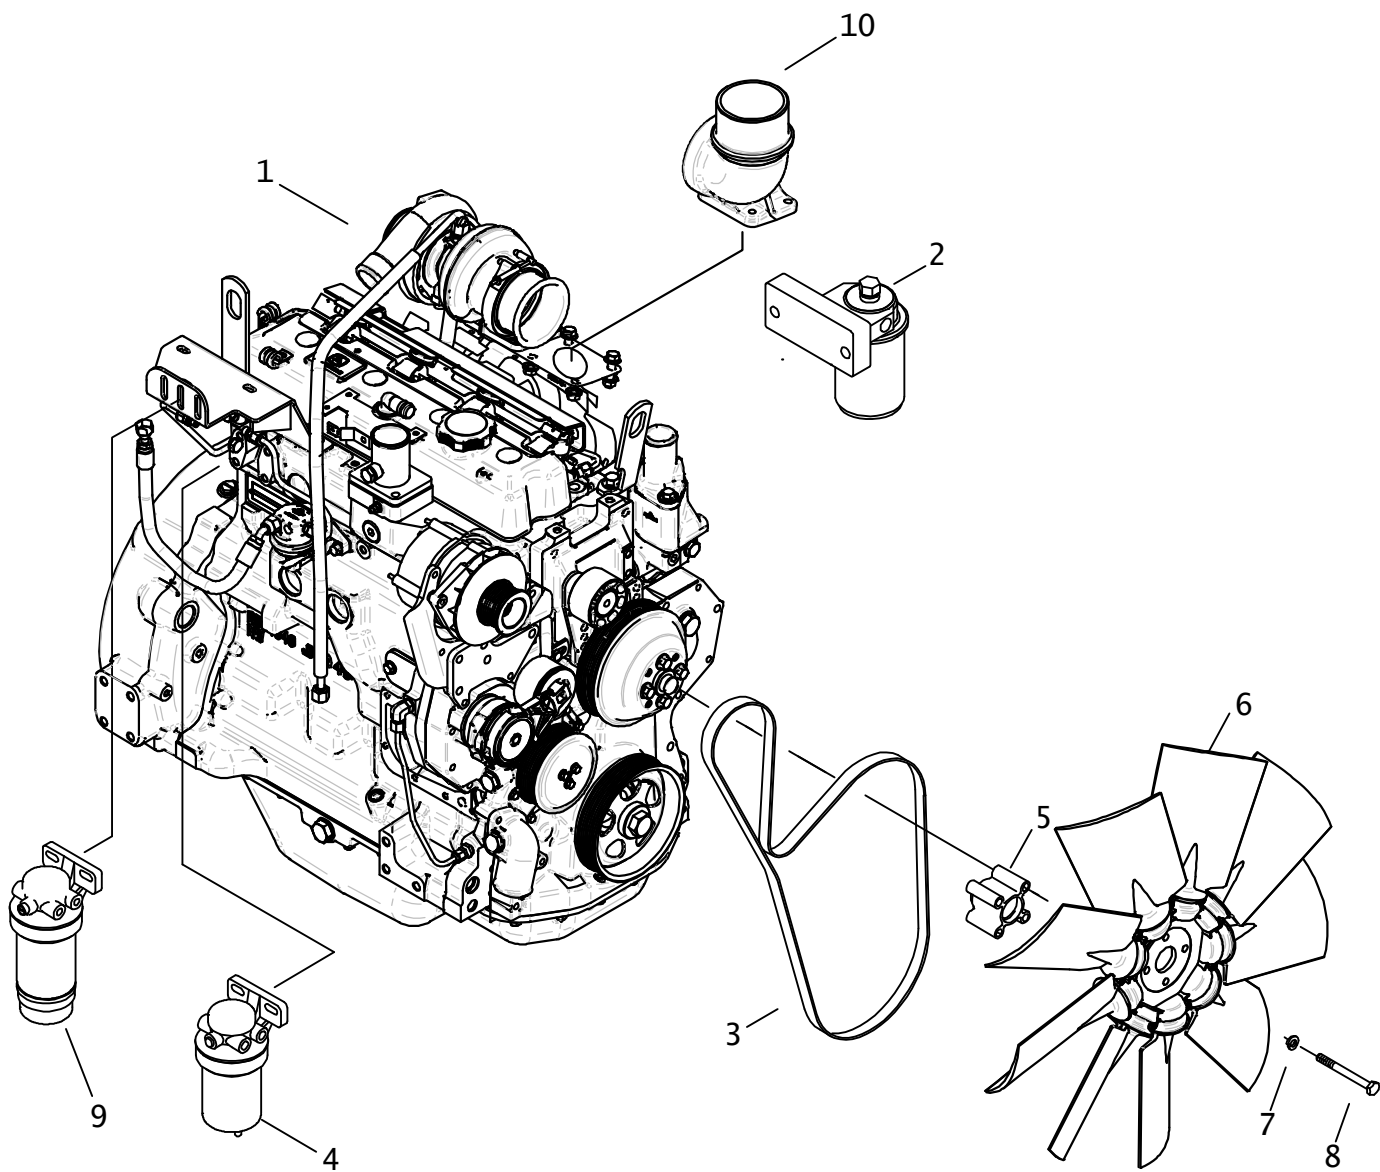

DEERE ENGINE SERVICE PARTS TIER 3

BEGINS WITH S/N: CMWR15T3EC0000257 / CMWR115QEC0000299

REF	PART				
NO.	NUMBER	QTY	DESCRIPTION	REMARKS	
1.	195-1721	-	ENGINE - JOHN DEERE PE4045HF285(T3 FLEX)		
2.	194-478	1	ENGINE OIL FILTER		
	499-944	-	OIL FILTER SEAL RING		
3.	195-1170	1	FAN BELT		
4.	195-1172	1	SECONDARY FUEL FILTER		
5.	194-052	1	FAN SPACER		
6.	195-1116	1	24 DIA PULLER FAN		
7.	106-090	4	LOCK WASHER (M10)		
8.	106-564	4	SCREW (M10-1.50 X 100mm)		
9.	195-2635	1	FILTER, PRIMARY FUEL	SUPERSEDED 195-1171	
10.	500-1198	1	ELBOW, TURBOW EXHAUST (T3)		

NOT SHOWN:

053-1115	I	JOHN DEERE TIER III OPER MANUAL
194-254	I	STARTER
195-1173	I	THERMOSTAT
195-1174	I	GASKET, THERMOSTAT
213-080	2	WHEEL SPEED SENSOR
213-081	I	COOLANT TEMPERATURE SENSOR
195-1175	I	ENGINE HEAD TEMPERATURE SENSOR
159-586	-	SPEED SENSOR O-RING
195-1176	I	OIL PRESSURE SENSOR
195-1177	I	DIODE HARNESS


FOOTNOTES:

NOTE:

DEERE ENGINE SERVICE PARTS

TIER 3

ENDS WITH S/N: CMWH15T3TB0000031 / CMWR15T3HC0000256

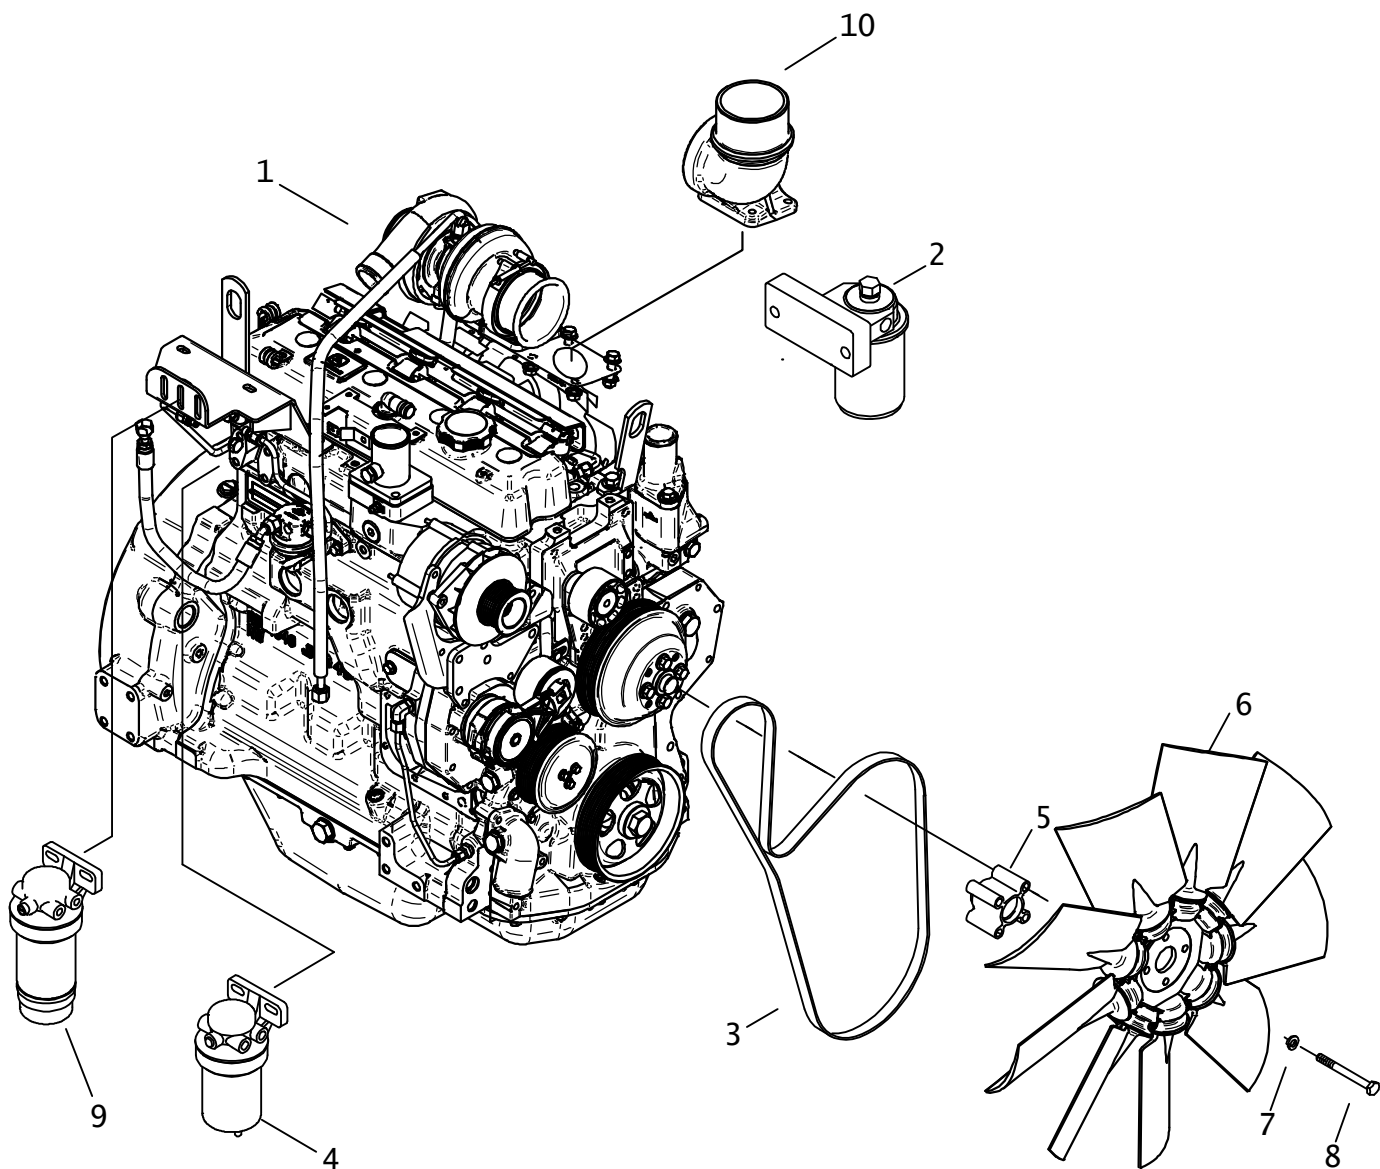

DEERE ENGINE SERVICE PARTS

TIER 3

ENDS WITH S/N: CMWH15T3TB0000031 / CMWR15T3HC0000256

REF	PART				
NO.	NUMBER	QTY	DESCRIPTION		REMARKS
1.	195-1087	-	ENGINE PE4045HF285 JD		
2.	194-478	1	ENGINE OIL FILTER		
	499-944	-	OIL FILTER SEAL RING		
3.	195-1170	1	FAN BELT		
4.	195-1172	1	SECONDARY FUEL FILTER		
5.	194-052	1	FAN SPACER		
6.	195-1116	1	24 DIA PULLER FAN		
7.	106-090	4	LOCK WASHER (M10)		
8.	106-564	4	SCREW (M10-1.50 X 100mm)		
9.	195-1171	1	PRIMARY FUEL FILTER ELEMENT		
10.	500-1198	1	ELBOW, TURBOW EXHAUST (T3)		


NOT SHOWN:

053-1115	I	JOHN DEERE TIER III OPER MANUAL
194-254	I	STARTER
195-1173	I	THERMOSTAT
195-1174	I	GASKET, THERMOSTAT
213-080	2	WHEEL SPEED SENSOR
213-081	I	COOLANT TEMPERATURE SENSOR
195-1175	I	ENGINE HEAD TEMPERATURE SENSOR
159-586	-	SPEED SENSOR O-RING
195-1176	I	OIL PRESSURE SENSOR
195-1177	I	DIODE HARNESS

FOOTNOTES:

NOTE:

REAR ENGINE SUPPORT

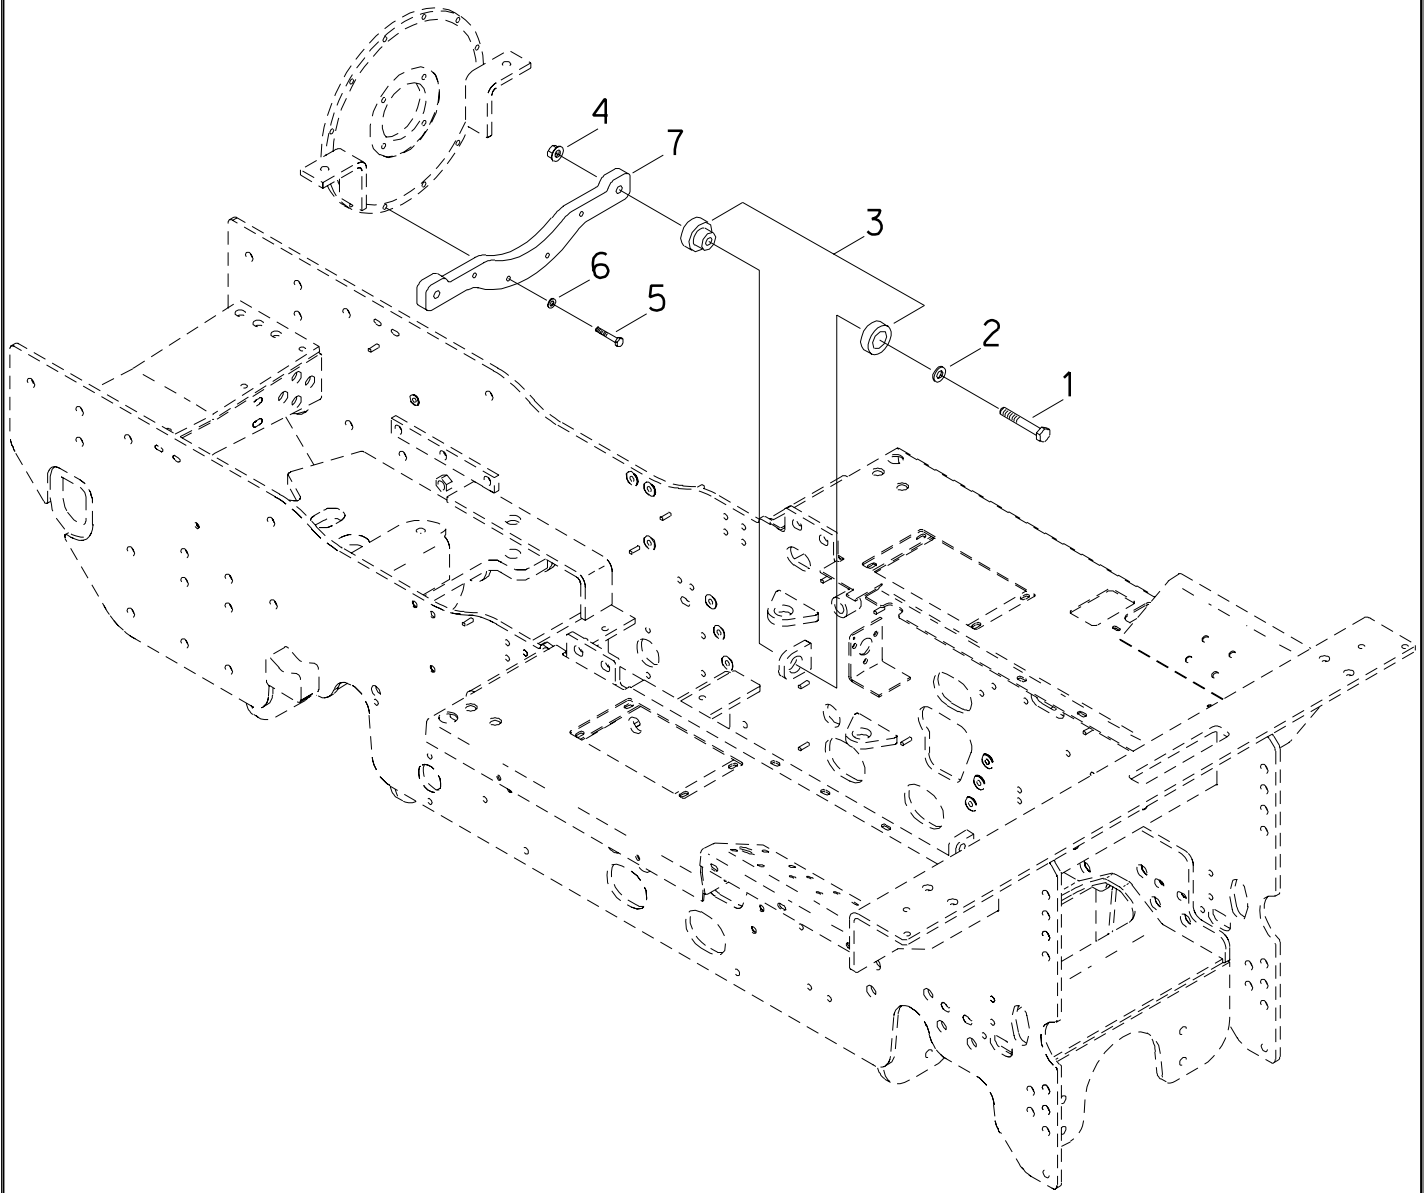


REAR ENGINE SUPPORT

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	191-132		REAR ENGINE SUPPORT KIT	INCLUDES REF. NO'S 1 THRU 7
1.	105-386	2	BOLT (5/8-NC X 4-1/2")	
2.	105-416	2	WASHER (5/8")	
3.	116-151	2	SHOCK MOUNT	
4.	105-994	2	FLG LOCKNUT (5/8-NC)	
5.	105-839	4	SCREW (M10-1.50 X 55mm)	
6.	106-396	4	WASHER (M10, HARDENED)	
7.	313-646	1	BUMPER PLATE	

FOOTNOTES

1. REQUIRED OPTION FOR SAW ATTACHMENTS

MUFFLER AND AIR FILTER

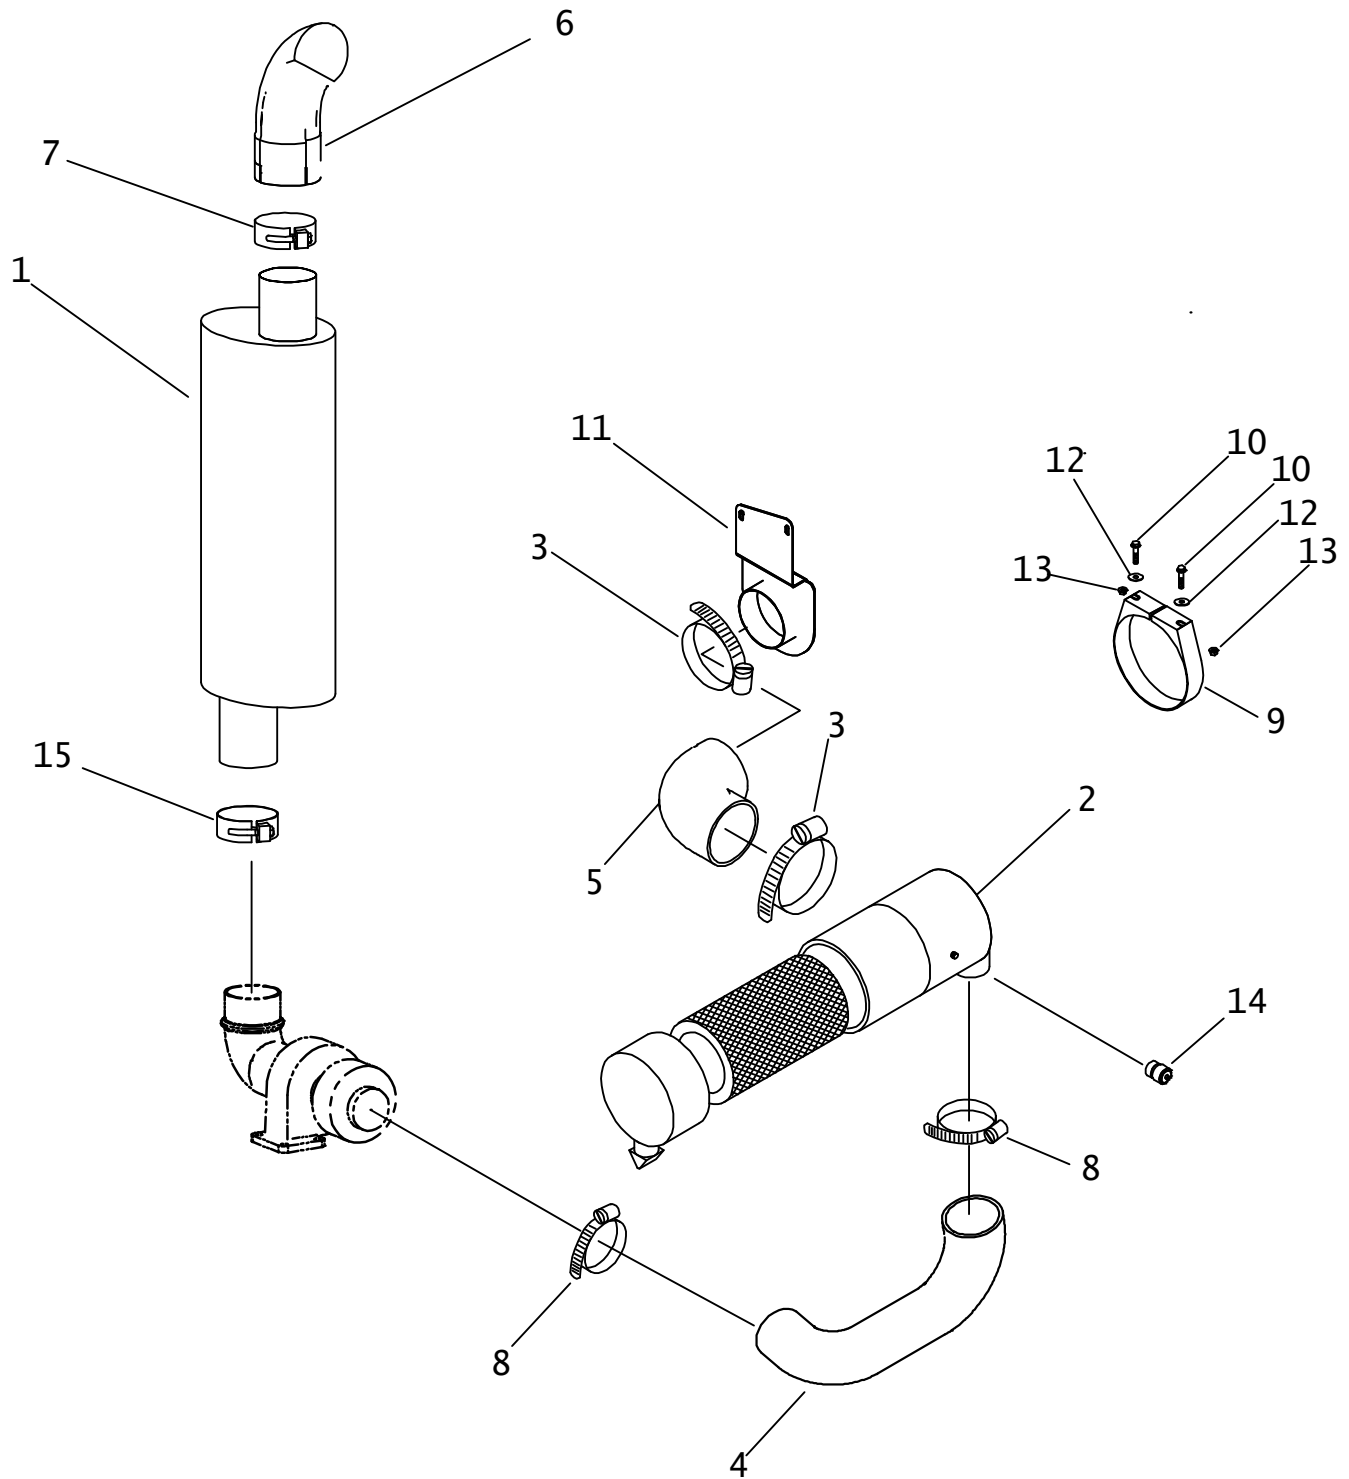

MUFFLER AND AIR FILTER


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	194-201	1	MUFFLER	
2.	194-121	1	AIR CLEANER	
	194-147	1	ELEMENT (PRIMARY)	
	194-148	1	ELEMENT (SECONDARY)	
	500-2305		COVER ASSEMBLY	
3.	110-170	2	WORM CLAMP (4-1/8" TO 5")	
4.	195-1110	1	ELBOW HOSE (3.000" X 3.500")	
5.	117-852	1	INTAKE ELBOW (4.5")	
6.	196-351	1	EXHAUST TUBE (4" X 12")	
7.	194-027	1	MUFFLER CLAMP (4.143")	
8.	110-367	2	WORM CLAMP (3-1/4" TO 4-1/8")	
9.	309-877	1	MOUNTING BAND (9.330")	
10.	106-989	2	FLG LK SCREW (M8-1.25 X 35mm)	
11.	320-175	1	INLET MOUNT	
12.	105-223	2	WASHER (3/8")	
13.	106-386	2	FLG LOCKNUT (M8-1.25)	
14.	194-788	1	RESTRICTION INDICATOR (25"H2O)	
15.	111-138	1	MUFFLER CLAMP (3.59" TO 4.06")	

NOT SHOWN:

FOOTNOTES:

NOTE:

MUFFLER GUARD KIT (RT/HT115 & RT95)

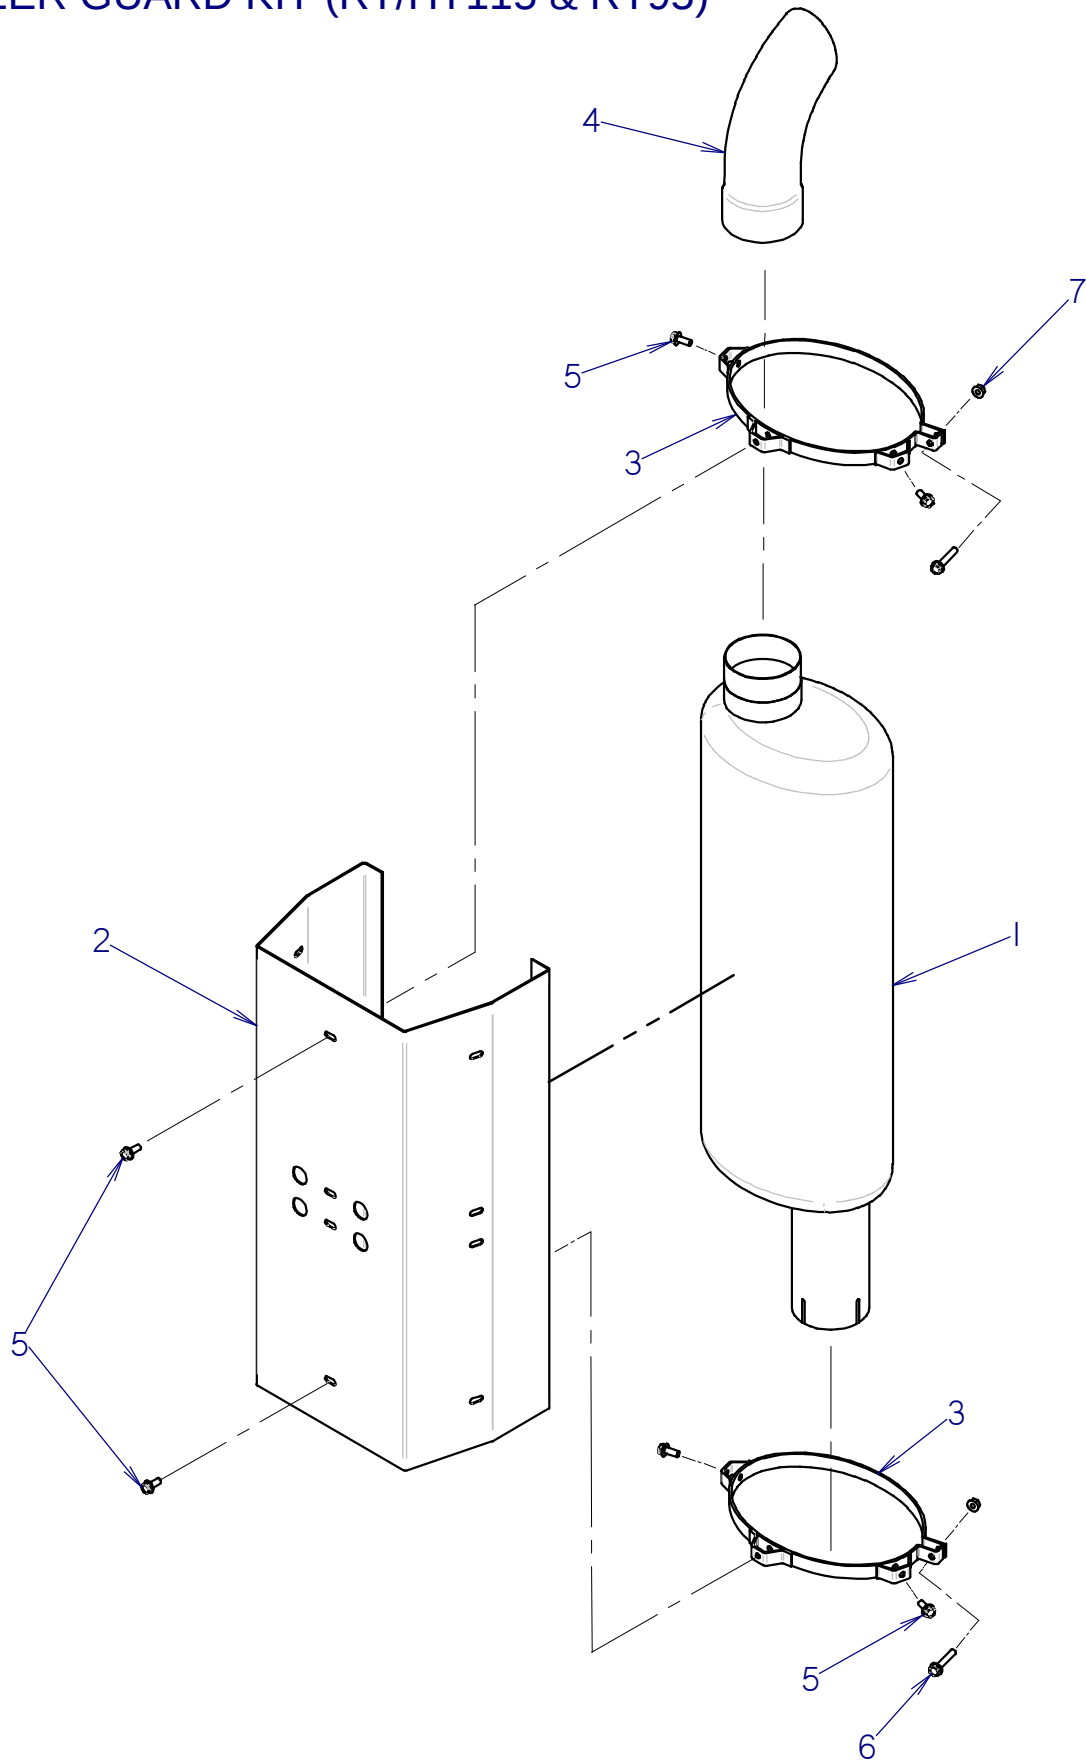

MUFFLER GUARD KIT (RT/HT115 & RT95)


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	191-308		MUFFLER GUARD KIT (RT115)	INCLUDES REF. NO'S 2 & 3
1	194-201	1	MUFFLER	
2	320-491	1	MUFFLER GUARD	
3	111-136	2	MOUNTING CLAMP	INCLUDES REF. NO'S 5, 6 & 7 SEE FOOTNOTE 1
4	196-351	1	EXHAUST TUBE (4" X 12")	
5	105-823	6	FLG LK BOLT (5/16-NC X 3/4")	
6	105-562	2	FLG BOLT (5/16-NC X 1-3/4")	
7	105-003	2	FLG LOCKNUT (5/16-NC)	

FOOTNOTES

- I. MOUNTING CLAMP NEEDS TO BE SHAPED TO FIT MUFFLER.

NOTE:

MUFFLER SUPPORT RT115 TIER 3

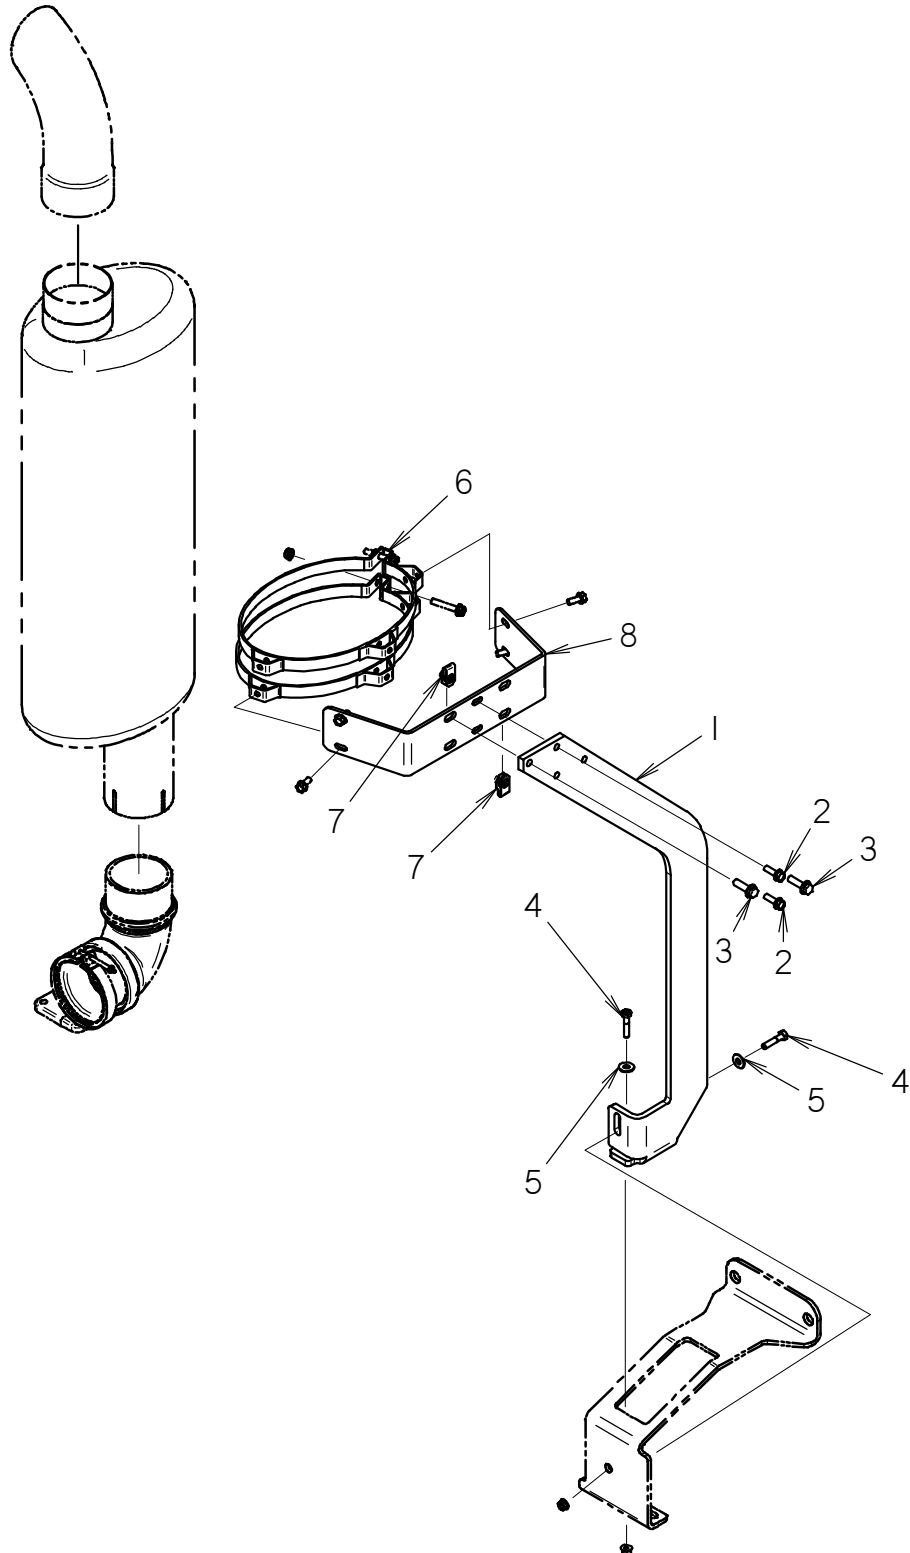

MUFFLER SUPPORT

RT115 TIER 3


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	190-1185		MUFFLER SUPPORT KIT	INCLUDES REF NO'S 1-8
1	300-4460	1	MUFFLER SUPPORT	
2	105-873	2	FLG LK BOLT (5/16-NC X 1")	
3	105-827	2	FLG LK BOLT (3/8-NC X 1-1/4")	
4	105-109	2	BOLT (5/16-NC X 1-1/2")	
5	105-117	2	WASHER (5/16")	
6	111-136	1	MOUNTING CLAMP	
7	106-719	2	CLIP NUT (3/8-NC)	
8	320-932	1	MUFFLER MOUNT PLATE	

NOT SHOWN:

FOOTNOTES:

NOTE:

RADIATOR/OIL COOLER RT115 T3

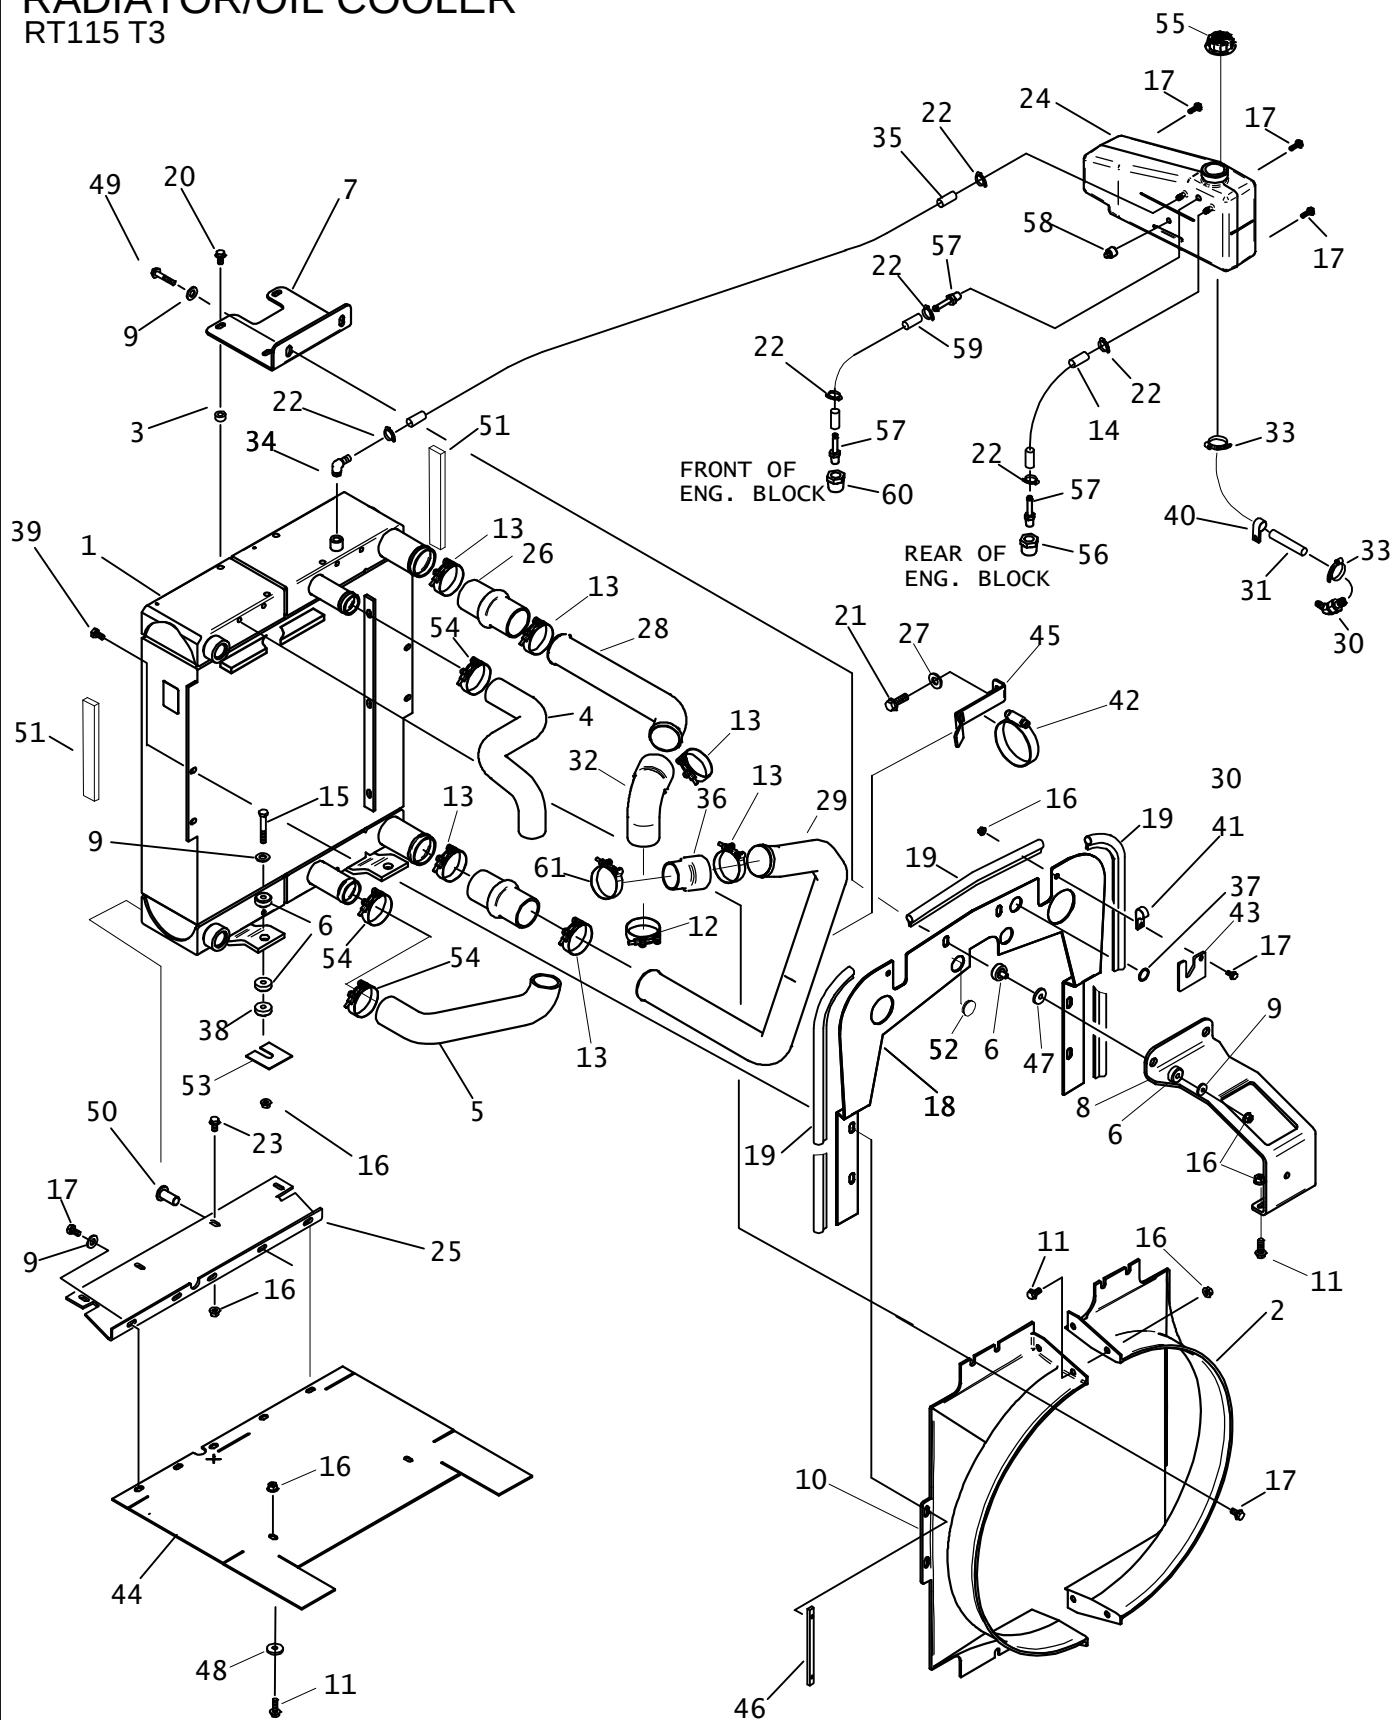

RADIATOR/OIL COOLER

RT115 T3

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	195-1115	1	RADIATOR/OIL COOLER TIER 3 RTH	
2.	362-1208	1	FAN SHROUD LH	
3.	184-317	4	ENGINE MOUNT SPACER	
4.	195-1112	1	UPPER RADIATOR HOSE	
5.	195-1111	1	LOWER RADIATOR HOSE	
6.	116-128	4	SHOCK MOUNT	
7.	300-4469	1	FRONT SUPPORT	
8.	300-4456	1	RADIATOR MOUNT	
9.	105-118	10	WASHER (3/8")	
10.	362-1209	1	FAN SHROUD RH	
11.	107-001	8	FLG LK SCREW (M10-1.50 X 25mm)	
12.	110-815	2	T-BOLT CLAMP (2.5")	
13.	111-135	6	T-BOLT CLAMP (2.88")	
14.	116-108	AR	BULK HOSE (5/16", SOLD PER 1')	USE 1 @ 33"
15.	106-998	2	FLG LK SCREW (M10-1.50 X 70mm)	
16.	106-266	16	FLG NUT (M10-1.50)	
17.	106-999	15	FLG LK SCREW (M10-1.50 X 20mm)	
18.	362-1090	1	BARRIER	
19.	116-421	AR	BULK EDGE (1/8", SOLD PER 1')	USE 71", SEE FOOTNOTE 2
20.	106-497	4	FLG SCREW (M10-1.50 X 35mm)	
21.	106-382	1	FLG LK SCREW (M10-1.50 X 20mm)	
22.	110-249	3	WORM CLAMP (1/4" X 5/8")	
23.	107-002	4	FLG LK SCREW (M10-1.50 X 30mm)	
24.	364-703	1	PRESSURE TANK	INCLUDES CAP, SEE NOT SHOWN FOR SERVICE PARTS
25.	362-1242	1	AIR BARRIER	
26.	159-551	2	HUMP HOSE	
27.	106-396	1	WASHER (M10 HARDENED)	
28.	195-1113	1	CAC UPPER	
29.	195-1114	1	CAC LOWER	
30.	153-160	1	S/O COUPLER (18M-10H45)	SEE FOOTNOTE 1
31.	116-750	AR	BULK HOSE (5/8", SOLD PER 1')	USE 1 @ 27"
32.	195-1122	1	SILICONE REDUCER	
33.	110-217	2	WORM CLAMP (7/16" TO 1")	
34.	155-164	1	S/O COUPLER (04N-05H90)	
35.	116-108	AR	BULK HOSE (5/16", SOLD PER 1')	USE 1 @ 12"
36.	157-812	1	HOSE (2" - 2.5")	

NOT SHOWN:

500-2454	2	GROMMET
500-2455	2	5/16" HOSE BARB

FOOTNOTES:

- CONNECTS INTO ENGINE WATER PUMP
- REF 19 (116-421) USES:
 - 1 @ 15"
 - 2 @ 17"
 - 2 @ 10"
 - 2 @ 1"

NOTE:

RADIATOR/OIL COOLER

RT115 T3

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
37.	502-046	1	GROMMET (3/4")	
38.	179-608	2	SPACER	
39.	106-992	4	FLG LK SCREW (M8-1.25 X 25mm)	
40.	110-333	1	BOLT-ON CLAMP (1")	
41.	110-259	2	BOLT-ON CLAMP (.625")	
42.	110-331	1	WORM CLAMP (1-5/16" TO 3-1/4")	USE 2 @ 22.5"
43.	117-819	2	FLAP	
44.	362-1243	1	AIR BARRIER	
45.	300-7172	1	TUBE BRACE	USE 2 @ 29"
46.	111-134	2	BOLT CLAMP	
47.	105-975	2	WASHER (3/4")	
48.	105-884	6	WASHER (.531")	
49.	106-997	2	FLG LK SCREW (M10-1.50 X 60MM)	
50.	105-1295	1	SOCKET HEAD CAP SCREW	
51.	117-888	AR	BULK STRIP (1/2", SOLD PER 1")	USE 2 @ 12"
52.	157-429	2	HOLE PLUG (1.125")	
53.	331-555	AR	SHIM	
54.	110-134	4	T-BOLT CLAMP (2.50")	
55.	362-1236	1	PRESSURE CAP	INCLUDED WITH REF NO. 24, PRESSURE TANK
56.	115-286	1	REDUCER (08N-1/4-NF)	
57.	155-162	3	S/O COUPLER (04N-05H)	
58.	105-1201	1	PLUG (M12-1.0)	
59.	116-108	AR	BULK HOSE (5/16, SOLD PER 1")	USE 1 @ 23"
60.	514-442	1	P-SEAL ADPT (1/8-NPTFMXM10-1.M)	
61.	105-1234	1	T-BOLT CLAMP (2.00" TO 2.31")	

NOT SHOWN:

FOOTNOTES:

NOTE:


NOTES:

[illegible]

POWER TRAIN

GROUND DRIVE TRANSMISSION MOUNT

RT90/RT95/RT115

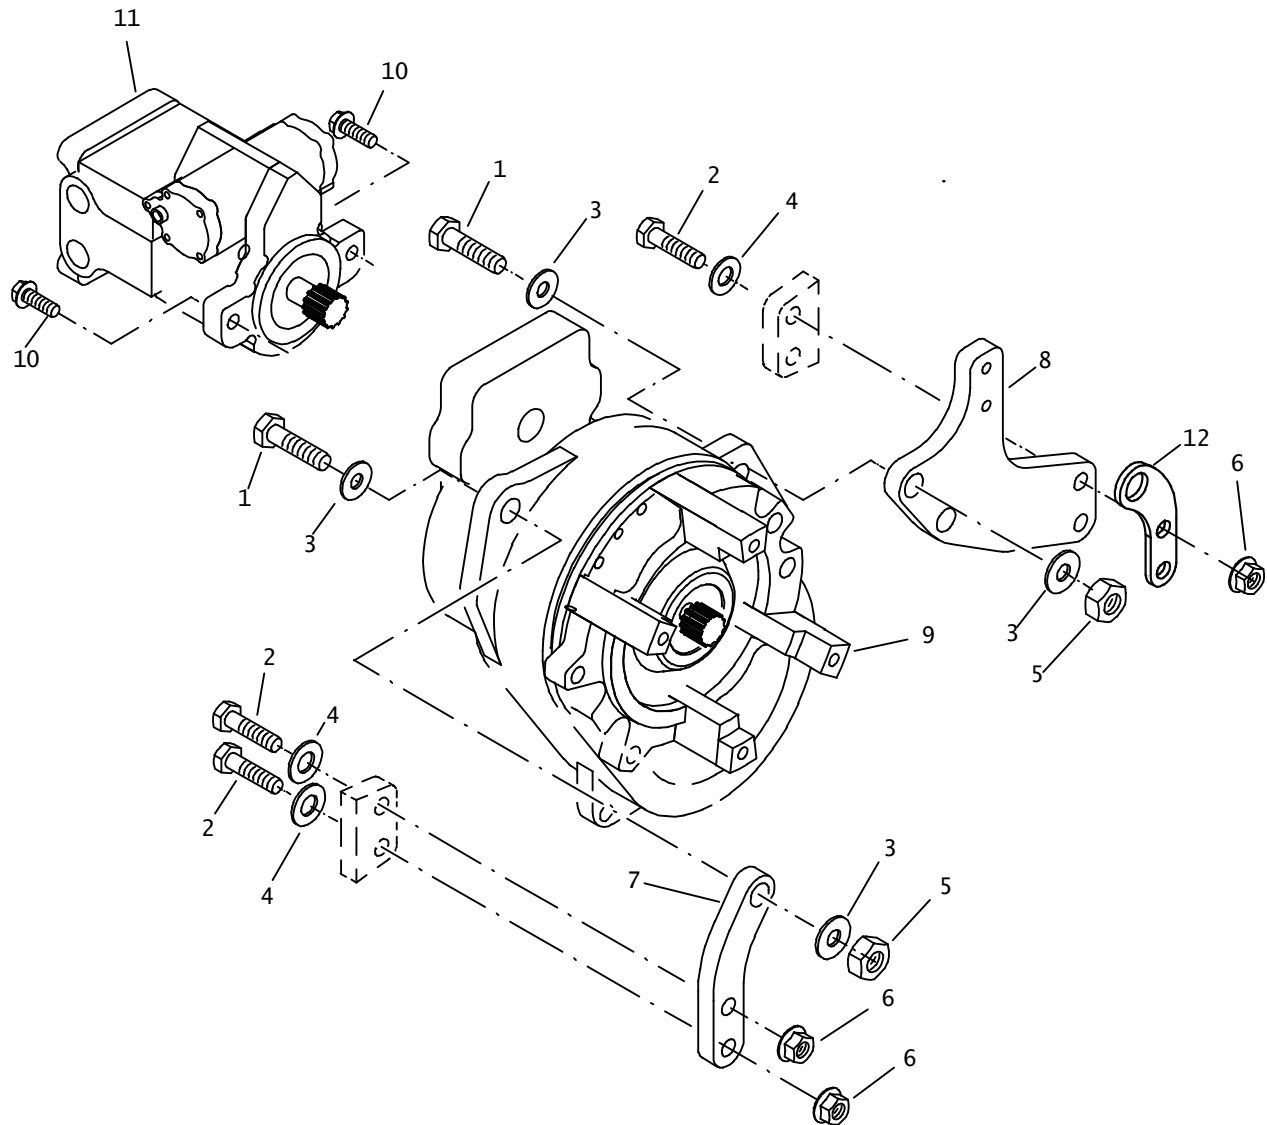

GROUND DRIVE TRANSMISSION MOUNT

RT90/RT95/RT115


REF	PART				
NO.	NUMBER	QTY	DESCRIPTION	REMARKS	
1.	106-346	3	SCREW (M20-2.50 X 70mm)		
2.	106-666	4	SCREW (M16-2.00 X 65mm, 10.9)		
3.	106-399	6	WASHER (M20, HARDENED)		
4.	106-398	8	WASHER (M16, HARDENED)		
5.	106-665	3	LOCKNUT (M20-2.50, 10.9)		
6.	106-442	4	FLG LOCKNUT (M16-2.00, PRV TRQ)		
7.	306-969	1	RIGHT MOUNT BRACKET		
8.	306-938	1	LEFT MOUNT BRACKET		
9.	166-313	1	GROUND DRIVE TRANSMISSION		
10.	106-469	2	FLG SCREW (M12-1.75 X 30mm)		
11.	<u>153-081</u>	1	HYDRAULIC MOTOR		
	157-359	1	HYDRAULIC MOTOR		
12.	316-822	1	RETURN BRACKET		
				REFER TO PARTS PAGE "PUMP DRIVE HYDRAULICS"	

NOT SHOWN:

FOOTNOTES:

NOTE:

MANUAL SHIFT TRANSMISSION

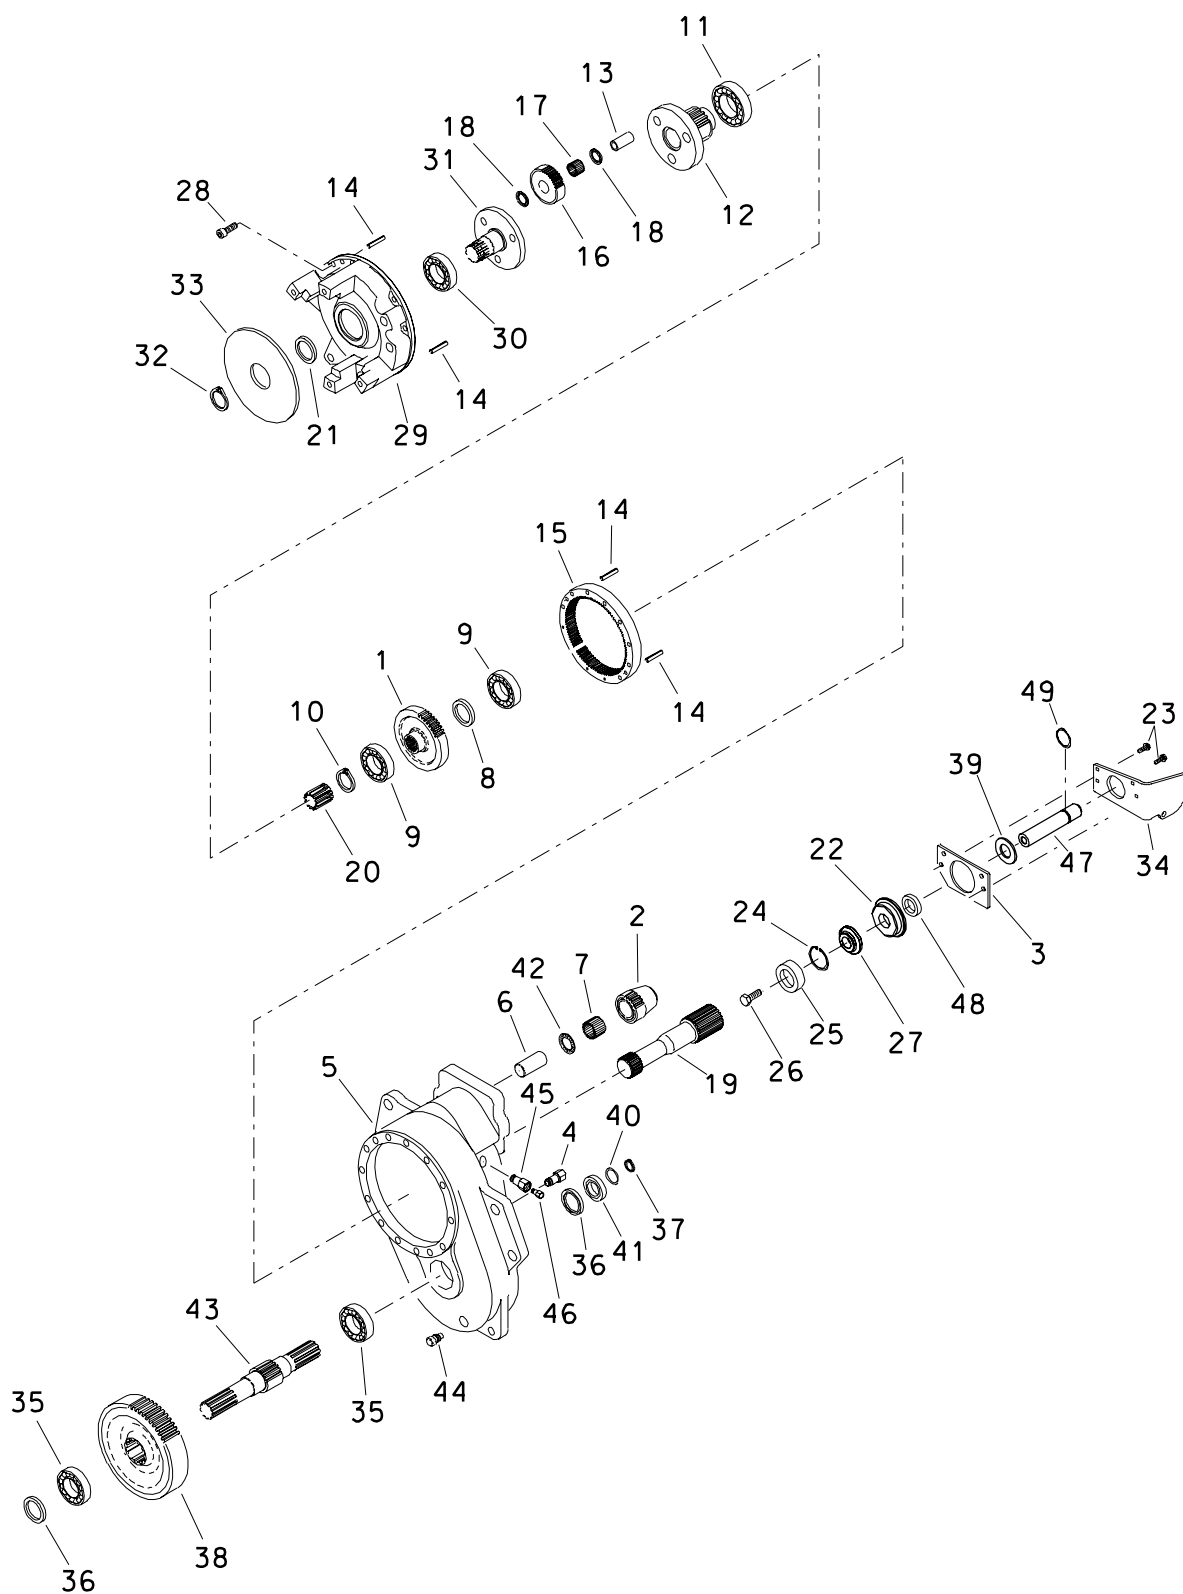

MANUAL SHIFT TRANSMISSION

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
27.	184-069	1	KEEPER	
	105-115	1	JAM NUT (5/16-NF)	
28.	107-238	8	SCREW (M10-1.5 X 50mm, SOC)	
29.	166-312	1	TRANSMISSION CAP	
30.	125-040	1	BALL BEARING (1.968")	
31.	169-039	1	BRAKE OUTPUT FLANGE	
32.	115-456	1	EXTERNAL SNAP RING (1.750")	
33.	163-092	1	BRAKE DISC	
34.	307-563	1	SHIFT MOUNT	
35.	125-107	2	BALL BEARING (1.574")	
36.	157-609	2	INTERNAL SEAL	
37.	118-022	1	INTERNAL SNAP RING (3.150")	
38.	165-147	1	OUTPUT GEAR	
39.	326-060	1	WASHER (3/4")	
40.	155-795	1	O-RING (233 D70)	
41.	184-214	1	SEAL RETAINER	
42.	126-059	1	BEARING RACE (1.375")	
43.	167-181	1	OUTPUT SHAFT	
44.	115-211	1	PLUG (Ø8N, SQ, MAG)	
45.	115-127	1	REDUCER (Ø8N-Ø2NF)	
46.	159-003	1	AIR VENT (Ø2N)	
47.	183-643	1	SHIFTER SHAFT	
48.	155-878	1	INTERNAL SEAL (.750")	
49.	115-545	1	EXTERNAL SNAP RING (.75")	


FOOTNOTES

MANUAL SHIFT TRANSMISSION

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	166-313		GROUND DRIVE TRANS.	
1.	166-295	1	INPUT GEAR	
2.	166-294	1	INPUT PINION	
3.	331-386	1	SPACER PLATE	
4.	115-178	1	PLUG (06N, SQ FM)	
5.	164-014	1	TRANSMISSION HOUSING	
6.	167-180	1	SHAFT	
7.	126-031	1	NEEDLE BEARING (1.375")	
8.	184-215	1	SPACER	
9.	125-091	2	BALL BEARING (2.165")	
10.	115-525	1	INTERNAL SNAP RING (3.543")	
11.	125-073	1	BALL BEARING (2.362")	
12.	166-080	1	OUTPUT PINION	
13.	183-749	3	PLANET PIN	
14.	105-534	4	DOWEL PIN (.375"X.875")	
15.	165-149	1	RING GEAR	
16.	165-145	3	PLANET GEAR	
17.	126-065	3	BEARING (NEEDLE ROLLER)	
18.	126-009	6	THRUST WASHER RACE (1.000")	
19.	166-279	1	INPUT SHAFT	
20.	165-152	1	SPLINED SLEEVE	
21.	157-552	1	INTERNAL SEAL (1.969")	
22.	184-815	1	SEAL SLEEVE	
23.	106-379	4	FL LK SCREW (M6-1.00 X 20mm)	
24.	115-544	1	INTERNAL SNAP RING (1.188")	
25.	125-119	1	BALL BEARING (.393")	
26.	107-068	1	BOLT (3/8-NF x 1-1/2")	USE LOCTITE 680

FOOTNOTES

DIFFERENTIAL RT90/RT95/RT115

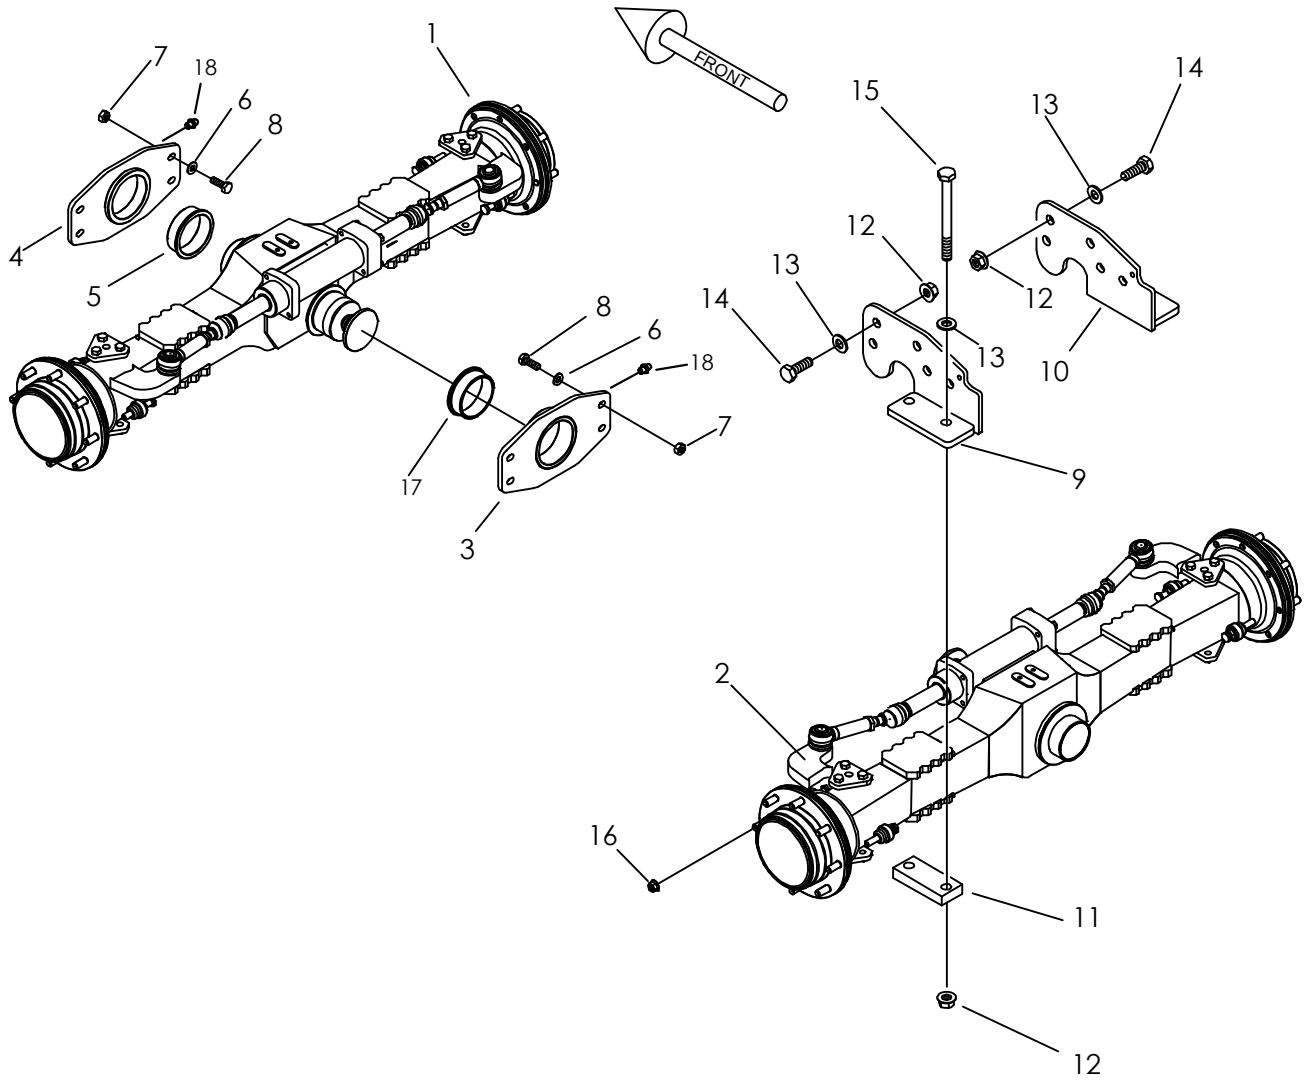

DIFFERENTIAL RT90/RT95/RT115


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	160-455	1	STEERABLE AXLE (26.22)	QTY. OF 2 WITH REAR STEER, SEE NOT SHOWN FOR SERVICE PART KIT
2.	160-456	1	RIGID PLANETARY AXLE (28,22)	
	160-455	-	STEERABLE AXLE (26.22)	SEE NOT SHOWN FOR SERVICE PART KIT
3.	301-4122	1	AXLE MOUNT, OPEN	
4.	301-4121	1	AXLE MOUNT, CLOSED	
5.	178-1003	1	OUTSIDE BUSHING (4.928" ID, 5.500" OD)	
6.	106-398	8	WASHER (M16, HARDENED)	
7.	106-355	8	FLG NUT (M16-2.00, 10.9)	
8.	106-616	8	SCREW (M16-2.00 X 55mm, 10.9)	
9.	306-896	1	LEFT AXLE MOUNT	
10.	307-280	1	RIGHT AXLE MOUNT	
11.	307-303	2	CLAMP PLATE	
12.	106-489	14	FLG NUT (M24-3.00, 10.9)	
13.	106-625	14	WASHER (M24)	
14.	107-152	10	SCREW (M24-3.00 X 80mm, 10.9)	
15.	107-089	4	SCREW (M24-3.00 X 260mm, 10.9)	USE LOCTITE 609 OR EQUIVALENT
16.	499-521	32	LUG NUT (M20-1.50)	
17.	178-1004	1	INSIDE BUSHING (4.928" ID, 5.500 OD)	
18.	115-003	2	ZERK (1/4-NF, STR)	

NOT SHOWN:
500-1221 DIFFERENTIAL KIT

FOOTNOTES:

NOTE:

AXLE-
AXLE HOUSING
RIGID

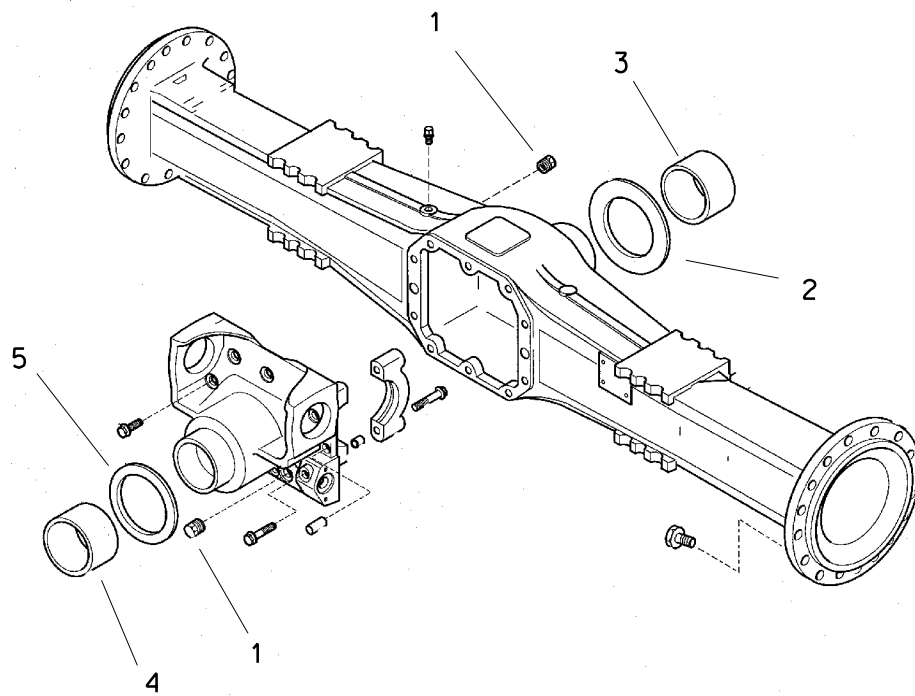


AXLE - AXLE HOUSING RIGID

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	514-345	2	PLUG (M22-1.50, SOC)	
2.	499-461	1	THRUST WASHER	
3.	499-462	1	BUSHING	
4.	499-470	1	BUSHING	
5.	499-471	1	THRUST WASHER	

FOOTNOTES

AXLE DIFFERENTIAL RIGID

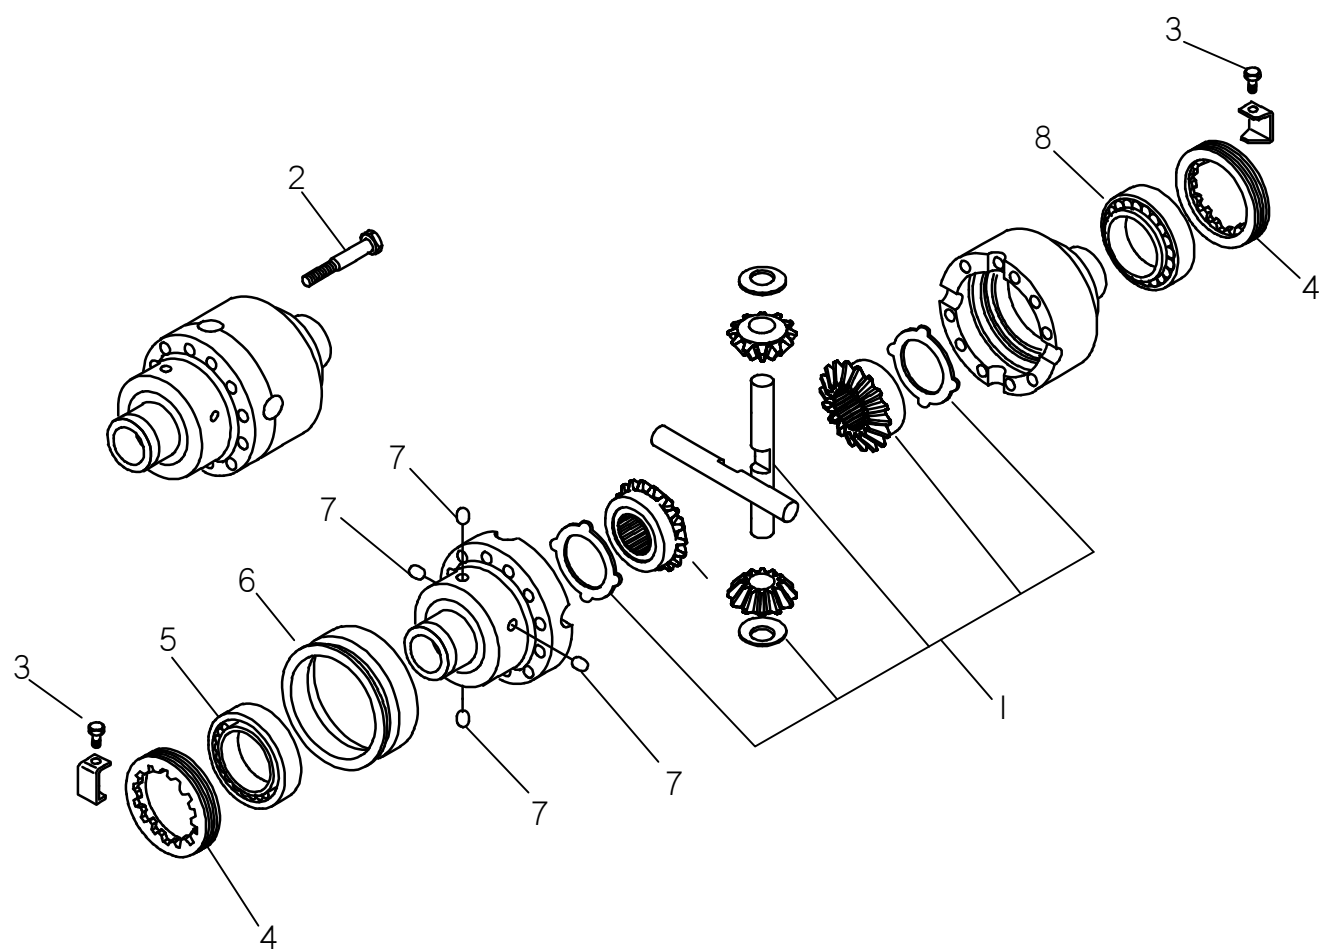

AXLE
DIFFERENTIAL
RIGID


REF	PART				
NO.	NUMBER	QTY	DESCRIPTION	REMARKS	
1.	499-513	1	DIFFERENTIAL KIT		
2.	107-346	12	LK SCREW (M10-1.50 X 75mm)		
3.	107-348	2	SCREW (M6-1.00 X 10mm)		
4.	501-893	2	RING NUT		
5.	499-484	2	BEARING	USED ON ALL MODELS. SIZE: 90X50X21.75mm	
6.	499-485	1	SLEEVE		
7.	499-486	4	PIN		
8.	500-2006	1	BEARING	REPLACES ONE 499-484 ON NEWER MODELS. SIZE: 90X55X23mm	

NOT SHOWN:

FOOTNOTES:

NOTE:

AXLE-REDUCTION GEARS RIGID

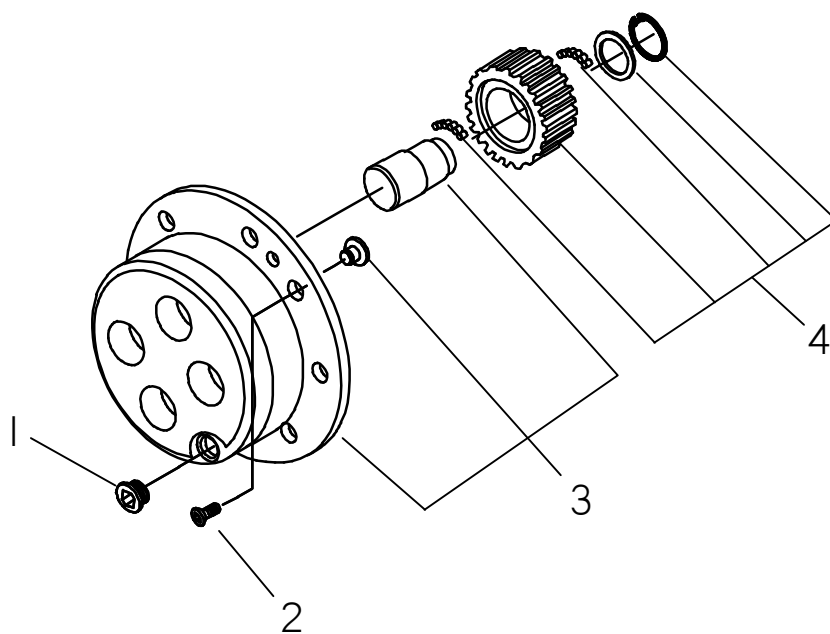

AXLE-REDUCTION GEARS RIGID

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	114-036	2	PLUG, PLANETARY CARRIER	
2.	107-349	4	SCREW (M8-1.25 X 20mm)	
3.	499-502	2	PLANETARY CARRIER ASS'Y	
4.	499-504	1	PLANET GEAR KIT	4 KITS PER WHEEL ASSEMBLY


NOT SHOWN:

499-517 2 SPLINE SHAFT Z-12
499-518 2 COUPLING
499-519 2 SNAPRING (D33)
499-520 2 HALF SHAFT

FOOTNOTES:

NOTE:

AXLE—
WHEEL HUB
RIGID

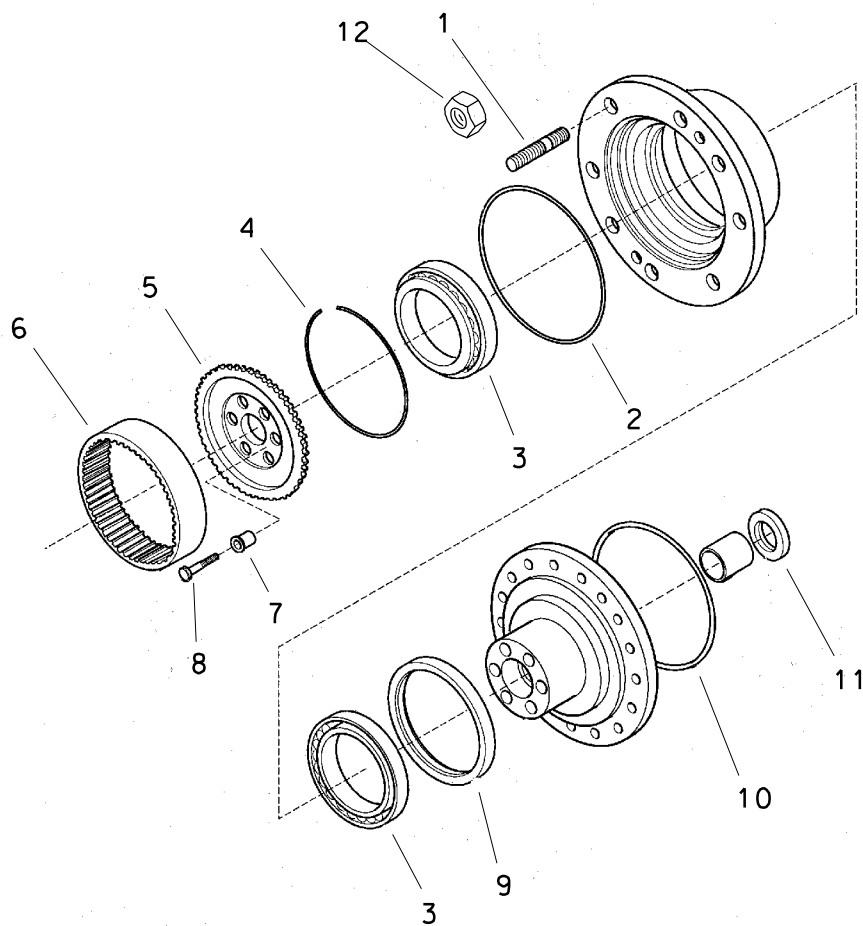


AXLE - WHEEL HUB RIGID

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	499-499	8	STUD	QTY PER WHEEL ASS'Y
2.	157-224	2	O-RING	
3.	499-498	4	BEARING	
4.	499-501	2	RING	
5.	499-507	2	WHEEL CARRIER	
6.	499-503	2	CROWN GEAR	
7.	499-505	16	CENTERING BUSHING	
8.	499-506	16	BOLT (M12 X 45)	
9.	499-497	2	SEAL RING	
10.	499-515	2	O-RING	
11.	499-516	2	SEAL RING	
12.	499-521	8	LUG NUT (M20 X 1.50)	QTY PER WHEEL ASS'Y

FOOTNOTES

AXLE
BEVEL GEAR/PINION SET
STEERABLE/RIGID

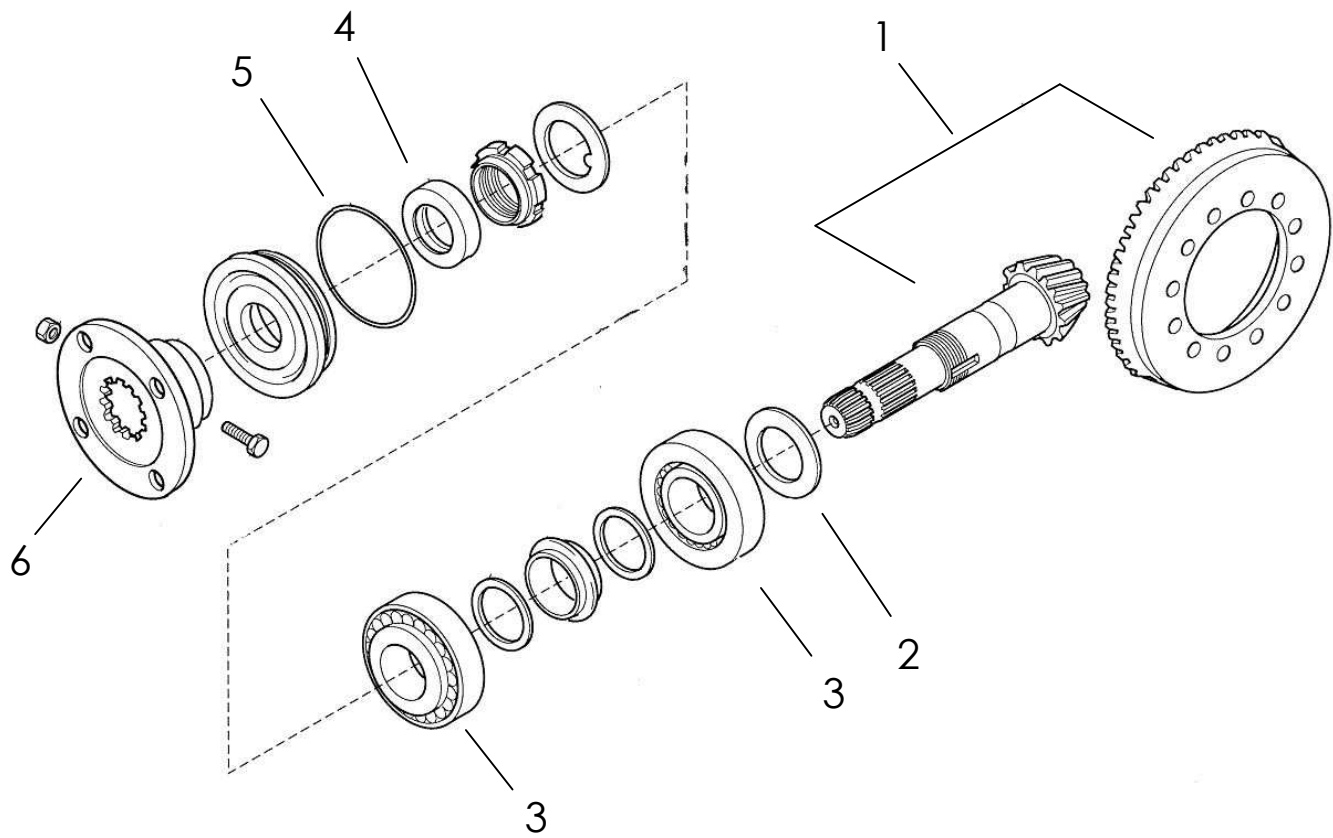

AXLE BEVEL GEAR/PINION SET STEERABLE/RIGID


REF	PART				
NO.	NUMBER	QTY	DESCRIPTION	REMARKS	
1.	499-478	1	BEVEL GEAR SET Z12/32		
2.	499-487	1	SHIM KIT		
			SHIM 2.50mm		
			SHIM 2.60mm		
			SHIM 2.70mm		
			SHIM 2.80mm		
			SHIM 2.90mm		
			SHIM 3.00mm		
			SHIM 3.10mm		
			SHIM 3.20mm		
			SHIM 3.30mm		
			SHIM 3.40mm		
3.	499-479	2	BEARING		
4.	499-480	1	OIL SEAL RING		
5.	499-481	1	O-RING		
6.	499-482	1	FLANGE		

NOT SHOWN:

FOOTNOTES:

NOTE:

AXLE
DIFF LOCK
STEERABLE/RIGID

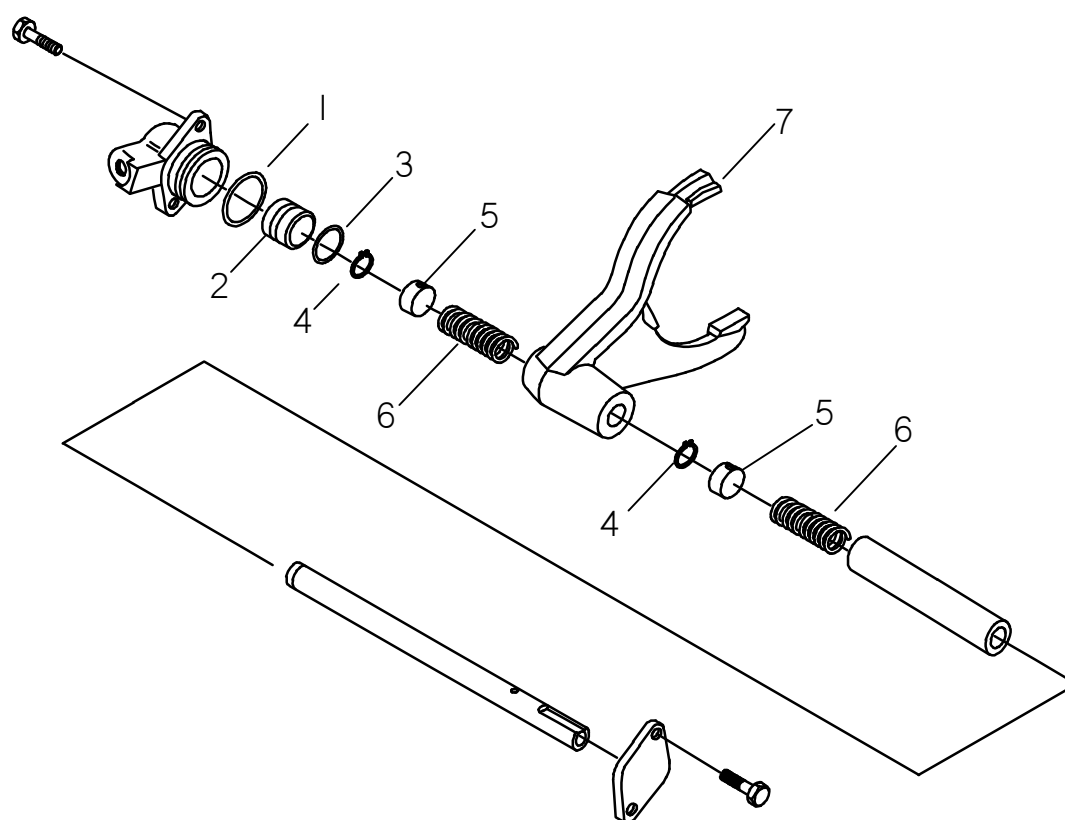

AXLE
DIFF LOCK
STEERABLE/RIGID


REF	PART			
NO.	NUMBER	QTY	DESCRIPTION	REMARKS
1.	499-488	1	O-RING	
2.	499-489	1	PISTON	
3.	499-490	1	O-RING	
4.	499-491	2	SNAP RING (D12)	
5.	499-492	2	SPACER	
6.	499-493	2	SPRING	
7.	499-494	1	FORK	

NOT SHOWN:

FOOTNOTES:

NOTE:

AXLE AXLE HOUSING STEERABLE

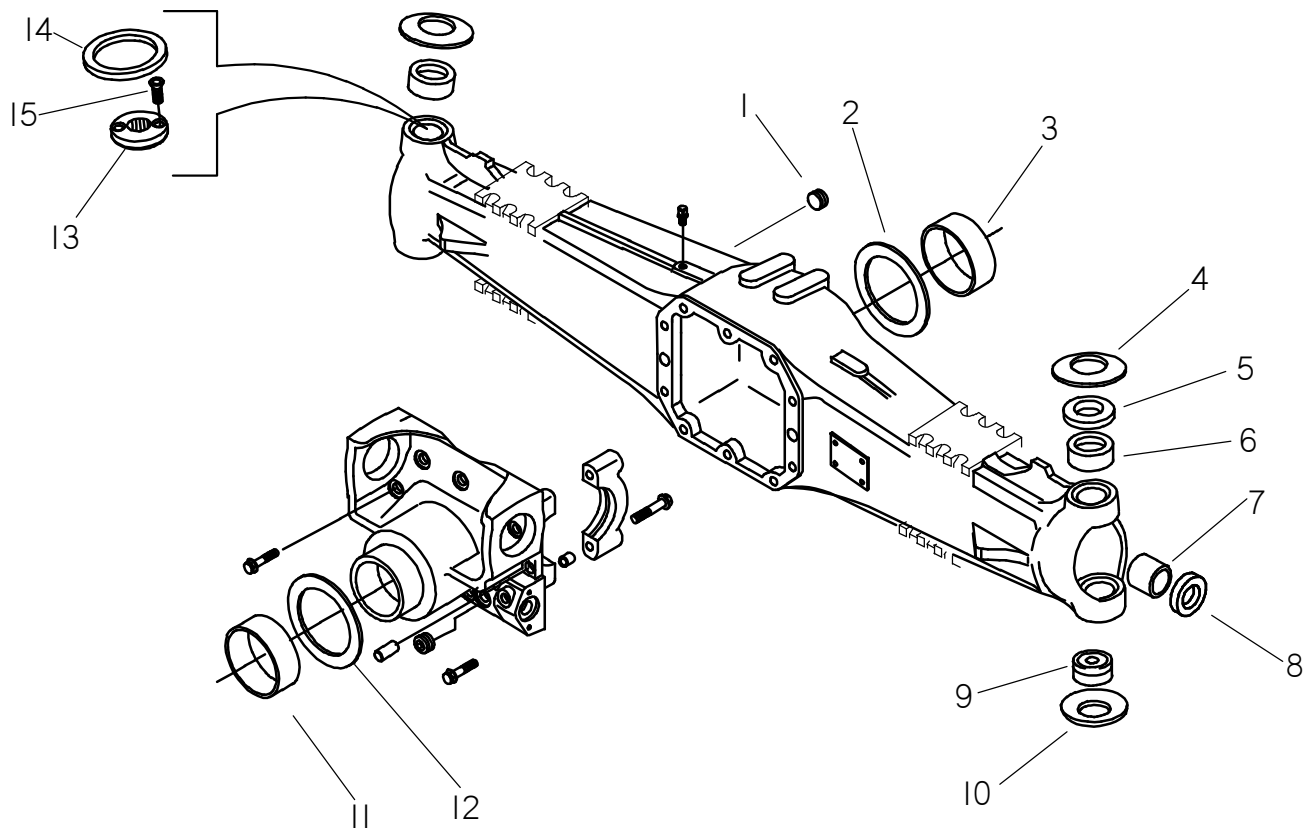

AXLE AXLE HOUSING STEERABLE


REF	PART				
NO.	NUMBER	QTY	DESCRIPTION		REMARKS
1.	514-345	2	PLUG (M22-1.50, SOC)		
2.	499-461	1	THRUST WASHER		
3.	499-462	1	BUSHING		
4.	499-463	2	BELLEVILLE WASHER		
5.	499-464	1	SPACER		
6.	499-465	2	BUSHING		
7.	499-466	2	BUSHING		
8.	499-467	2	OIL SEAL RING		
	500-1135	2	OIL SEAL		
9.	499-468	2	SPHERICAL BEARING		
10.	499-469	2	BELLEVILLE WASHER		
11.	499-470	1	BUSHING		
12.	499-471	1	THRUST WASHER		
13.	499-472	1	PIN LOCKING WASHER		
14.	500-1697	1	LH BUSH (SPACER)		
15.	500-1698	2	SCREW (M4-.7 X 10mm, 10.9)		

NOT SHOWN:

FOOTNOTES:

NOTE:

AXLE DIFFERENTIAL STEERABLE

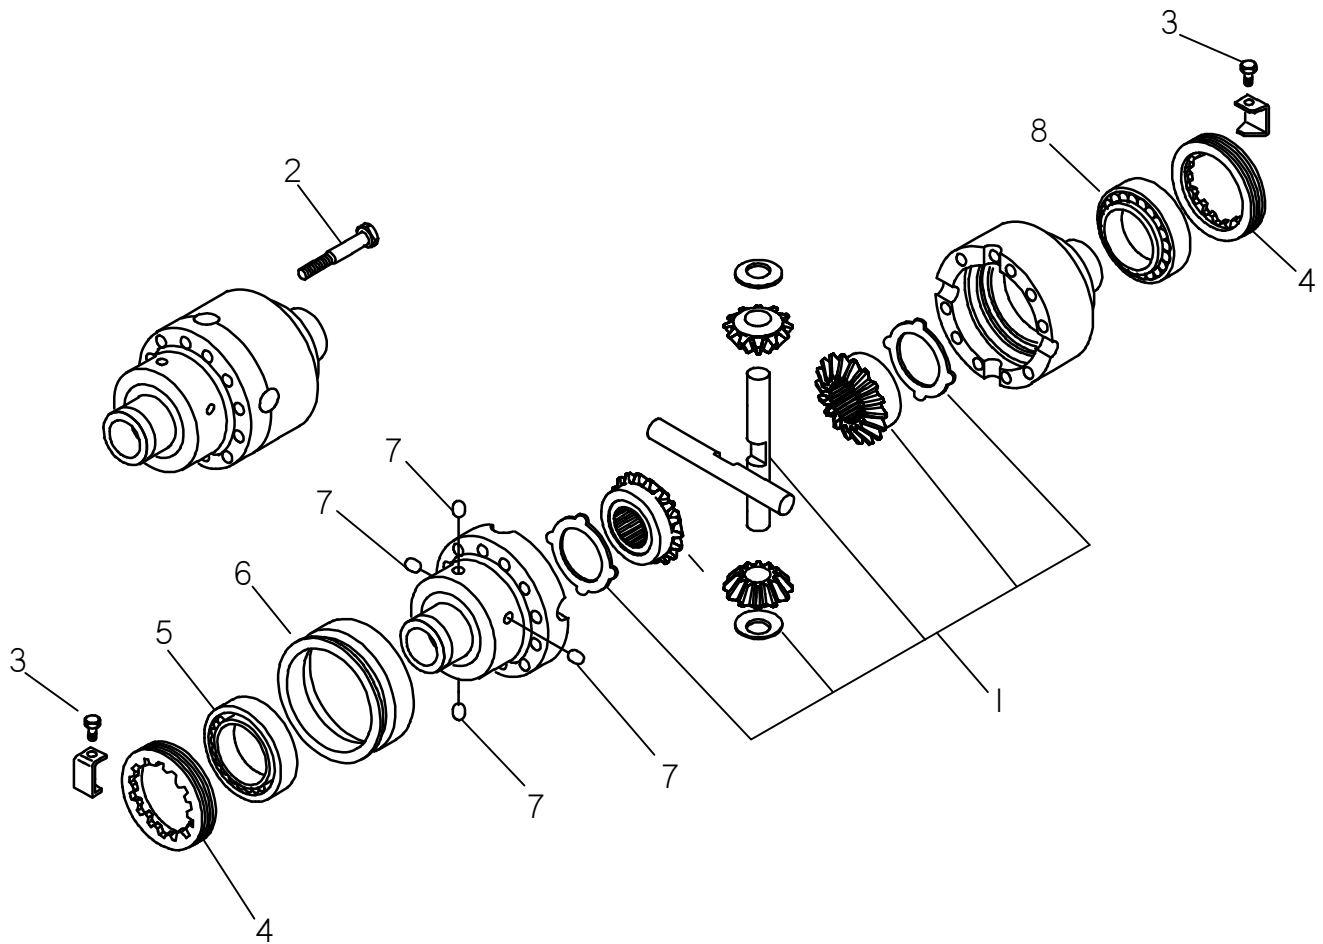

AXLE DIFFERENTIAL STEERABLE


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	499-483	1	DIFFERENTIAL KIT	
2.	107-346	12	LK SCREW (M10-1.50 X 75mm)	
3.	107-348	2	SCREW (M6-1.00 X 10mm)	
4.	501-893	2	RING NUT	
5.	499-484	2	BEARING	USED ON ALL MODELS. SIZE: 90X50X21.75mm
6.	499-485	1	SLEEVE	
7.	499-486	4	PIN	
8.	500-2006	1	BEARING	REPLACES ONE 499-484 ON NEWER MODELS. SIZE: 90X55X23mm

NOT SHOWN:

FOOTNOTES:

NOTE:

AXLE-WHEEL HUB/REDUCTION GEAR STEERABLE

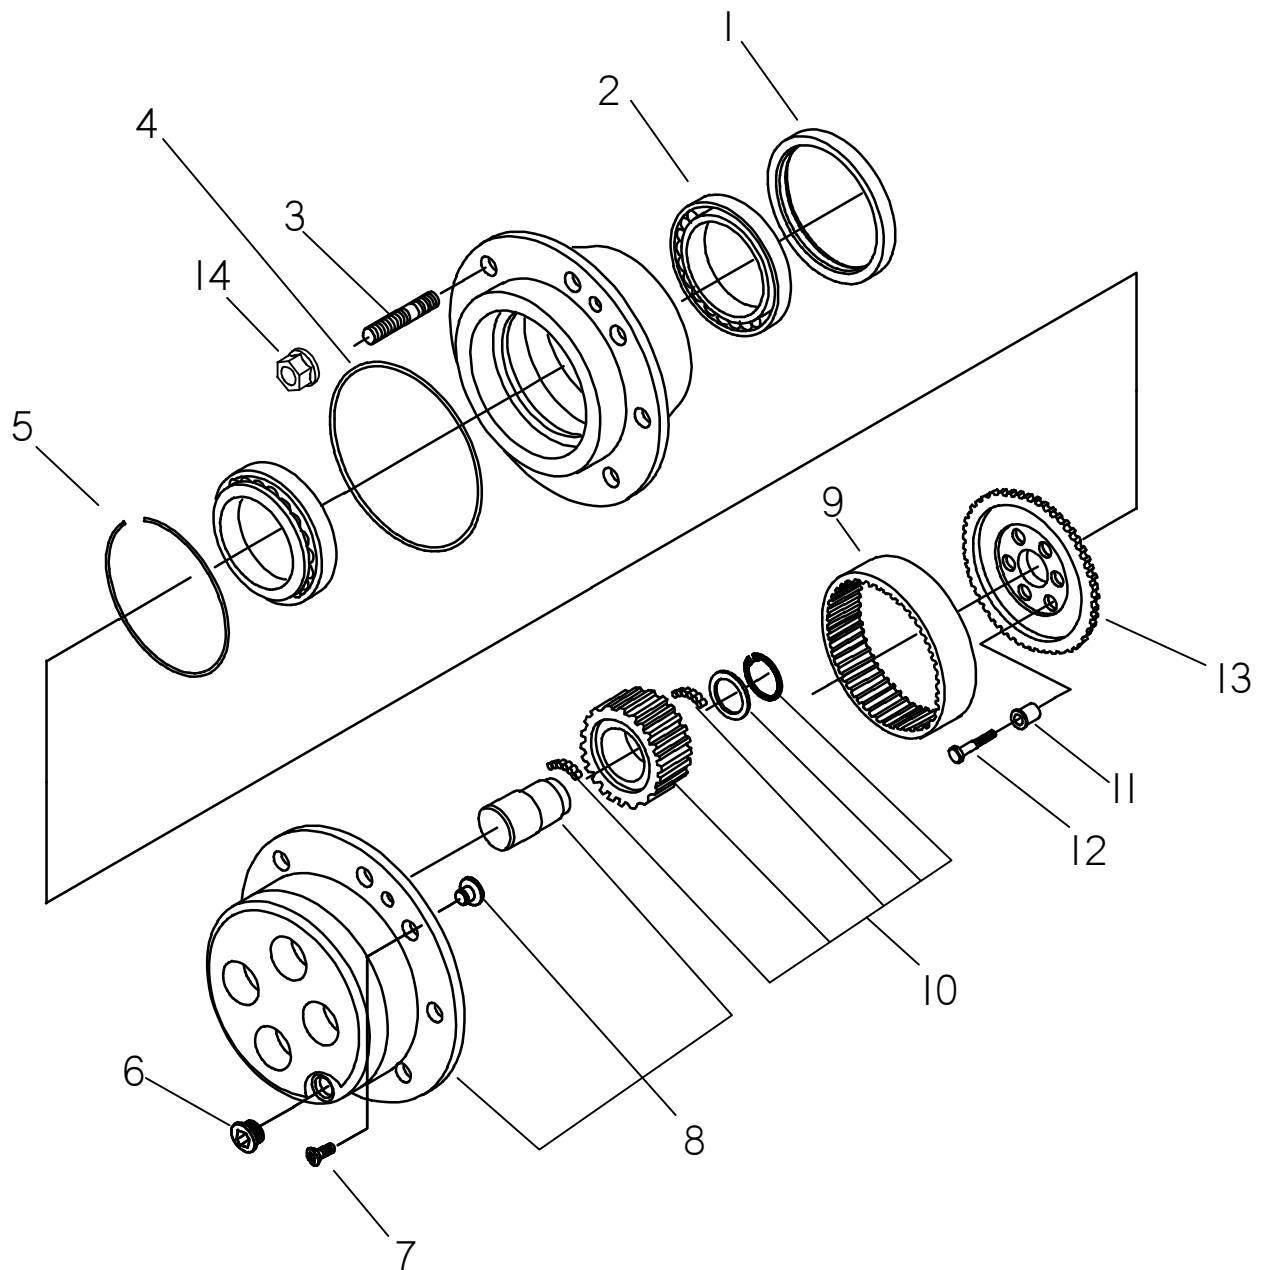

AXLE-WHEEL HUB/REDUCTION GEAR STEERABLE


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	499-497	2	SEAL RING	EARLY STYLE 176mm OD
	499-940		SEAL KIT	CURRENT PRODUCTION 180mm OD
	499-948		OIL SEAL	CURRENT PRODUCTION
2.	499-498	4	BEARING	
3.	499-499	8	STUD	QTY PER WHEEL ASS'Y
4.	157-224	2	O-RING	
5.	499-501	2	RING	
6.	114-036	2	PLUG, PLANETARY CARRIER	
7.	107-349	4	SCREW (M8-1.25 X 20mm)	
8.	499-502	2	PLANETARY CARRIER ASS'Y	
9.	499-503	2	CROWN GEAR	
10.	499-504	1	PLANET GEAR KIT	4 KITS PER WHEEL ASSEMBLY
11.	499-505	12	CENTERING BUSHING	
12.	499-506	12	BOLT (M12 X 45)	
13.	499-507	2	WHEEL CARRIER	
14.	499-521	8	LUG NUT (M20-1.50)	QTY PER WHEEL ASS'Y

NOT SHOWN:

FOOTNOTES:

NOTE:

AXLE DOUBLE JOINT STEERABLE

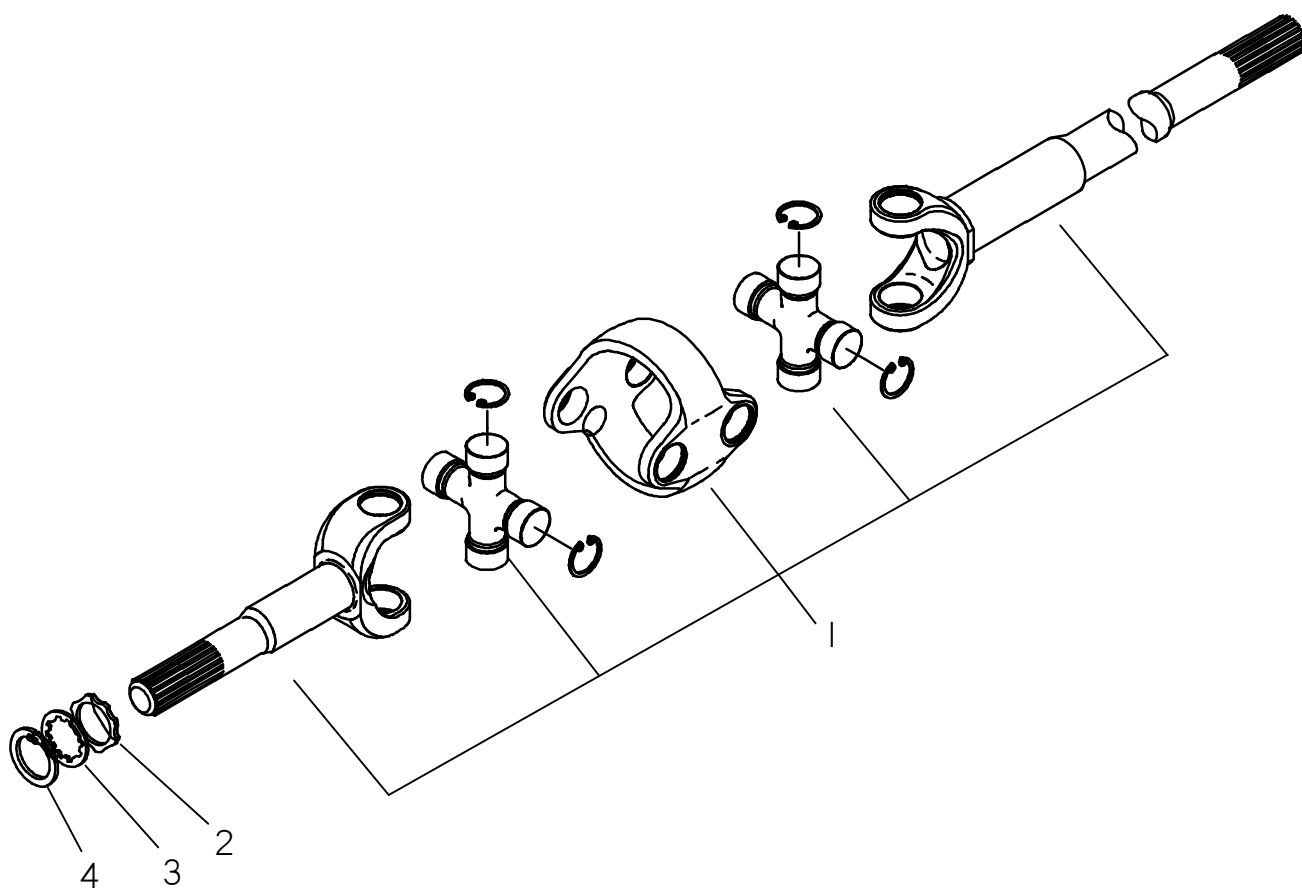

AXLE DOUBLE JOINT STEERABLE


REF	PART			
NO.	NUMBER	QTY	DESCRIPTION	REMARKS
1.	499-495	2	DOUBLE JOINT	
2.	500-1266	2	THRUST WASHER	
3.	500-1267	2	WASHER	
4.	500-1268	2	SNAP RING	

NOT SHOWN:

FOOTNOTES:

NOTE:

AXLE SWIVEL HOUSING & STEERING CYL. STEERABLE

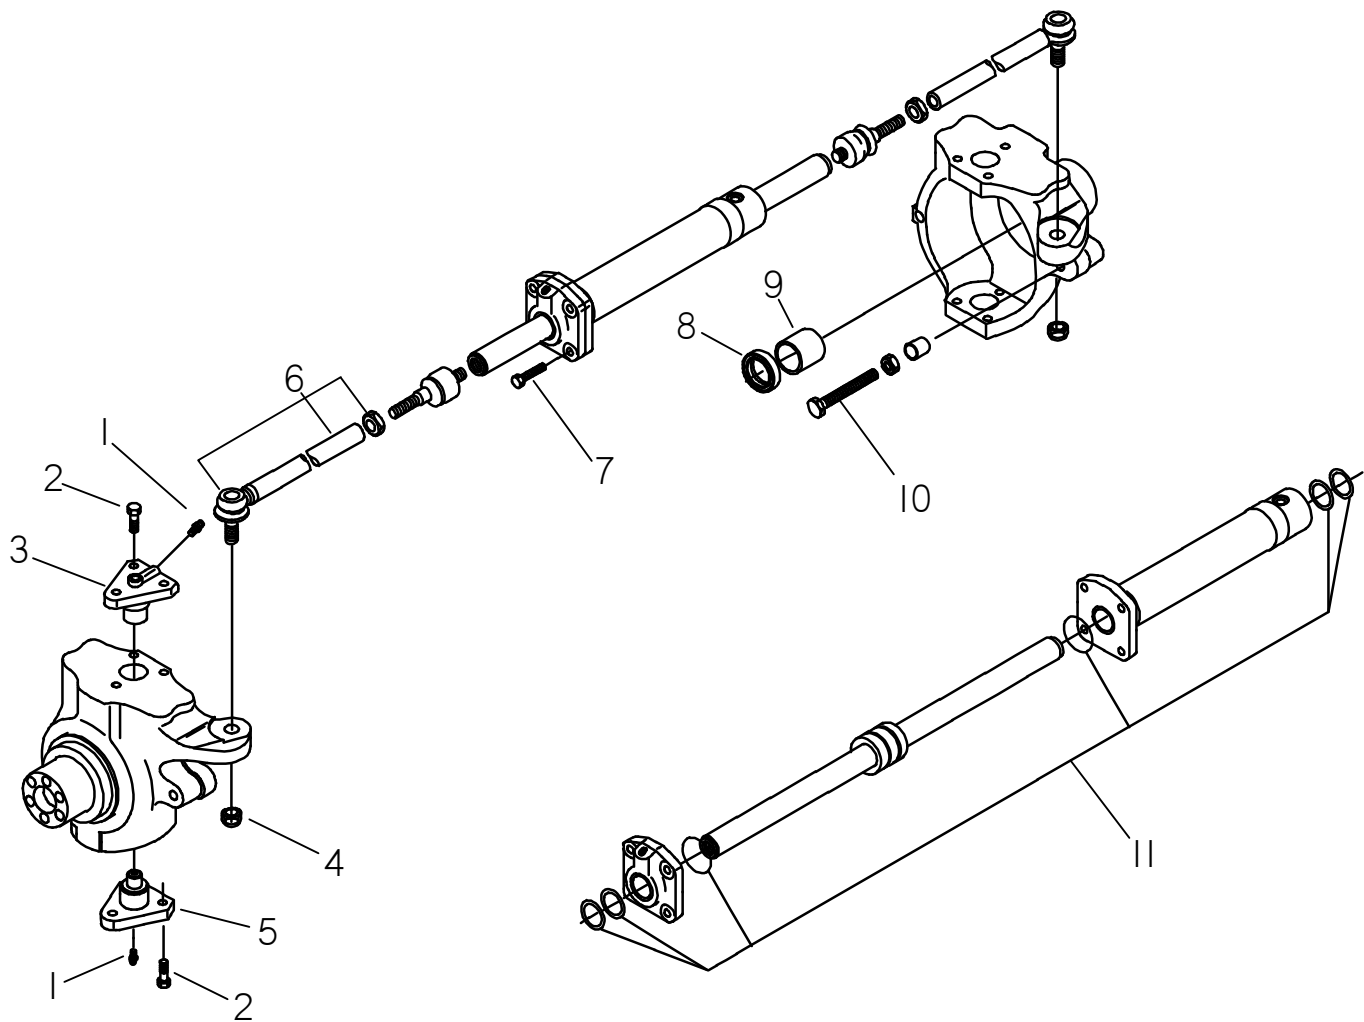

AXLE SWIVEL HOUSING & STEERING CYL. STEERABLE

REF	PART				
NO.	NUMBER	QTY	DESCRIPTION		REMARKS
1.	115-065	4	ZERK, METRIC (M6 X 1)		
2.	106-472	12	SCREW (M14-2.00 X 35mm)		
3.	499-473	2	KING PIN		
4.	499-474	2	NUT (M20-1.5)		
5.	499-475	2	KING PIN		
6.	499-476	2	STEERING ARM ASS'Y		
7.	107-344	4	LK SCREW (M12-1.75 X 45mm)		
8.	157-747	2	OIL SEAL		
9.	178-172	2	BUSHING		
10.	107-345	4	SCREW (M16-2.00 X 100mm)		
11.	499-477	1	OIL SEAL KIT (CYL)		


NOT SHOWN:

FOOTNOTES:

NOTE:

REAR STEER AXLE SENSOR

BEGINS WITH S/N'S: CMWRT95MH90000290, CMWRT95HV90000367, CMWRI5T3C90000132

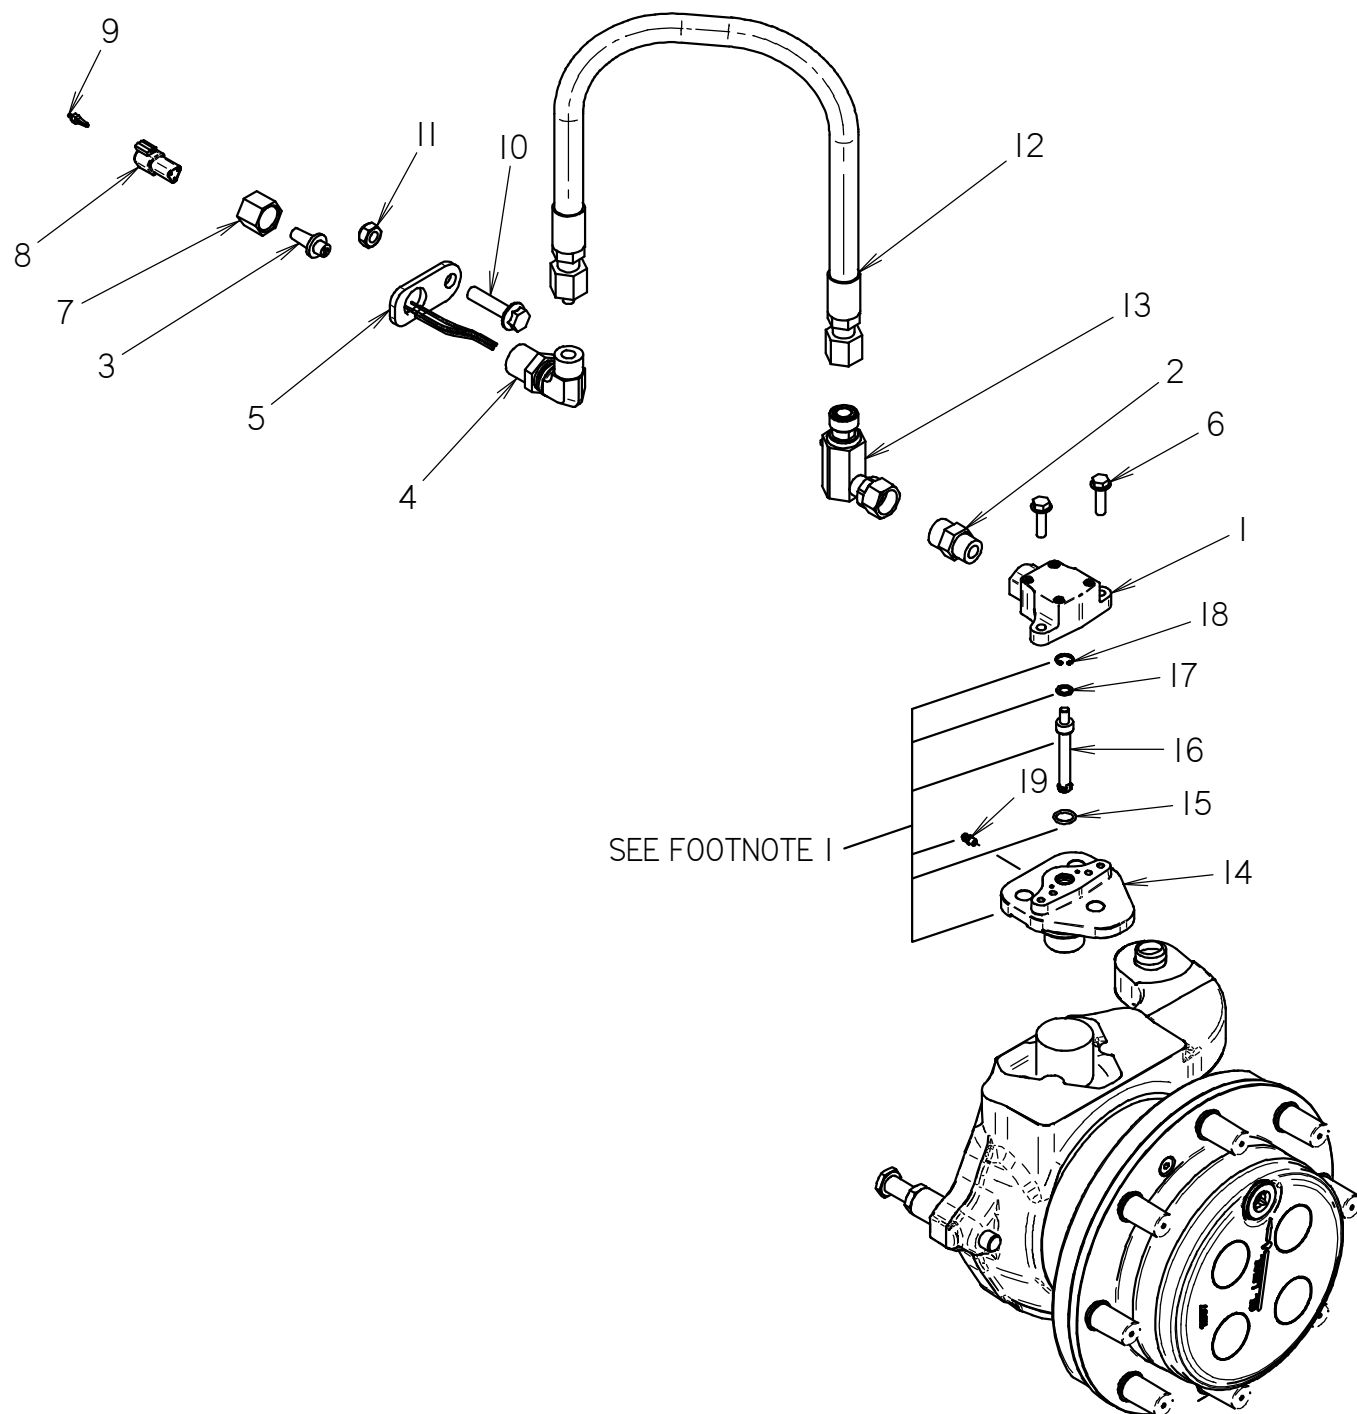

REAR STEER AXLE SENSOR

BEGINS WITH S/N'S: CMWRT95MH90000290, CMWRT95HV90000367, CMWRI5T3C90000132

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	215-1503	1	REAR STEER SENSOR	SEE FOOTNOTE 4
2	154-301	1	CONNECTOR (10S-100)	SEE FOOTNOTE 4
3	362-1404	1	WIRE GROMMET	SEE FOOTNOTE 4
4	154-291	1	BK CONNECTOR (100-10090BK)	SEE FOOTNOTE 4
5	300-9066	1	BRACKET	SEE FOOTNOTE 2 & 4
6	106-163	2	FLG SCREW (M8-1.25 X 30MM)	
7	154-310	1	REDUCER NUT (100F)	
8	215-1518	1	3 PIN DEUTSCH CONNECTOR, DT04-3P	SEE FOOTNOTE 4
9	215-1517	1	3 PIN DEUTSCH PLUG, W3P	SEE FOOTNOTE 4
10	107-008	1	FLG LK SCREW (M12-1.75 X 50MM)	
11	106-685	1	LOCKNUT (M12-1.75, PRV TRQ, 10.9)	
12	150-2907	1	HOSE (100FX-22"-3000)	SEE FOOTNOTE 3 & 4
13	150-2843	1	SWIVEL (100-100FX90; DO NOT PRESSURIZE)	SEE FOOTNOTE 4 & 5
14	500-1804	1	KING PIN (REAR STEER)	SEE FOOTNOTE 1
15	499-512	1	O-RING	SEE FOOTNOTE 1
16	500-1801	1	SHAFT	SEE FOOTNOTE 1
17	500-1802	1	WASHER	SEE FOOTNOTE 1
18	500-1803	1	SNAP RING D15	SEE FOOTNOTE 1
19	115-065	1	ZERK (M6 X 1)	SEE FOOTNOTE 1

NOT SHOWN:

214-133, TERMINAL PIN (DEUTSCH), USE QTY=3 PER AXLE SENSOR ASSEMBLY

215-1535, HEAT SHRINK 3/8" ADHESIVE, USE QTY=3 @ 2" FOR A TOTAL OF 6" PER AXLE SENSOR ASSEMBLY

215-1546, KEVLAR BRAIDED SLEEVING (1/2"), USE QTY=2 @ 5" FOR A TOTAL OF 10" PER AXLE SENSOR ASSEMBLY

FOOTNOTES:

1. PARTS BELONG TO CARRARO REAR STEER KIT 190-1424.
2. BRACKET 300-9066 IS ONLY USED ON THE REAR AXLE SENSOR ASSEMBLIES, 220-1181 AND 220-1183.
3. HOSE 150-2907 USED IN AXLE SENSOR ASSEMBLY 220-1181; USE HOSE 153-294 FOR AXLE SENSOR ASSEMBLY 220-1180, HOSE 515-605 FOR AXLE SENSOR ASSEMBLY 220-1182, AND HOSE 150-1729 FOR AXLE SENSOR ASSEMBLY 220-1183.
4. PARTS BELONG TO AXLE SENSOR ASSEMBLIES; SEE NOTE BELOW FOR DETAILS
5. ONLY USED IN RT90/95/115 AXLE SENSOR ASSEMBLIES 220-1180 AND 220-1181.

NOTE:

RT90/95/115 FRONT AXLE SENSOR ASSEMBLY IS P/N 220-1180

RT90/95/115 REAR AXLE SENSOR ASSEMBLY IS P/N 220-1181


RT70/75 FRONT AXLE SENSOR ASSEMBLY IS P/N 220-1182

RT70/75 REAR AXLE SENSOR ASSEMBLY IS P/N 220-1183

TILT FRAME DIFFERENTIAL MOUNT

RT90/RT95/RT115 BEGINS WITH S/N CMWRT95MLB0000374

CMW 15T3CB0000220, CMW15QPB0000161, CMWRT95HVB0000410

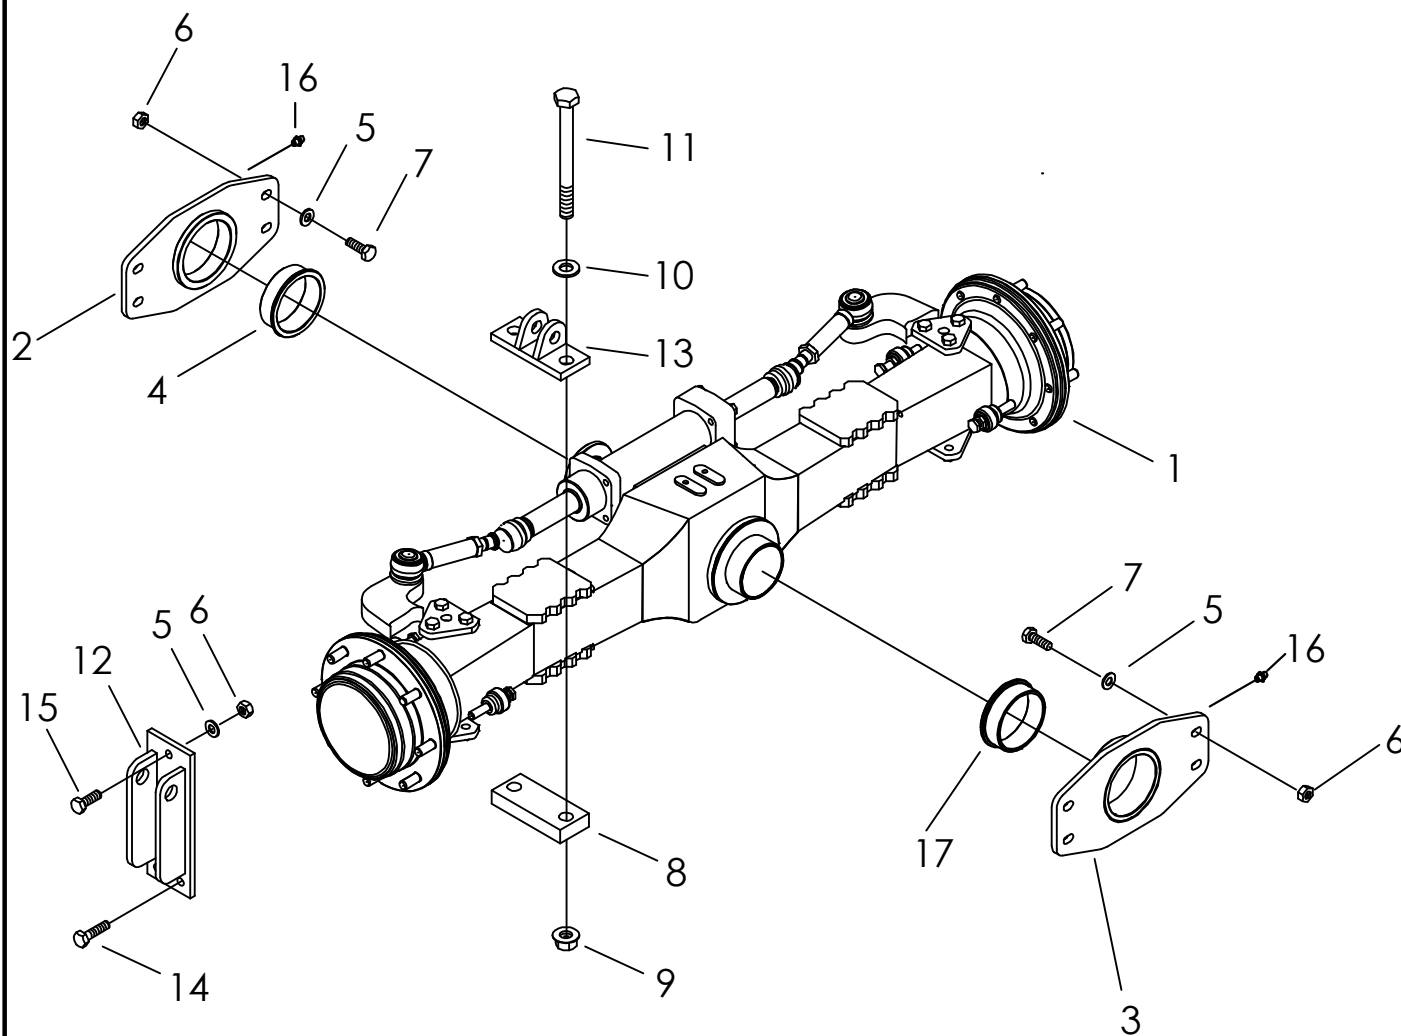

TILT FRAME DIFFERENTIAL MOUNT

RT90/RT95/RT115 BEGINS WITH S/N CMWRT95MLB0000374

CMW 15T3CB0000220, CMW15QPB0000161, CMWRT95HVB0000410

REF	PART				
NO.	NUMBER	QTY	DESCRIPTION	REMARKS	
1.	160-456	-	RIGID PLANETARY AXLE (28.22)		
	160-455	-	STEERABLE AXLE (26.22)	SEE NOT SHOWN FOR SERVICE PART KIT	
2.	301-4122	1	AXLE MOUNT, OPEN		
3.	301-4121	1	AXLE MOUNT, CLOSED		
4.	178-1004	1	INSIDE BUSHING (4.928" ID, 5.500" OD)		
5.	106-398	14	WASHER (M16, HARDENED)		
6.	106-545	14	LOCKNUT (M16-2.0, PRV TRQ, 10.9)		
7.	106-616	8	SCREW (M16-2.00 X 55mm, 10.9)		
8.	307-303	2	CLAMP PLATE		
9.	106-489	4	FLG NUT (M24-3.00, 10.9)		
10.	106-625	4	WASHER (M24)		
11.	107-089	4	SCREW (M24-3.00 X 260mm, 10.9)	SEE FOOTNOTE 2	
12.	301-1942	2	TILT CYLINDER MOUNT	SEE FOOTNOTE 1	
13.	301-1940	2	TILT CYLINDER AXLE MOUNT	SEE FOOTNOTE 1	
14.	106-666	4	SCREW (M16-2.00 X 65mm, 10.9)		
15.	106-340	2	SCREW (M16-2.00 X 50mm)		
16.	115-003	2	ZERK (1/4-NF, STR)		
17.	178-1003	1	OUTSIDE BUSHING (4.928" ID, 5.500" OD)		

NOT SHOWN:

500-1221 DIFFERENTIAL KIT


FOOTNOTES:

1. OLDER UNITS USED TILT MOUNTS 306-891 AND 306-893. IF REPLACING ONE OF THESE COMPONENTS ALL 4 PARTS MUST BE REPLACED BY 301-1940 AND 301-1942.
2. USE LOCTITE 609

NOTE:

TILT FRAME DIFFERENTIAL MOUNT

RT95M - RT95H - RT115 BEGINS WITH S/N CMWRT95HVB0000410, CMWRT95MLB0000374
CMWRT15T3CB0000220, CMWRT115QPB0000161. T2 & T3 UNITS

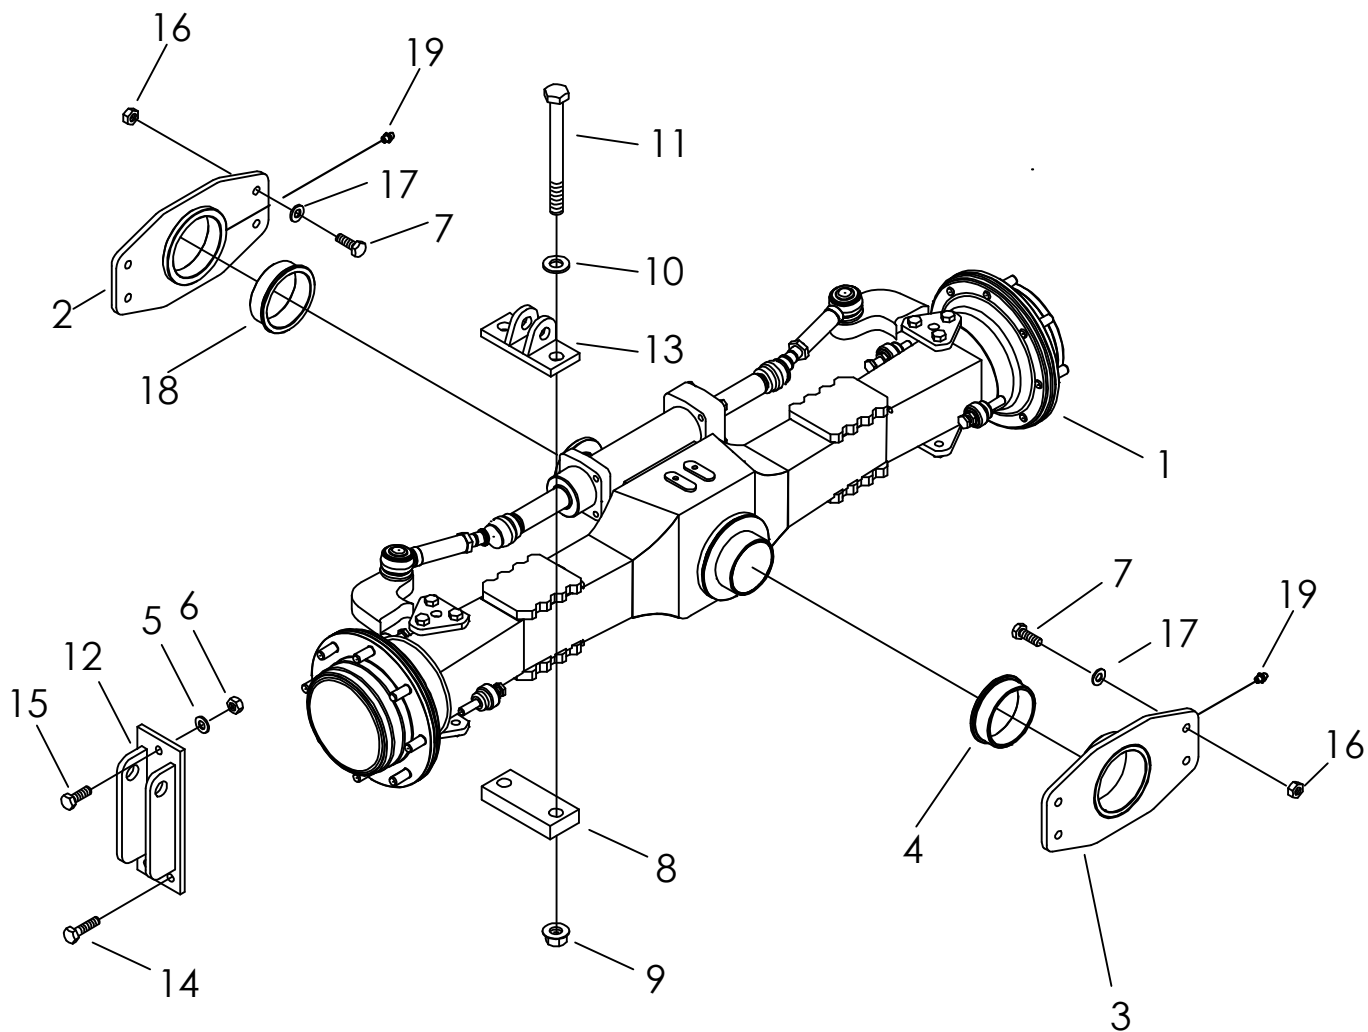

TILT FRAME DIFFERENTIAL MOUNT

RT95M - RT95H - RT115 BEGINS WITH S/N CMWRT95HVB0000410, CMWRT95MLB0000374
CMWRT15T3CB0000220, CMWRT115QPB0000161. T2 & T3 UNITS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	160-456	-	RIGID PLANETARY AXLE (28.22)	
	160-455	-	STEERABLE AXLE (26.22)	
2.	301-4122	1	AXLE MOUNT, OPEN	SEE FOOTNOTE 3
3.	301-4121	1	AXLE MOUNT, CLOSED	SEE FOOTNOTE 3
4.	178-1003	1	OUTSIDE BUSHING (4.928" ID, 5.500" OD)	
5.	106-398	6	WASHER (M16, HARDENED)	
6.	106-545	6	LOCKNUT (M16-2.0, PRV TRQ, 10.9)	
7.	106-831	8	SCREW (M20-2.50 X 60mm, 10.9)	
8.	307-303	2	CLAMP PLATE	
9.	106-489	4	FLG NUT (M24-3.00, 10.9)	
10.	106-625	4	WASHER (M24)	
11.	107-089	4	SCREW (M24-3.00 X 260mm, 10.9)	SEE FOOTNOTE 2
12.	301-1942	2	TILT CYLINDER MOUNT	SEE FOOTNOTE 1
13.	301-1940	2	TILT CYLINDER AXLE MOUNT	SEE FOOTNOTE 1
14.	106-666	4	SCREW (M16-2.00 X 65mm, 10.9)	
15.	106-340	2	SCREW (M16-2.00 X 50mm)	
16.	106-356	8	FLG NUT (M20-2.50, 10.9)	
17.	106-399	8	WASHER (M20, HARDENED)	
18.	178-1004	1	INSIDE BUSHING (4.928" ID, 5.500" OD)	
19.	115-003	2	ZERK (1/4-NF, STR)	


NOT SHOWN:

FOOTNOTES:

1. OLDER UNITS USED TILT MOUNTS 306-891 AND 306-893. IF REPLACING ONE OF THESE COMPONENTS ALL 4 PARTS MUST BE REPLACED BY 301-1940 AND 301-1942.
2. USE LOCTITE 609
3. BEGINS WITH S/N'S: _____, _____, & _____. IF REPLACING OLD MOUNTS (301-0186 OR 301-0187), OR BUSHING (178-365) ON RT95M, RT95H, OR RT115 USE KIT 190-1859, WHICH INCLUDES REFERENCE #'S 2, 3, 4, 18 & 19.

NOTE:

HYDROSTATIC DRIVE LINE RT90/RT95/RT115

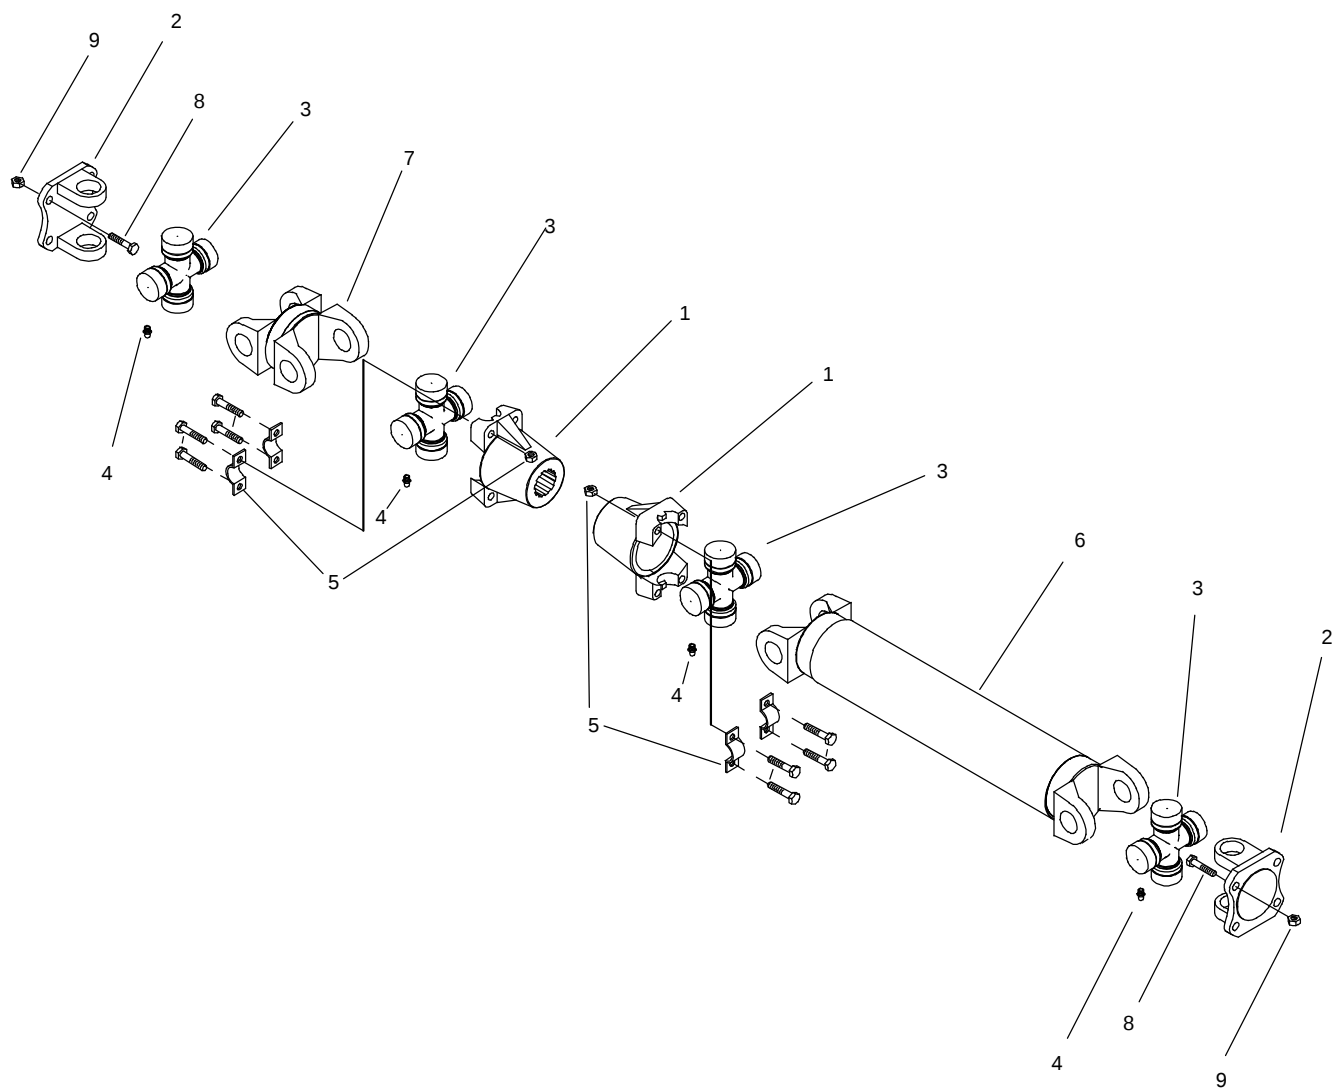

HYDROSTATIC DRIVE LINE

RT90/RT95/RT115

REF	PART				
NO.	NUMBER	QTY	DESCRIPTION	REMARKS	
1.	182-199	2	410 (SERIES) HUB MACHINING		
2.	182-173	2	FLANGE YOKE		
3.	182-145	4	CROSS/BEARING KIT (1-3/16")		
4.	115-003	4	ZERK (1/4-NF, STR)		
5.	182-204	4	U-BOLT KIT		
6.	166-236	1	FRONT DRIVE LINE		
7.	182-142	1	DOUBLE CENTER YOKE		
8.	105-119	8	BOLT (7/16 NF X 1-1/2")		
9.	105-120	8	NUT (7/16 NF)	USE LOCTITE 242 OR EQUIVALENT	


NOT SHOWN:

FOOTNOTES:

NOTE:

BRAKE CALIPERS

HYDROSTATIC

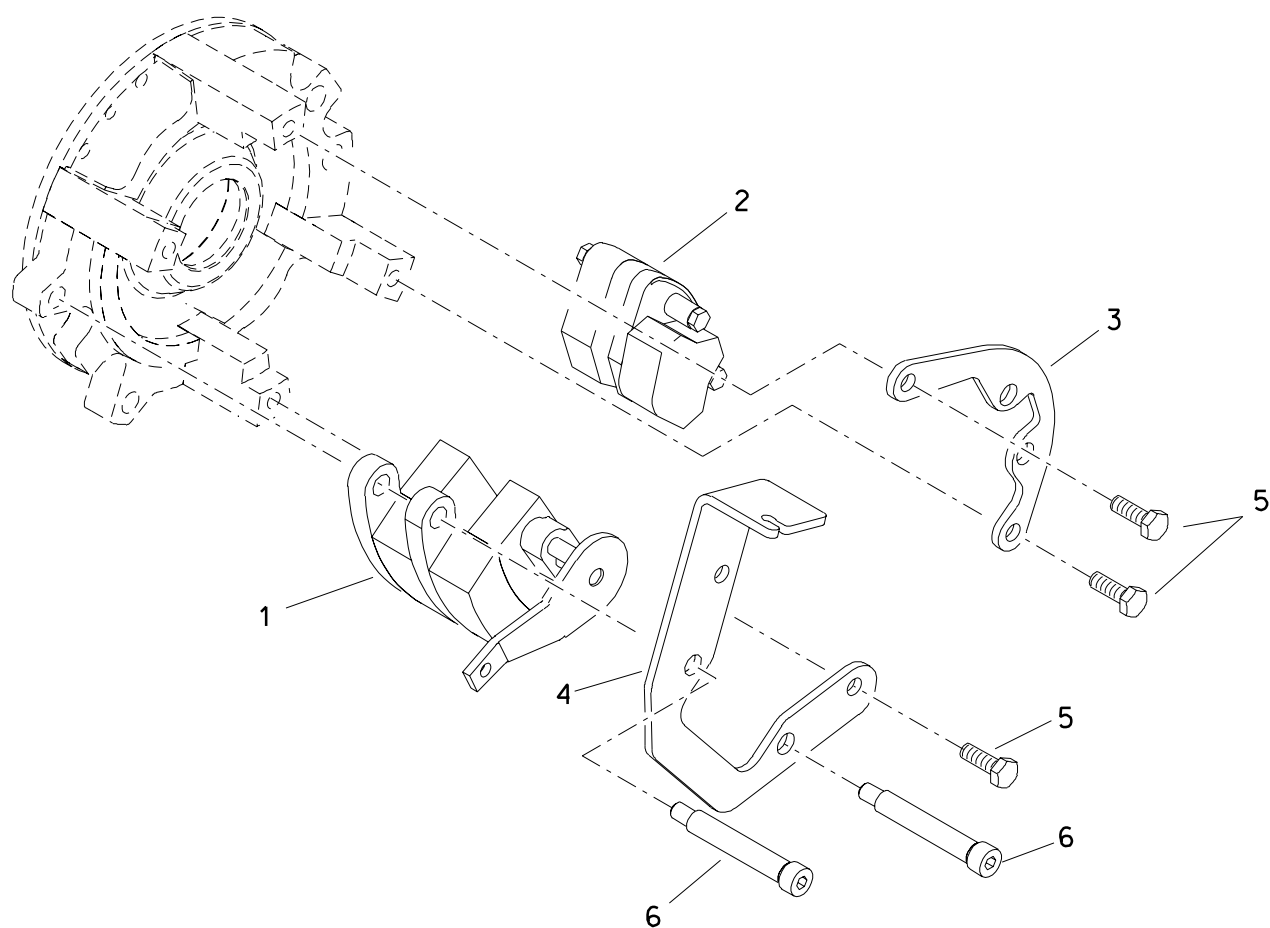


BRAKE CALIPERS

HYDROSTATIC

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	160-773	1	BRAKE CALIPER	PARKING
	115-600	1	EXTENSION SPRING	
	505-073	1	FRICTION PAD KIT	PAIR
2.	163-088	1	BRAKE CALIPER	SERVICE - INCLUDES HARDWARE
	160-665	2	BRAKE BLEEDER VALVE	
	505-068	2	PAD PIN	
	505-069	2	CUP SPRING	
	505-095	1	BRAKE PAD	PAIR
	505-080	1	CALIPER PISTON	
	505-081	1	DUST BOOT	
	505-082	1	SQUARE RING (223 D70)	
3.	309-264	1	SERVICE BRAKE BRACKET	
4.	309-382	1	BRAKE BRACKET	
5.	106-559	4	SCREW (M12-1.75 X 25mm)	
6.	107-498	2	SHLD BLT (M16 X 120mm, M12-1.75)	

FOOTNOTES

SERVICE BRAKE SYSTEM

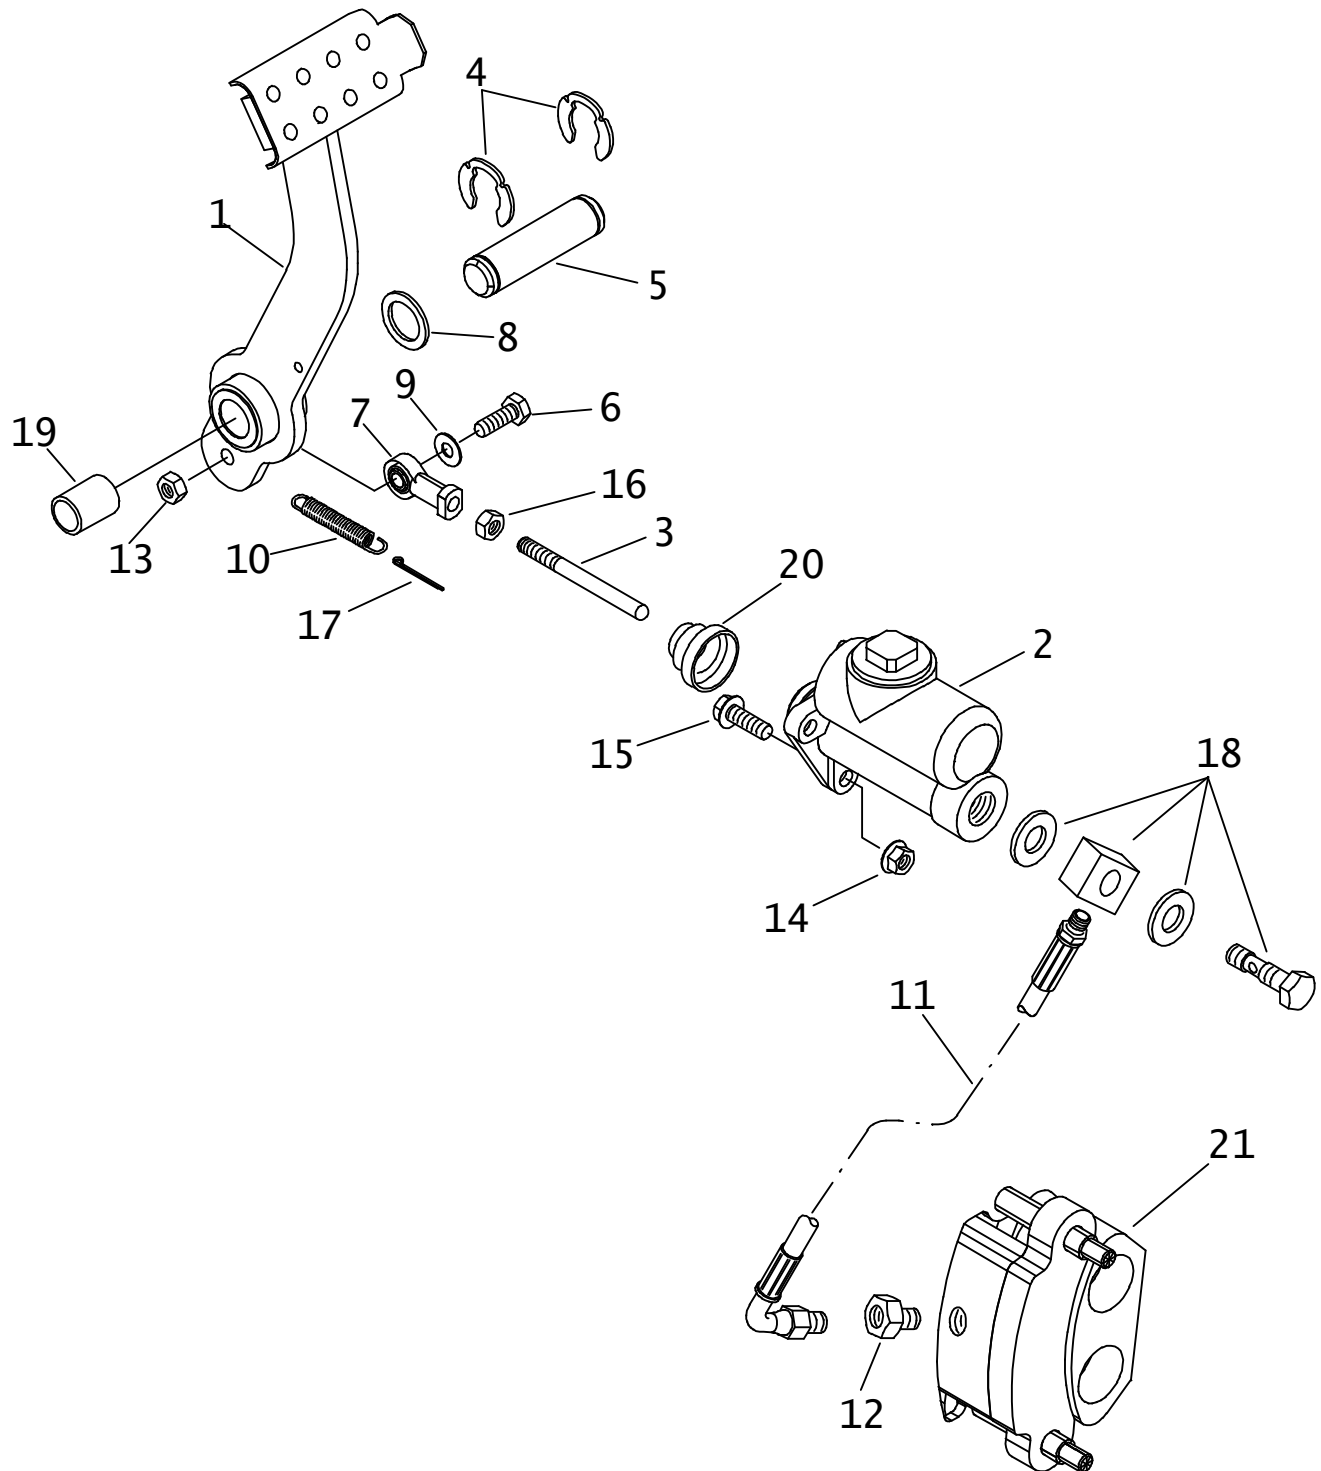

SERVICE BRAKE SYSTEM

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	306-996	1	BRAKE PEDAL	
2	163-219	1	MASTER CYLINDER	
	191-293		SEAL REPAIR KIT	
	505-026		MASTER CYL CAP (1-5/8 SAE)	COMES WITH GASKET
	165-724		CAP GASKET	
3	361-887	1	MASTER CYLINDER ROD	
4	115-484	2	EXTERNAL SNAP RING (1.000")	
5	178-383	1	PIN (1.000" X 3.900")	
6	107-242	1	LK BOLT (3/8-NC X1-1/2", NLK)	
7	110-102	1	ROD END (3/8-NF, FM)	
8	110-078	1	MACH BUSHING (1.000", 14GA)	
9	106-415	1	WASHER (.406")	
10	115-613	1	EXTENSION SPRING	
11	149-861	1	BRAKE HOSE (3/16T X 19")	
12	156-282	1	FLARE FITTING (03TM-04TFM)	
13	105-053	1	NUT (3/8-NC)	
14	106-266	3	FLG NUT (M10-1.50)	
15	107-002	3	FLG LK SCREW (M10-1.50 X 30mm)	
16	105-093	1	NUT (3/8-NF)	
17	105-504	1	COTTER PIN (.187 X .750)	
18	149-863	1	BANJO S/O CONNECTOR (08-05T)	SEE FOOTNOTE I
19	125-407	1	BRONZE BUSHING (1.000")	
20	115-329	1	DUST COVER	
21	163-088		BRAKE CALIPER	USED ON HYDROSTAT MACHINES
	505-095		BRAKE PAD (PAIR)	
	160-534		BRAKE CALIPER	USED ON POWERSHIFT MACHINES
	505-083		BRAKE PAD (PAIR)	


NOT SHOWN:

FOOTNOTES:

I. BANJO CONNECTOR (REF #18) COMES WITH 2X 502-178 (REF #22)

NOTE:

PARK BRAKE

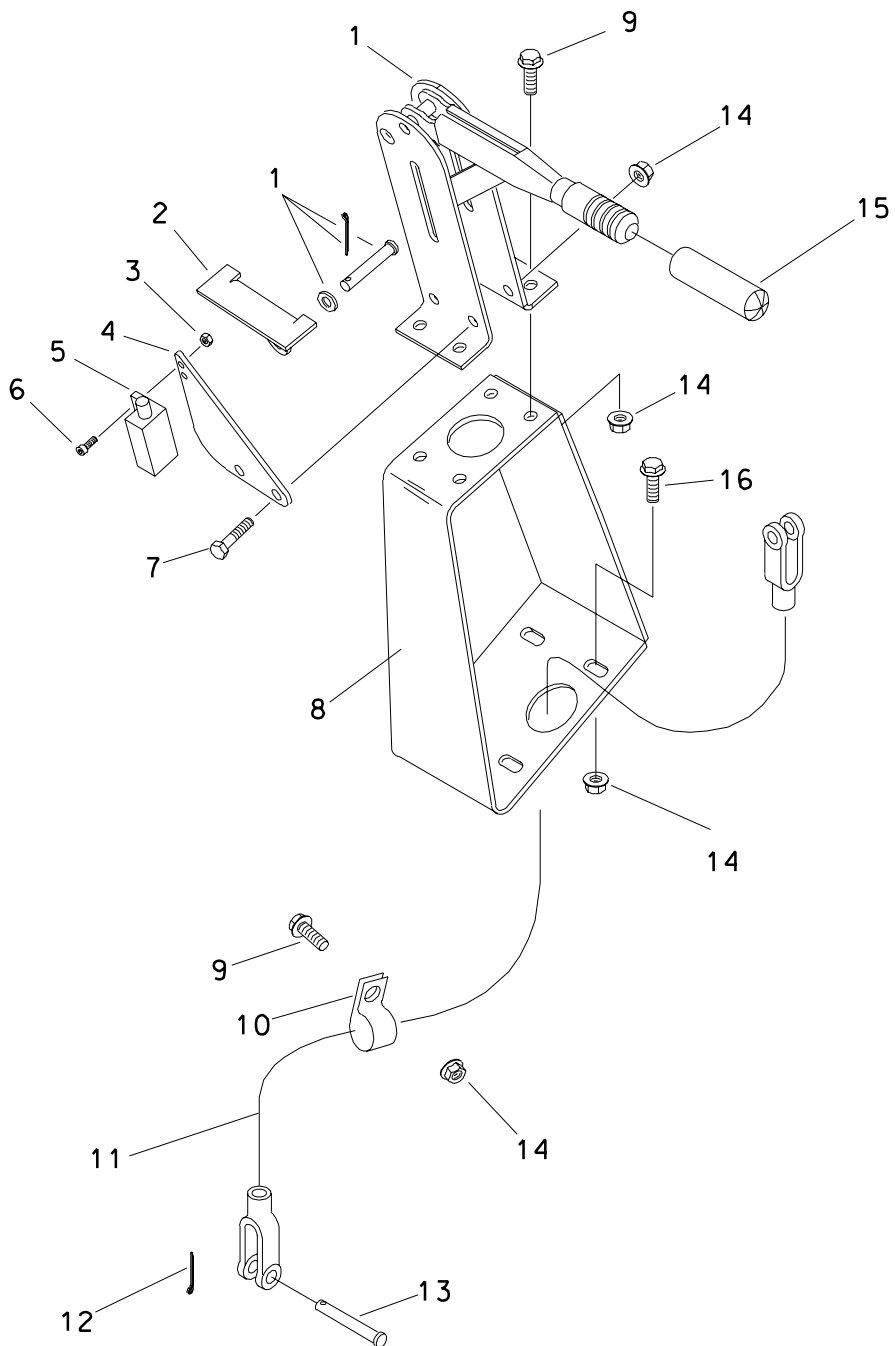

PARK BRAKE


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	160-744	1	PARKING BRAKE LEVER	
2.	309-413	1	ACTUATOR BRACKET	
3.	105-680	2	NUT (M4, W/LK WSHR)	
4.	309-412	1	SWITCH BRACKET	
5.	217-705	1	PLUNGER SWITCH	
6.	106-715	2	SCREW (M4-0.70 X 12mm, SOC)	
7.	106-328	2	SCREW (M8-1.25 X 40mm)	
8.	309-383	1	PARK BRAKE BRACKET	
9.	106-991	5	FLG LK SCREW (M8-1.25 X 20mm)	
10.	110-373	1	BOLT ON CLAMP (13/16")	
11.	194-183	1	BRAKE CABLE	USED ON POWER SHIFT
	194-184	1	BRAKE CABLE	USED ON HYDROSTATIC
12.	105-508	1	COTTER PIN (3/32" X 1")	
13.	110-053	1	CLEVIS PIN (3/8" X 1.078")	
14.	106-386	11	FLG LOCKNUT (M8-1.25)	
15.	110-469	1	GRIP (7/8", ORANGE)	
16.	106-162	4	FLG SCREW (M8-1.25 X 20mm)	SEE FOOTNOTE 1

FOOTNOTES

1. USE LOCTITE 242 (BLUE) WHEN INSTALLING BOLTS.

TIRE & WHEEL

38 X 18.00-20 E16TL

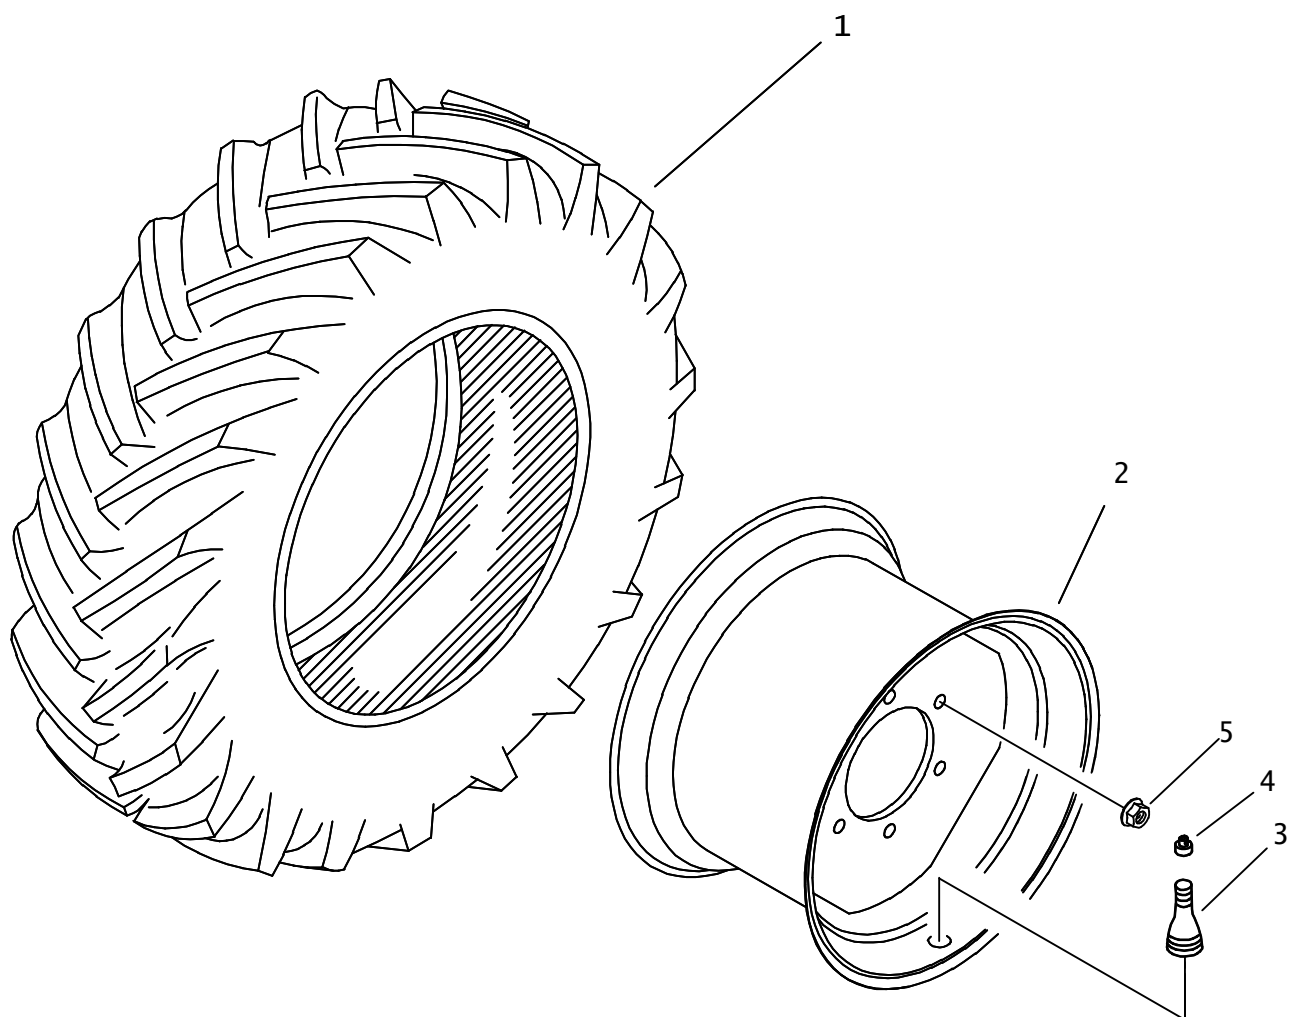

TIRE & WHEEL

38 X 18.00-20 E16TL

REF	PART				
NO.	NUMBER	QTY	DESCRIPTION	REMARKS	
	205-1126	4	T/W (38 X 18.00-20 16PLY)	INCL. REF. #'S 1, 2, 3	
1.	205-1125	4	TIRE (38 X 18.00-20.0, E16TL)	16 PLY	
2.	205-473	4	WHEEL (20.0 X 14 WD W/8) HP		
3.	205-168	4	VALVE STEM (.625")	INCL. REF #4	
4.	205-165	4	VALVE CAP (.305"-32)		
5.	499-521	-	LUG NUT (M20-1.50)		

NOT SHOWN:


FOOTNOTES:

NOTE:
REPLACES 205-456

NOTES:

FRAME COMPONENTS

BACKFILL BLADE ASSEMBLY HT115

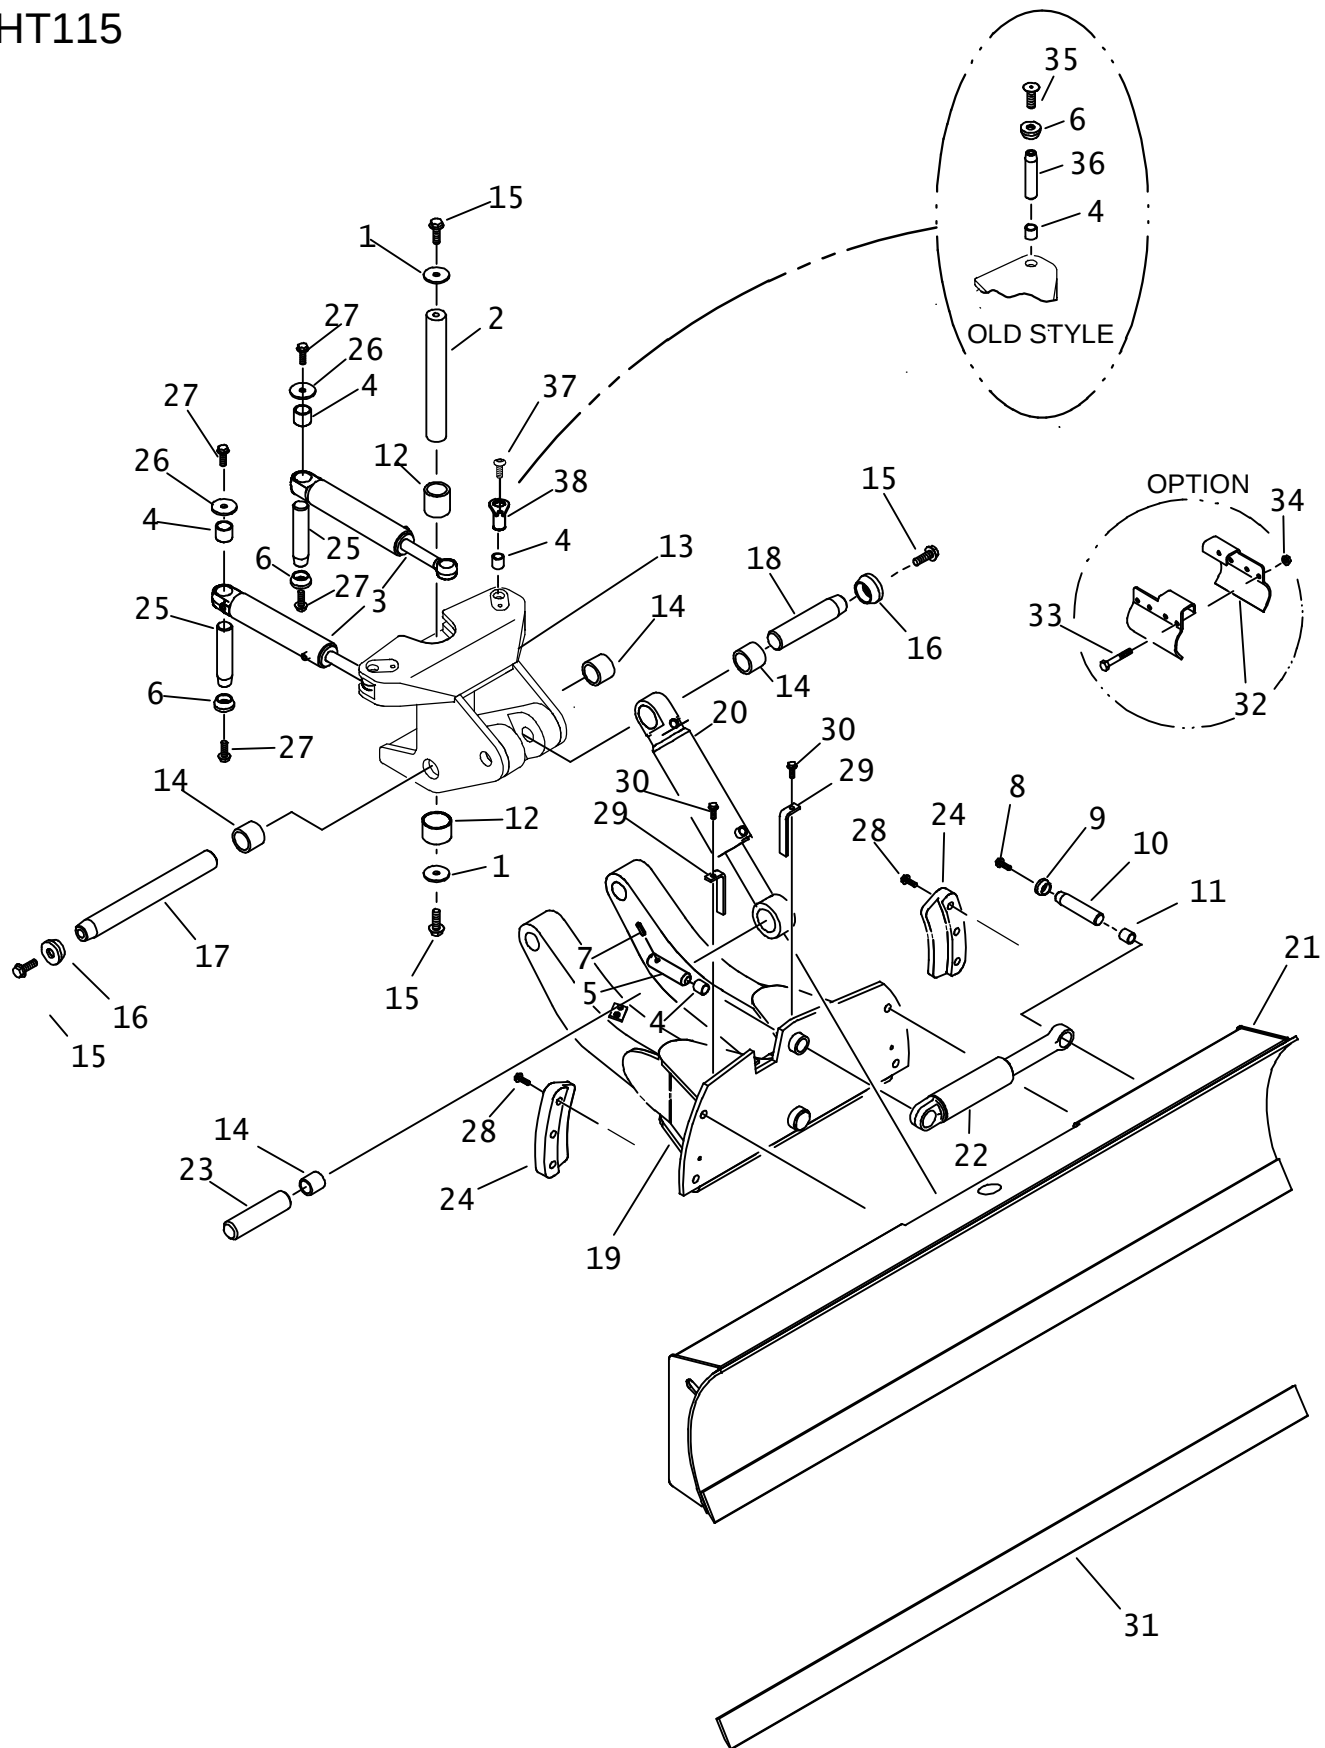

BACKFILL BLADE ASSEMBLY HT115

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	105-416	2	WASHER (5/8")	
2.	178-572	1	PIN (1.75" X 12.75")	
3.	151-057	-	CYL (2.0" X 1.25" X 8.0")	
4.	125-771	5	COMPOSITION BUSHING (1.25")	
5.	300-7763	1	PIN	
6.	181-982	1	TAPERED INSERT (1.25")	
7.	107-434	1	ROLL PIN 3/8 X 1-5/8	
8.	106-164	1	FLG LK SCREW (M10-1.50 X 30mm)	
9.	181-981	1	TAPERED INSERT (1")	
10.	183-767	1	TAPERED PIN (25.4mm X 60mm)	
11.	125-770	1	COMPOSITION BUSHING (1")	
12.	125-822	2	COMPOSITION BUSHING (1.750")	
13.	331-475	1	PIVOT	
14.	125-773	4	COMPOSITION BUSHING (1.750")	
15.	106-470	4	FLG SCREW (M16-2.00 X 40mm)	
16.	181-975	2	TAPERED INSERT (1.75")	
17.	178-584	1	TAPERED PIN (1.750" X 13.90")	
18.	183-768	1	TAPERED PIN (44.4mm X 205mm)	
19.	308-921	1	LIFT ARM	
20.	151-070	-	CYL (3" X 1.75" X 8")	
21.	300-4321	1	BACKFILL BLADE ASSEMBLY (80")	SEE FOOTNOTE 1 & 2
22.	151-202	-	CYL (2" X 1" X 3.38")	
23.	178-532	1	PIN (1.750" X 7.000")	
24.	314-104	2	TILT BLADE RETAINER	
25.	178-394	2	TAPERED PIN (1.250" X 4.250")	
26.	105-475	2	WASHER (1/2")	
27.	105-830	4	FLG LK BOLT (1/2-NC X 1-1/4")	
28.	106-012	6	FLANGE BOLT (5/8-NC X 3")	SEE FOOTNOTE 2
29.	309-138	2	RETAINER	
30.	106-383	2	FLG LK SCREW (M10-1.50 X 30mm)	
31.	331-751	1	80" CUTTING EDGE	
32.	322-360	2	FITTING GUARD (3.0" CYL)	OPTION
33.	106-330	4	SCREW (M8-1.25 X 70mm)	OPTION
34.	106-386	4	FLG LOCKNUT (M8-1.25)	OPTION
35.	105-1187	2	SCREW (M10-1.5 X 35mm)	USE LOCTITE 242
36.	105-1188	2	TAPERED PIN (1.250" X 2.560")	
37.	107-537	2	SCREW (M10-1.5 X 20mm)	USE LOCTITE 242
38.	300-8460	2	TAB PIN (1.250" X 2.57")	


NOT SHOWN:

FOOTNOTES:

1. BACKFILL BLADE 331-749 IS SUPERSEDED BY 300-4321. BEGINS WITH S/N_____.
2. USE OF 300-4321 REQUIRES 6X 106-012 BOLTS (ITEM REF. #28).

NOTE:

BFB CYLINDER GUARD

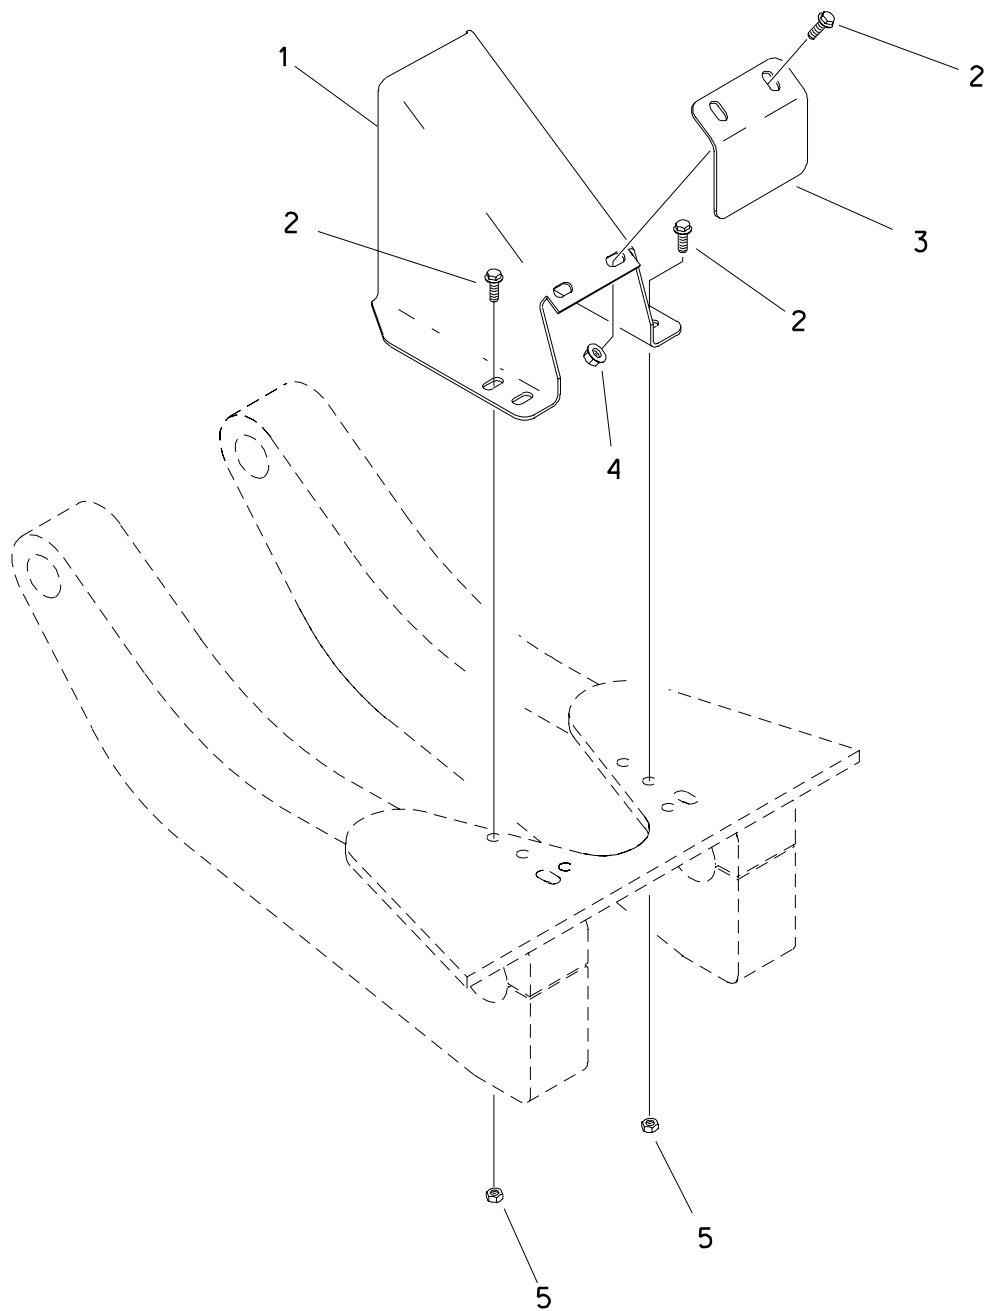

BFB CYLINDER GUARD


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	191-285		CYLINDER GUARD KIT	INCLUDES REF NUMBERS 1-5 & SEE FOOTNOTE 1
1.	319-787	1	CYLINDER GUARD	
2.	106-724	6	FLG SCREW (M10-1.50 X 25mm)	
3.	319-789	1	COVER	
4.	106-387	2	FLG LOCKNUT (M10-1.50)	
5.	106-758	4	LOCKNUT (M10-1.50)	

NOTE
REFER TO INSTALLATION INSTRUCTIONS 051-336 FOR INSTALLING BFB CYLINDER GUARD.

FOOTNOTES
1. THIS OPTION CANNOT BE USED WITH AUX. MANIFOLD KIT 191-272 BECAUSE OF INTERFERENCE.

TRENCH DEPTH METER MODULE

RT70/RT75/RT90/RT95/RT115

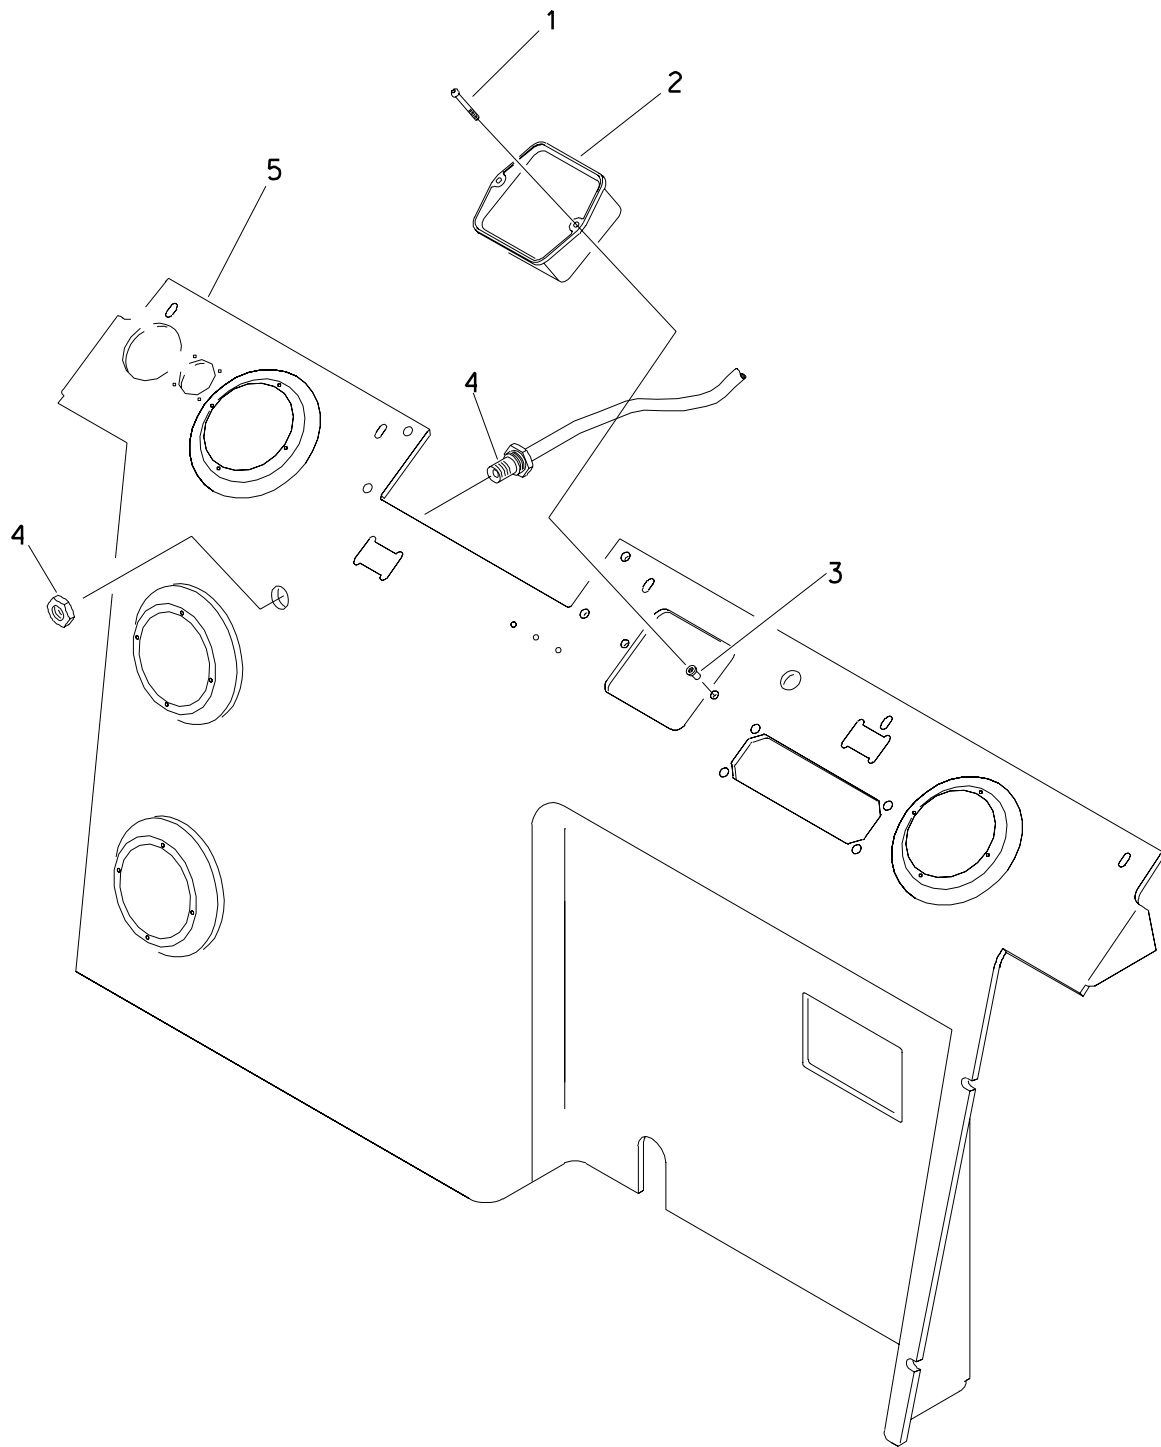



TRENCH DEPTH METER MODULE

RT70/RT75/RT90/RT95/RT115

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	107-580	2	SCREW (M4-0.70 X 16mm, BUT SOC)	
2.	220-086	1	TRENCH DEPTH METER	
3.	107-358	2	WELLNUT (M4-0.7 X 12.67mm LG)	
4.	213-075	1	TDM HARNESS	
5.	319-745	-	REAR PANEL	

FOOTNOTES

TRENCH DEPTH METER/ODOMETER MT

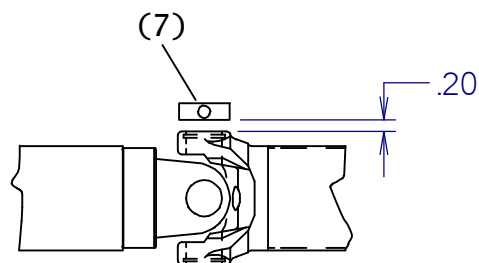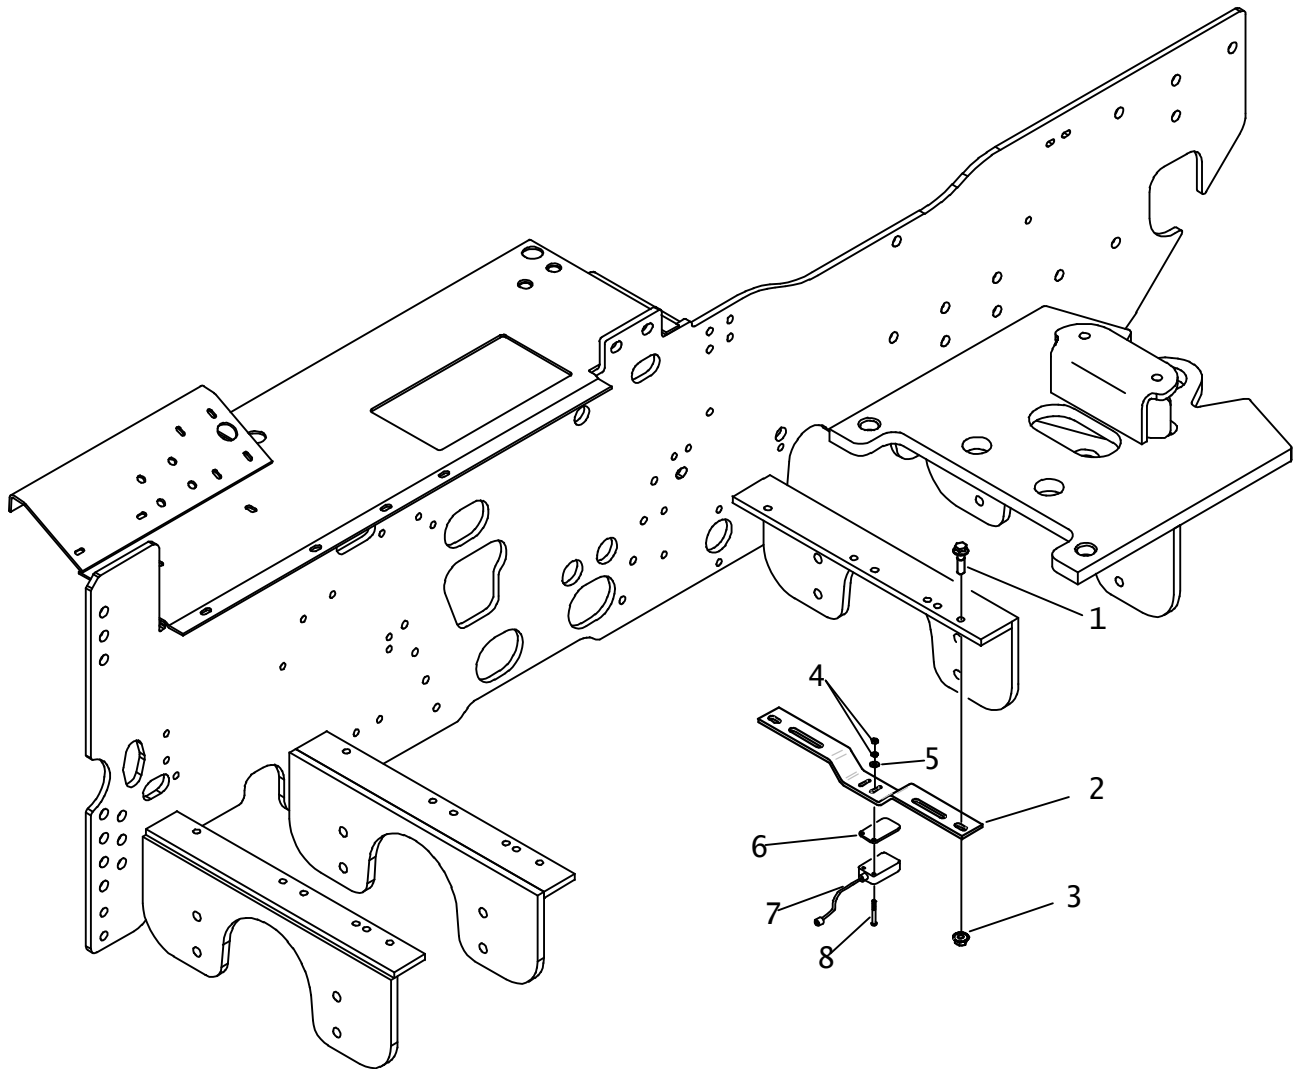

TRENCH DEPTH METER/ODOMETER MT


REF	PART			
NO.	NUMBER	QTY	DESCRIPTION	REMARKS
1.	107-004	3	FLG LK SCREW (M12-1.75 X 45mm)	RT95 / RT115 & SEE FOOTNOTE 2
2.	315-744	1	SENSOR BRACKET	
3.	106-709	3	FLG LK NUT (M12-1.75)	RT95 / RT115 & SEE FOOTNOTE 2
4.	105-680	2	NUT (M4, W/LK WSHR)	
5.	107-597	2	WASHER (M4)	
6.	107-451	AR	SHIM (.135")	SEE FOOTNOTE 1
7.	214-692	1	PROXIMITY SWITCH	
8.	107-414	2	SCREW (M4-0.70 X 30mm, BUT SOC)	

NOT SHOWN

FOOTNOTES

1. SHIMS (107-451) ARE USED TO ADJUST SPACING OF PROXIMITY SWITCH (214-692) FROM THE DRIVE SHAFT.
2. RT75 USES 2X 105-003 (FLG LOCKNUT 5/16-NC) & 2X 105-190 (BOLT 5/16-NC X 2-3/4")

NOTE

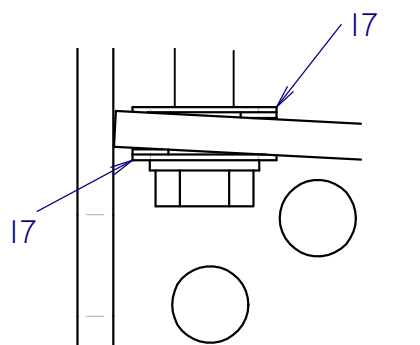

ID0175108

COUNTERWEIGHT/GRILLE TIER 3

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	375-457	1	NOSE CASTING	
2	106-633	6	BOLT (M20-2.50 X 130MM)	SEE FOOTNOTES 1, 2 & 3
3	106-665	6	LOCKNUT (M20-2.50, 10.9)	
4	106-399	12	WASHER (M20, HARDENED)	
5	307-531	2	CLAMP BAR	
6	300-7171	1	GRILLE ASM-L.H.	
7	178-873	2	SCREEN RETAINER	
8	106-574	2	CLIP NUT (M6-1.00)	
9	106-987	2	FLG LK SCREW (M6-1.00 X 16MM)	
10	117-386	2	EXTENSION SPRING	
11	308-723	2	SCREEN	
12	300-4451	1	FRONT HOOD SUPPORT	
13	106-161	1	FLG SCREW (M6-1.00 X 20MM)	
14	106-385	1	FLG LOCKNUT (M6-1.00)	
15	192-006	1	HIGH FREQUENCY HORN	
16	215-1185	1	ENGINE FRAME HARNESS	
17	329-358	4	SHIM	SEE FOOTNOTE 2
18	300-7170	1	GRILLE ASM-R.H.	
19	300-7930	2	RECTANGULAR SHIM	SEE FOOTNOTE 4


NOT SHOWN:

FOOTNOTES:

1. TORQUE BOLT TO 350 ft/lbs.
2. USE SHIMS (REF #17) WHEN MOUNTING NEW CAST NOSE (375-457) ONTO TRACTOR FRAME BEFORE S/N5Z0676.
3. REFER TO NOSE CASTING INSTALLATION INSTRUCTIONS 051-420 FOR CORRECT TORQUE SEQUENCE.
4. NOTE ORIENTATION OF SHIMS, USE AS NEEDED TO ADJUST HEIGHT OF NOSE CASTING.

NOTE:

FRONT COUNTERWEIGHT

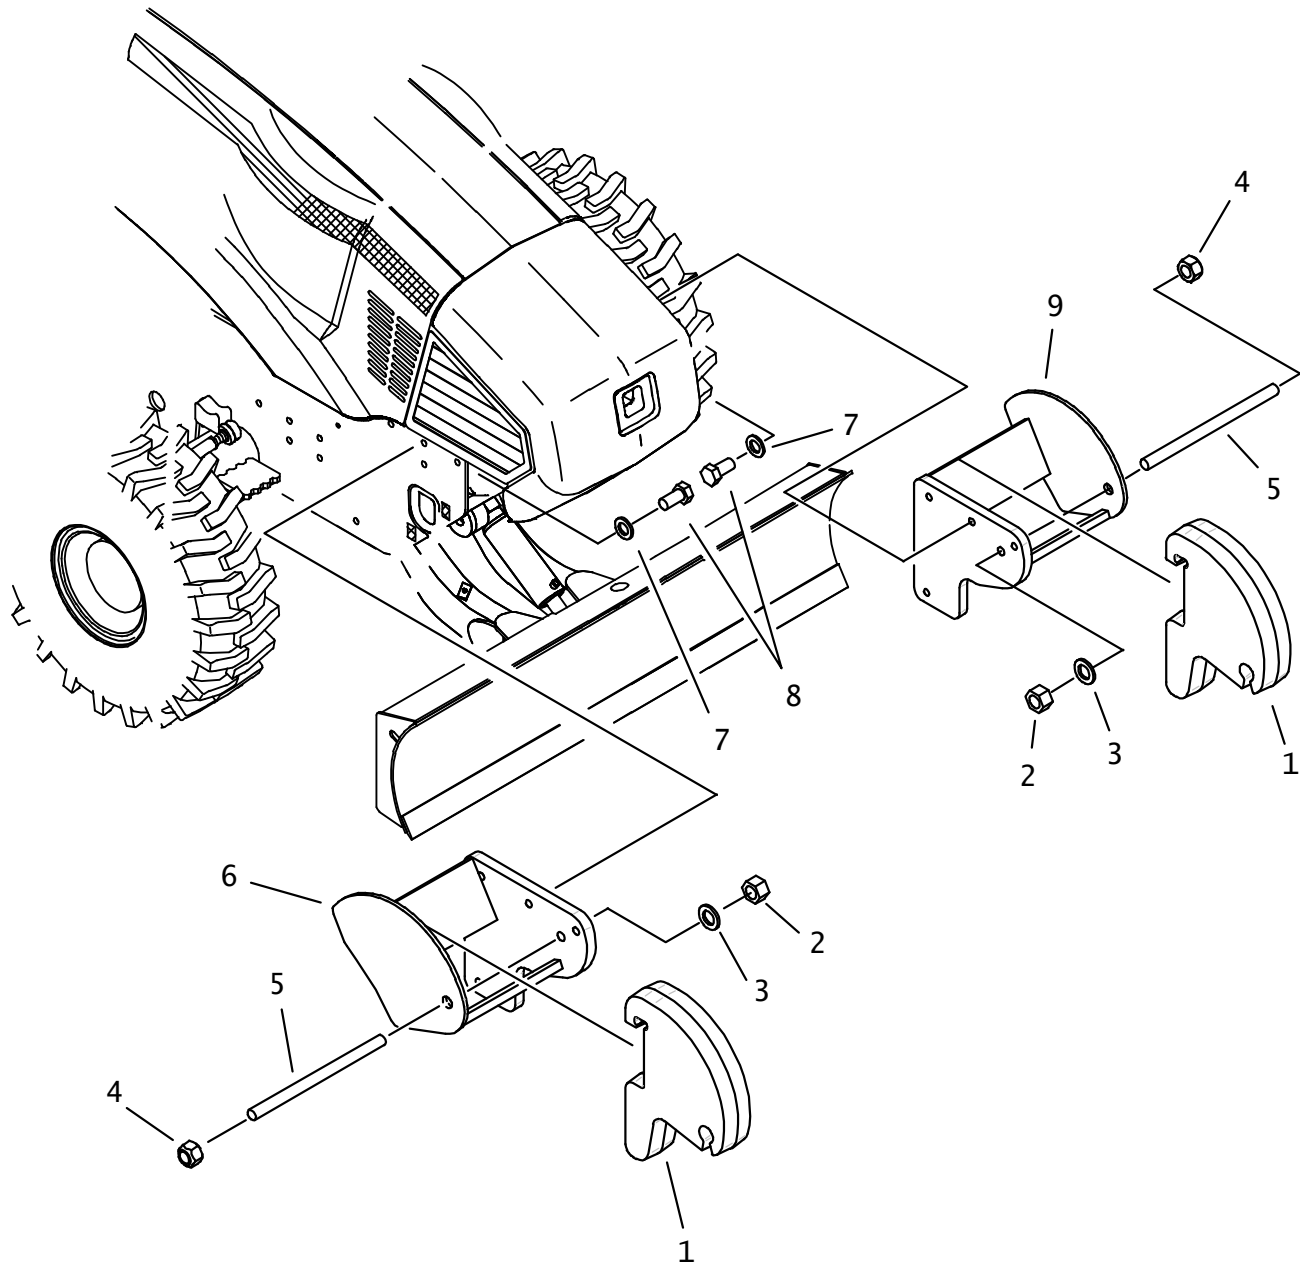

FRONT COUNTERWEIGHT


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	100-863	-	COUNTERWEIGHT KIT	INCLUDES REF. NO'S 1-9
1.	375-369	8	WEIGHT CASTING	
2.	106-352	2	NUT (M24-3.00)	USED ONLY WITH 3 WEIGHTS OR LESS
3.	106-488	2	WASHER (M24, HARDENED)	USED ONLY WITH 3 WEIGHTS OR LESS
4.	106-587	2	LOCKNUT (M24-3.0, PRV TRQ, 10.9)	
5.	179-605	2	ALL THREAD ROD (M24 X 15.00)	
6.	319-948	1	RIGHT WEIGHT RACK	
7.	106-399	8	WASHER (M20, HARDENED)	
8.	106-611	8	SCREW (M20-2.50 X 40MM, 10.9)	
9.	319-947	1	LEFT WEIGHT RACK	

NOT SHOWN:

FOOTNOTES:

NOTE:

ENGINE ENCLOSURE RT95/RT115 T3

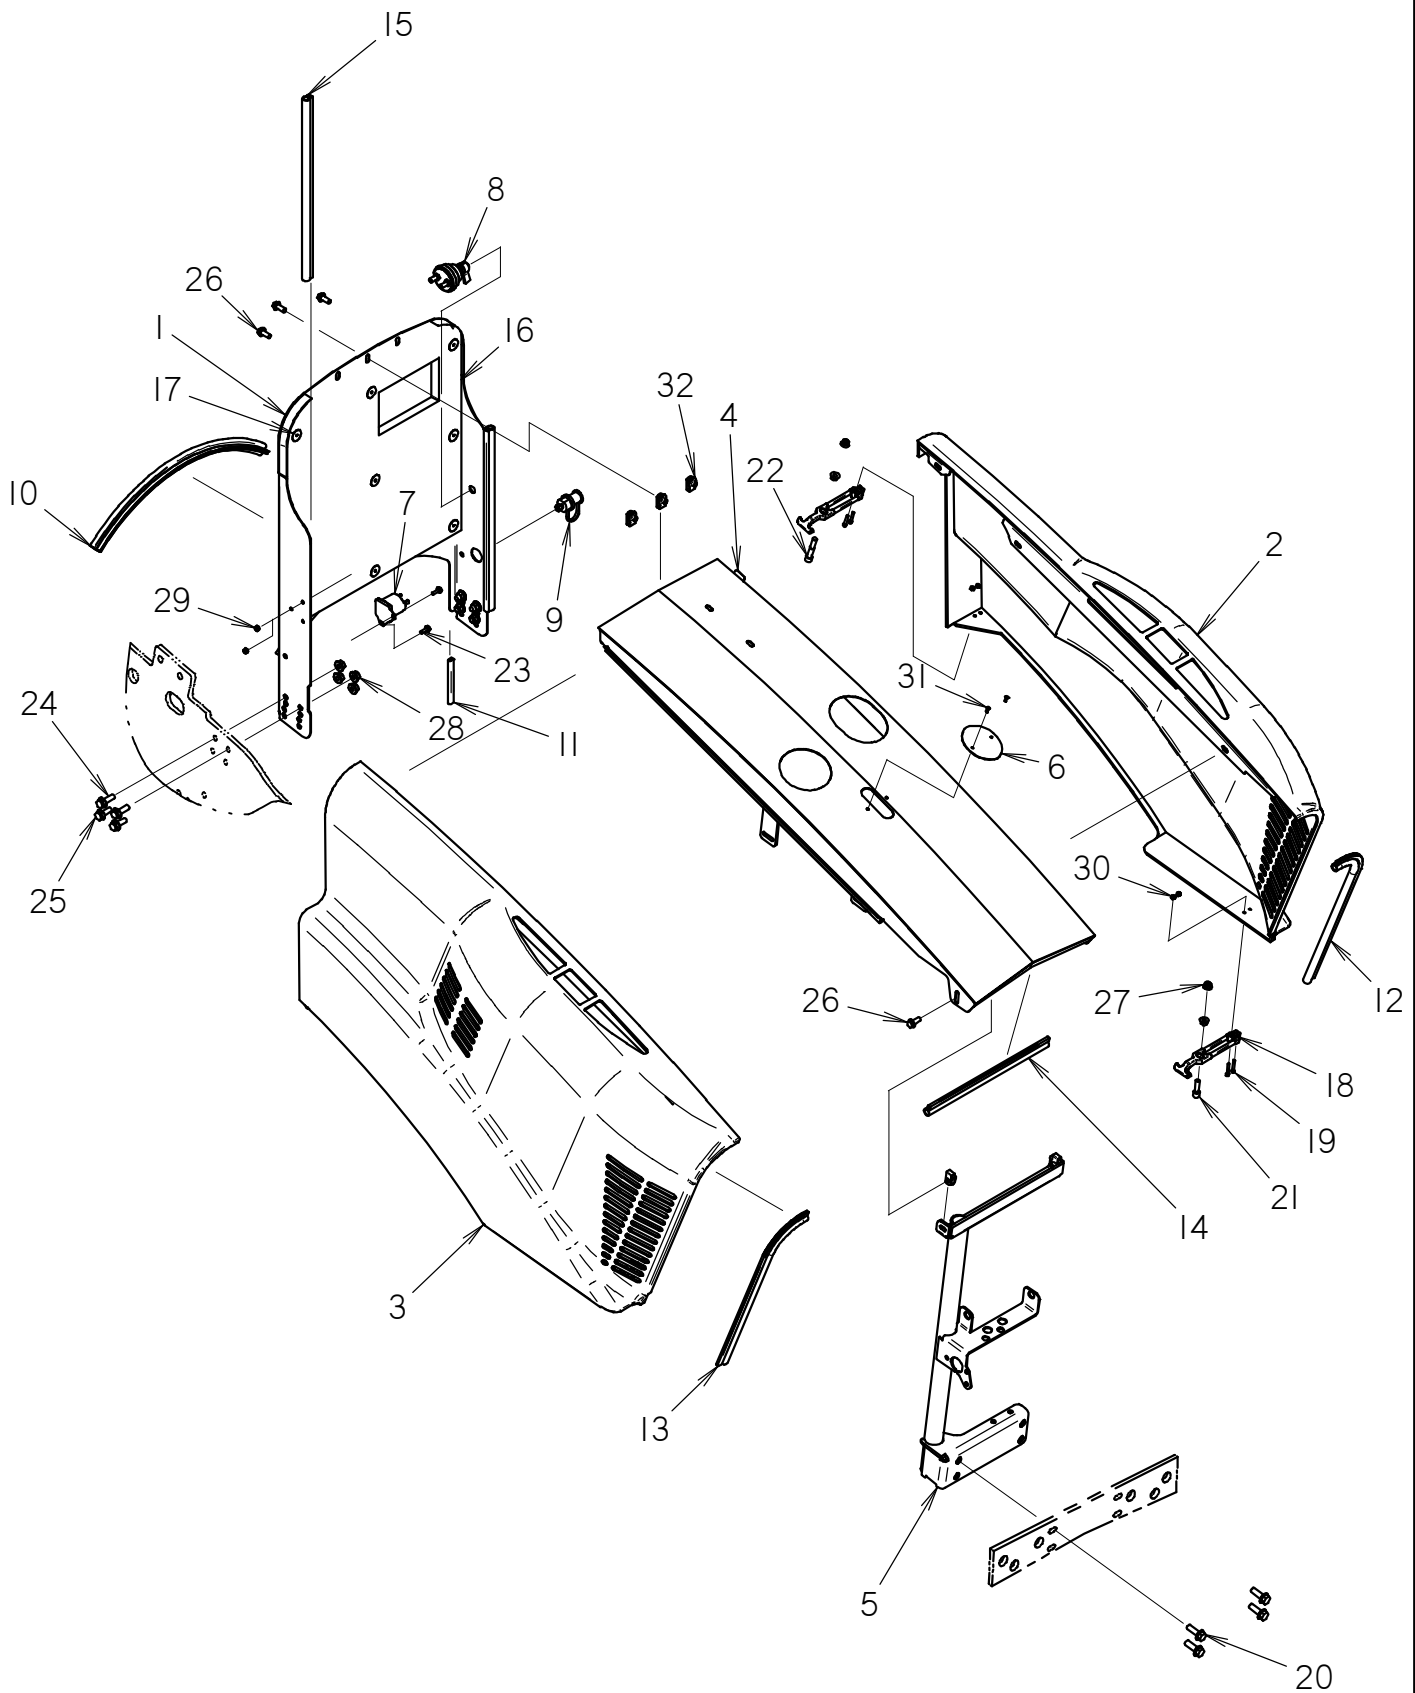

ENGINE ENCLOSURE

RT95/RT115 T3

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	310-716	1	FIREWALL	
2	362-1095	1	LEFT SIDE PANEL ASSEMBLY	
3	362-1096	1	RIGHT SIDE PANEL ASSEMBLY	
4	300-4468	1	MID HOOD	
5	300-4451	1	FRONT HOOD SUPPORT	
6	325-791	1	HOOD CAP	
7	214-979	1	PREHEATER SOLENOID (12V)	
8	217-819	1	BATTERY DISCONNECT SWITCH	INCLUDES HARDWARE
9	211-087	1	BATTERY JUMPER TERMINAL (RED)	
10	116-421	26	BULK EDGE (1/8", SOLD PER FT)	USE 1 @ 26"
11	115-686	10	BULK EDGE (5/32",SOLD PER 1")	USE 2 @ 10"
12	117-344	25	BULK EDGE (3/16", SOLD PER FT)	USE 1 @ 25"
13	117-344	25	BULK EDGE (3/16", SOLD PER FT)	USE 1 @ 25"
14	117-344	16	BULK EDGE (3/16", SOLD PER FT)	USE 1 @ 16"
15	116-489	42	BULK EDGE (1/8",SOLD PER FT)	USE 2 @ 42"
16	117-341	1	SOUND INSULATION	
17	111-043	7	INSULATION STUD	
18	110-681	4	DRAW LATCH	
19	106-408	5	BOLT (#10-24 X 1-1/4",SOC,GD8)	
20	105-831	4	FLG LK BOLT (1/2-NC X 1-1/2")	
21	106-081	2	SCREW (M10-1.50 X 35MM, SOC)	
22	106-725	1	SCREW (M10-1.50 X 65MM, SOC)	
23	106-379	2	FLG LK SCREW (M6-1.00 X 20MM)	
24	106-632	4	FLG LK SCR (M12-1.75X35MM,SER)	
25	106-469	4	FLG SCREW (M12-1.75 X 30MM)	
26	106-724	4	FLG SCREW (M10-1.50 X 25MM)	
27	106-387	6	FLG LOCKNUT (M10-1.50)	
28	106-709	8	FLG LK NUT (M12-1.75)	
29	106-538	2	LOCKNUT (M6-1.00,PRV TRQ,10.9)	
30	106-048	5	LOCKNUT (#10-24)	
31	108-173	2	POP RIVET (5/32 X .525)	
32	106-558	5	CLIP NUT (M10-1.50)	

NOT SHOWN:

191-227

SIDE PANEL LOCK KIT


INCLUDES REF #s 23, 24, & 25

FOOTNOTES:

NOTE:

TILT STEERING

RT95H / RT115 T3

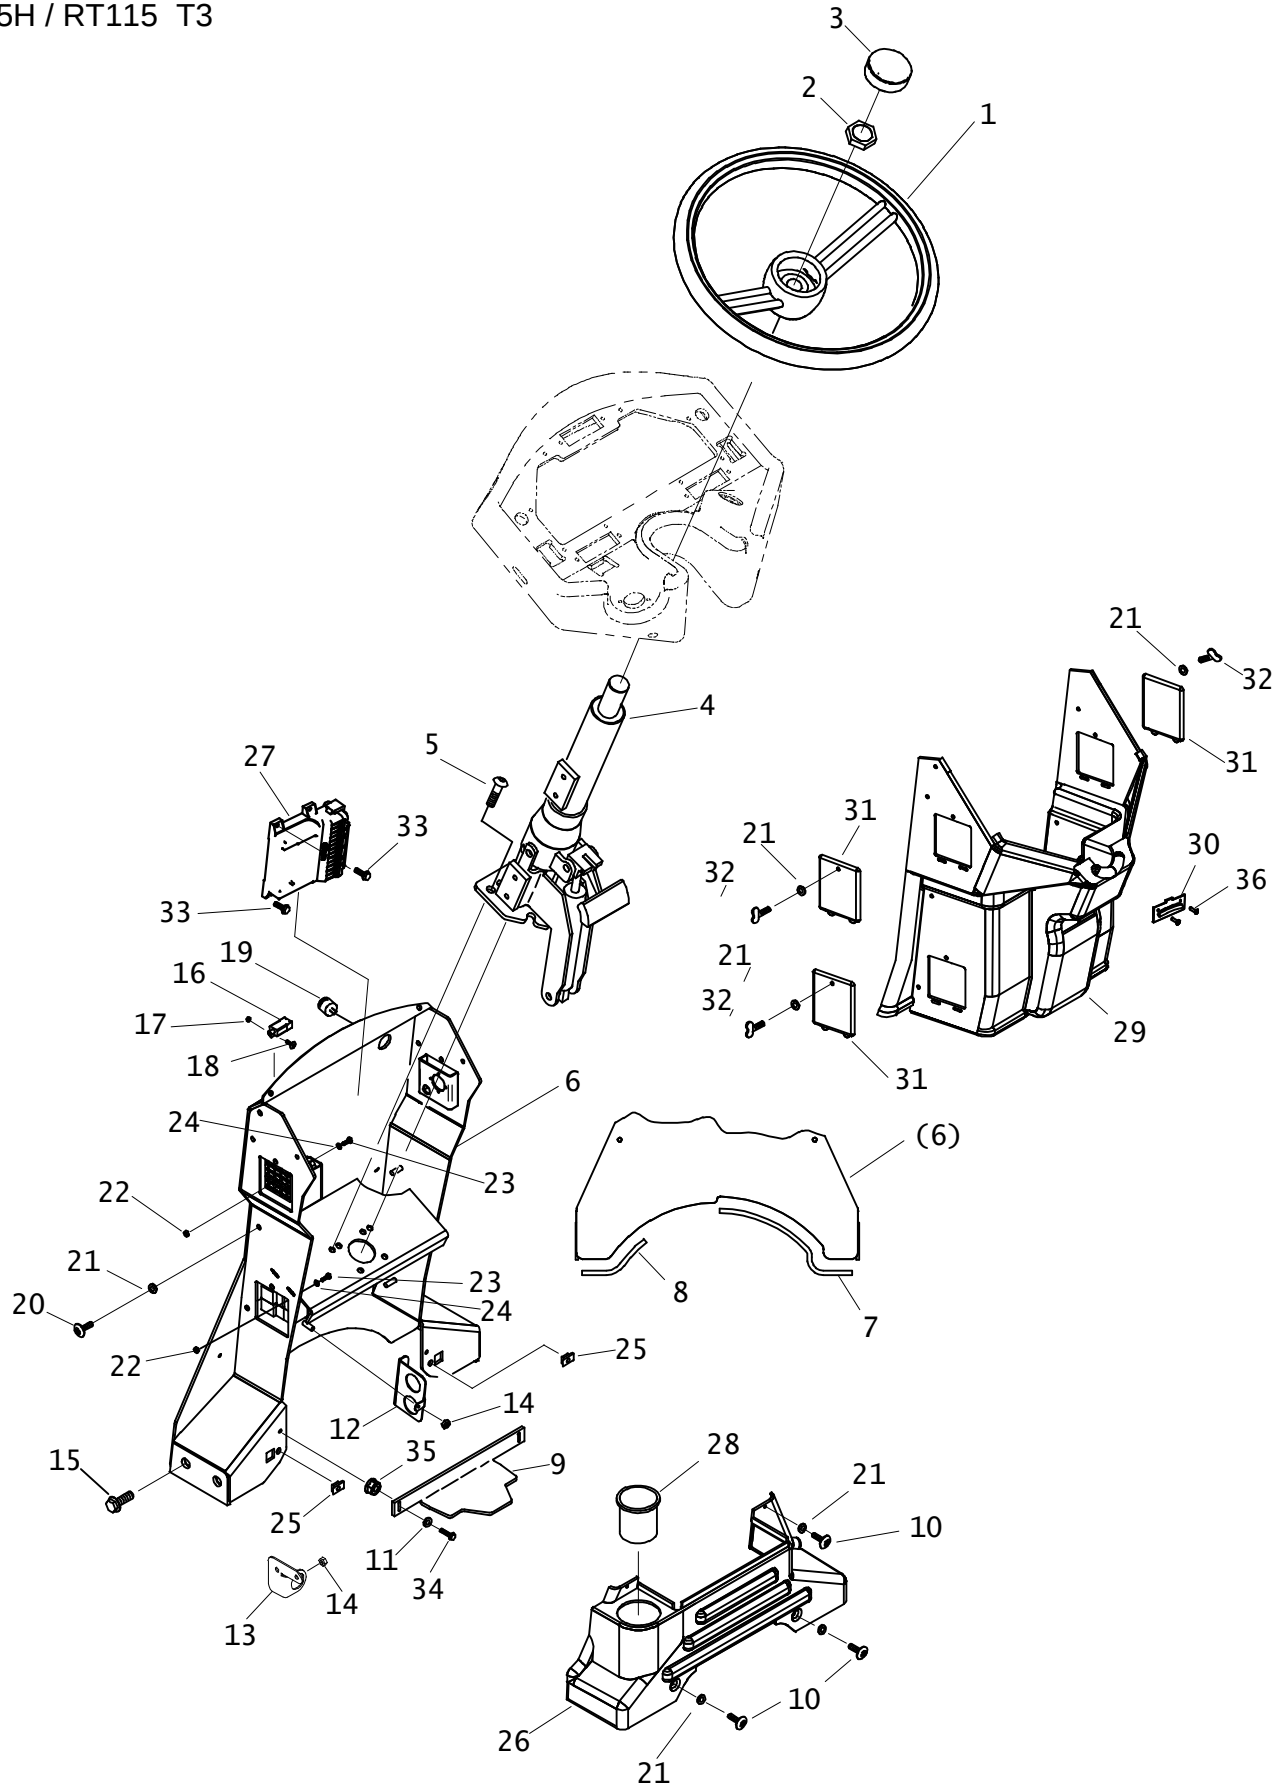

TILT STEERING

RT95H / RT115 T3

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	160-428	1	STEERING WHEEL	
2.	105-361	1	JAM NUT (13/16-NF)	
3.	110-730	1	STEERING WHEEL CAP	
4.	306-433	1	STEERING COLUMN	
	499-855	-	KNOB KIT	
	499-856	-	TILT LEVER KIT	
	499-857	-	SHAFT KIT	
	499-858	-	GAS SPRING KIT (CYLINDER)	
5.	107-864	4	BOLT (3/8-NC X 1.00", BUT SOC	
6.	300-4462	1	PEDESTAL	
7.	115-686	6	BULK EDGE (5/32", SOLD PER 1")	
8.	115-686	13	BULK EDGE (5/32", SOLD PER 1")	
9.	314-487	1	BRACE	
10.	105-1552	4	SCREW (M6-1.00 X 16MM)	
11.	105-095	2	WASHER (1/4")	
12.	319-737	1	DEUTSCH BULKHEAD MOUNT	
13.	319-849	2	BULKHEAD CONNECTOR MOUNT SHEET	
14.	105-092	2	NUT (5/16-NC)	
15.	106-470	4	FLG SCREW (M16-2.0 X 40mm)	
16.	215-1677	1	PLUNGER SWITCH	USE ADAPTER HARNESS 215-1780, SEE FOOTNOTE 2
17.	105-680	2	NUT (M4, w/LKWSHR)	
18.	107-580	2	SCREW (M4-0.70 X 16mm, BUT SOC	
19.	306-603	1	AUDIO ALARM	
20.	105-1550	8	SCREW (M6-1.00 X 25MM)	
21.	107-801	17	WASHER (M6)	
22.	106-850	9	LOCKNUT (M5-0.80)	
23.	107-280	9	SCREW (M5 X 14mm)	
24.	106-388	9	WASHER (M6)	
25.	106-574	2	CLIP NUT (M6-1.00)	
26.	318-557	1	CONSOLE BASE	
27.	220-1241	1	30 PIN CONTROLLER V3	S/N BREAK REQUIRED, SEE FOOTNOTE 1
28.	308-888	1	CUP HOLDER	
29.	300-3709	1	CONSOLE CENTER SECTION	
30.	110-208	1	LEVEL INDICATOR	
31.	318-560	3	ACCESS DOOR	
32.	107-800	3	WING SCREW (M6-1.00 C 25mm)	
33.	106-161	4	FLG SCREW (M6-1.00 X 20MM)	
34.	106-381	2	FLG LK SCREW (M8-1.25 X 25MM)	
35.	106-386	2	FLG LOCKNUT (M8-1.25)	
36.	106-816	2	SCREW M3.5 X 14MM, PH ZPS	

NOT SHOWN:


362-1198	1	MAIN CONSOLE	USED WITH CAB ONLY
362-1197	1	CENTER CONSOLE	USED WITH CAB ONLY
318-906	3	ACCESS DOOR	USED WITH CAB ONLY
318-907	1	BASE	USED WITH CAB ONLY

FOOTNOTE:

- RT95H BEGINS WITH S/N: CMWRT95HLA0000392
RT115 T3 BEGINS WITH S/N: CMWRT115T3PA0000177
- BEGINS WITH S/N CMWRT95HHB0000413, & CMWRT115T3EB0000239.

GAUGE PANEL ASSEMBLY

RT115 T3

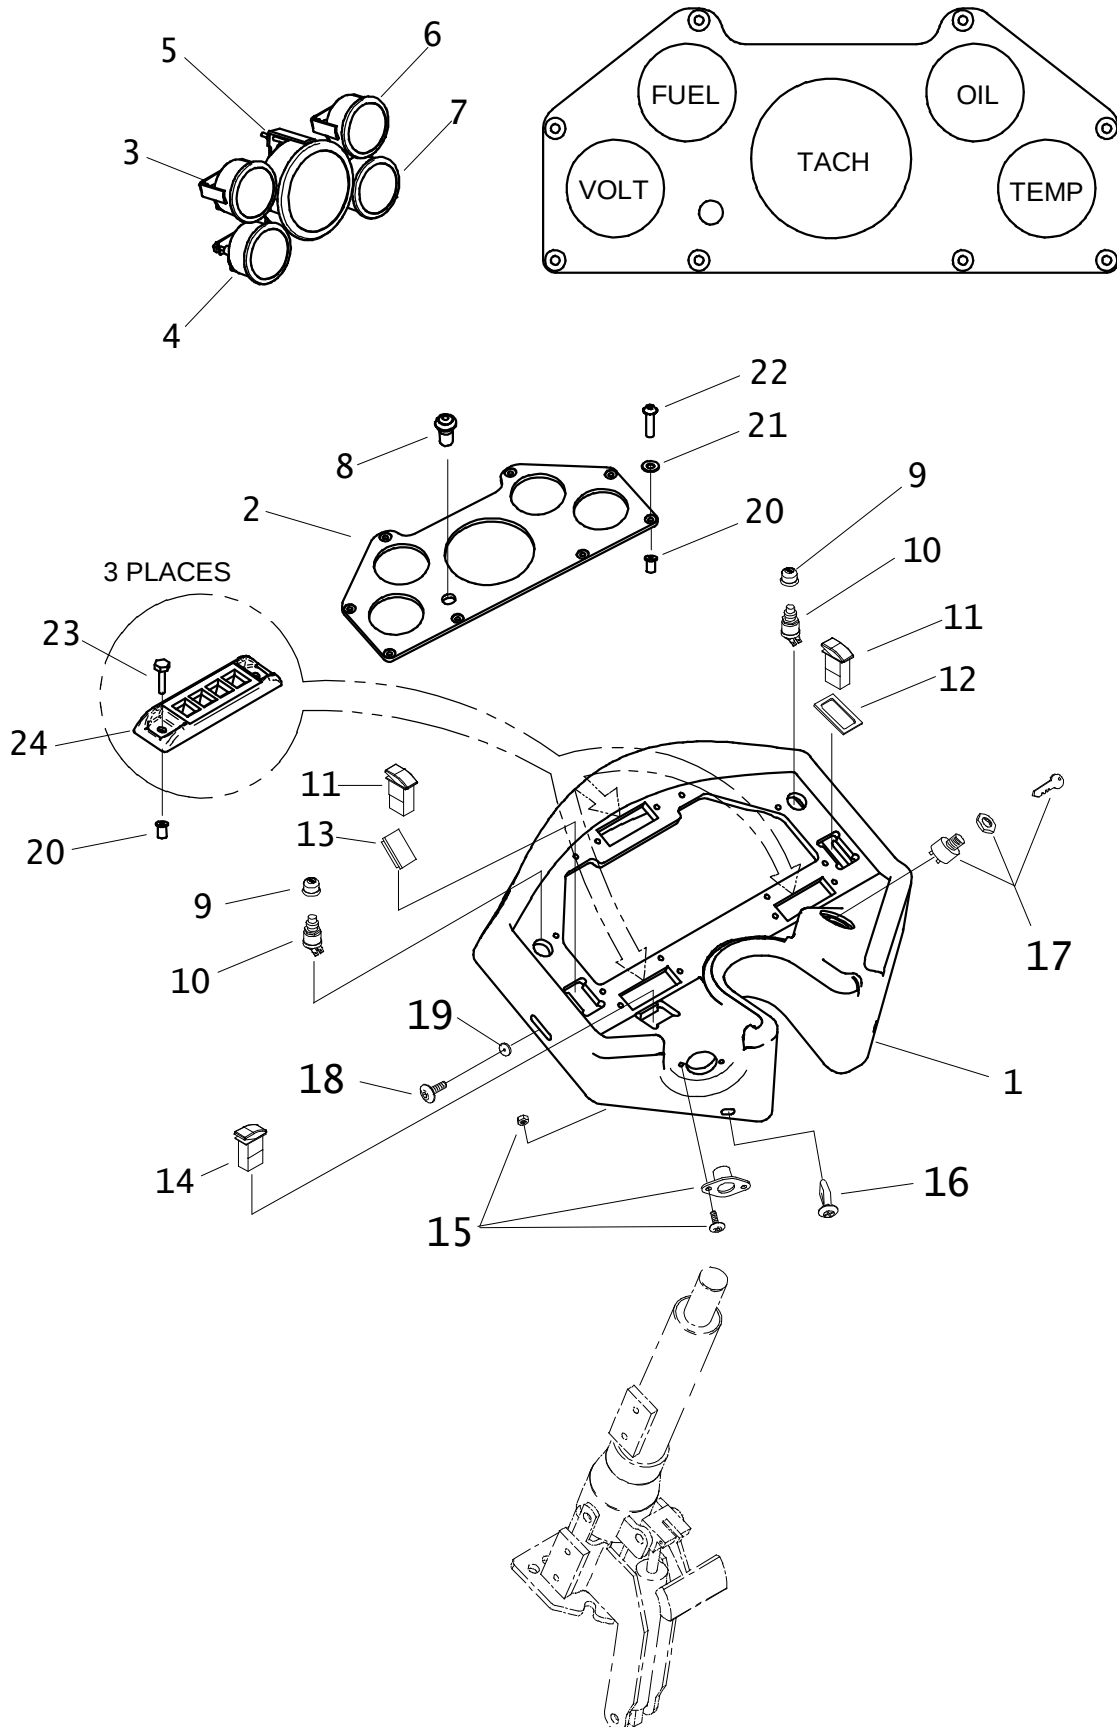

GAUGE PANEL ASSEMBLY

RT115 T3

REF	PART				REMARKS
NO.	NUMBER	QTY	DESCRIPTION		
1.	362-1085	1	MAIN CONSOLE		
2.	362-1086	1	GAUGE CLUSTER PANEL		
3.	211-1020	1	2.06" FUEL GAUGE (BLACK)		
4.	211-1003	1	2.06" VOLTMETER GAUGE (BLACK)		
5.	211-1002	1	3.5" CAN TACHOMETER BK W/DISPLAY		
6.	211-1013	1	2.06" CAN ENG OIL PRESS GAUGE (BLACK)		
7.	211-1012	1	2.06" CAN COOLANT TEMP GAUGE BK		
8.	215-1015	1	MOMENTARY PUSH BUTTON SWITCH		
9.	306-608	2	BUTTON COVER		
10.	306-607	2	HORN BUTTON		
11.	217-764	2	ROCKER SWITCH (SPDT)		
12.	165-817	1	SWITCH GASKET		
13.	362-823	2	COVER		
14.	217-762	1	ROCKER SWITCH (SPDT)		
15.	214-301	1	ACCESSORY SOCKET		
	105-185	2	BOLT (#10-24 X 1/2", RD SLT)		
	106-048	2	LOCKNUT (#10-24)		
16.	107-805	2	PLASTIC FASTENER		
17.	214-852	1	IGNITION SWITCH		
18.	105-1550	6	SCREW (M6-1.00 X 25MM)		
19.	107-801	14	WASHER (M6)		
20.	107-358	14	WELLNUT (M4-0.70 X 12.67mm LG)		
21.	107-597	8	WASHER (M4)		
22.	107-580	8	SCREW (M4-0.70 X 16mm, BUT SOC		
23.	107-393	2	SCREW (M4-0.70 X 16mm, BX)		
24.	220-664	3	INDICATOR DISPLAY		


NOT SHOWN:

FOOTNOTES:

NOTE:

I. BLACK FACE GAUGES BEGIN WITH S/N: CMWR15T3VB0000235.

FENDERS AND COVERS

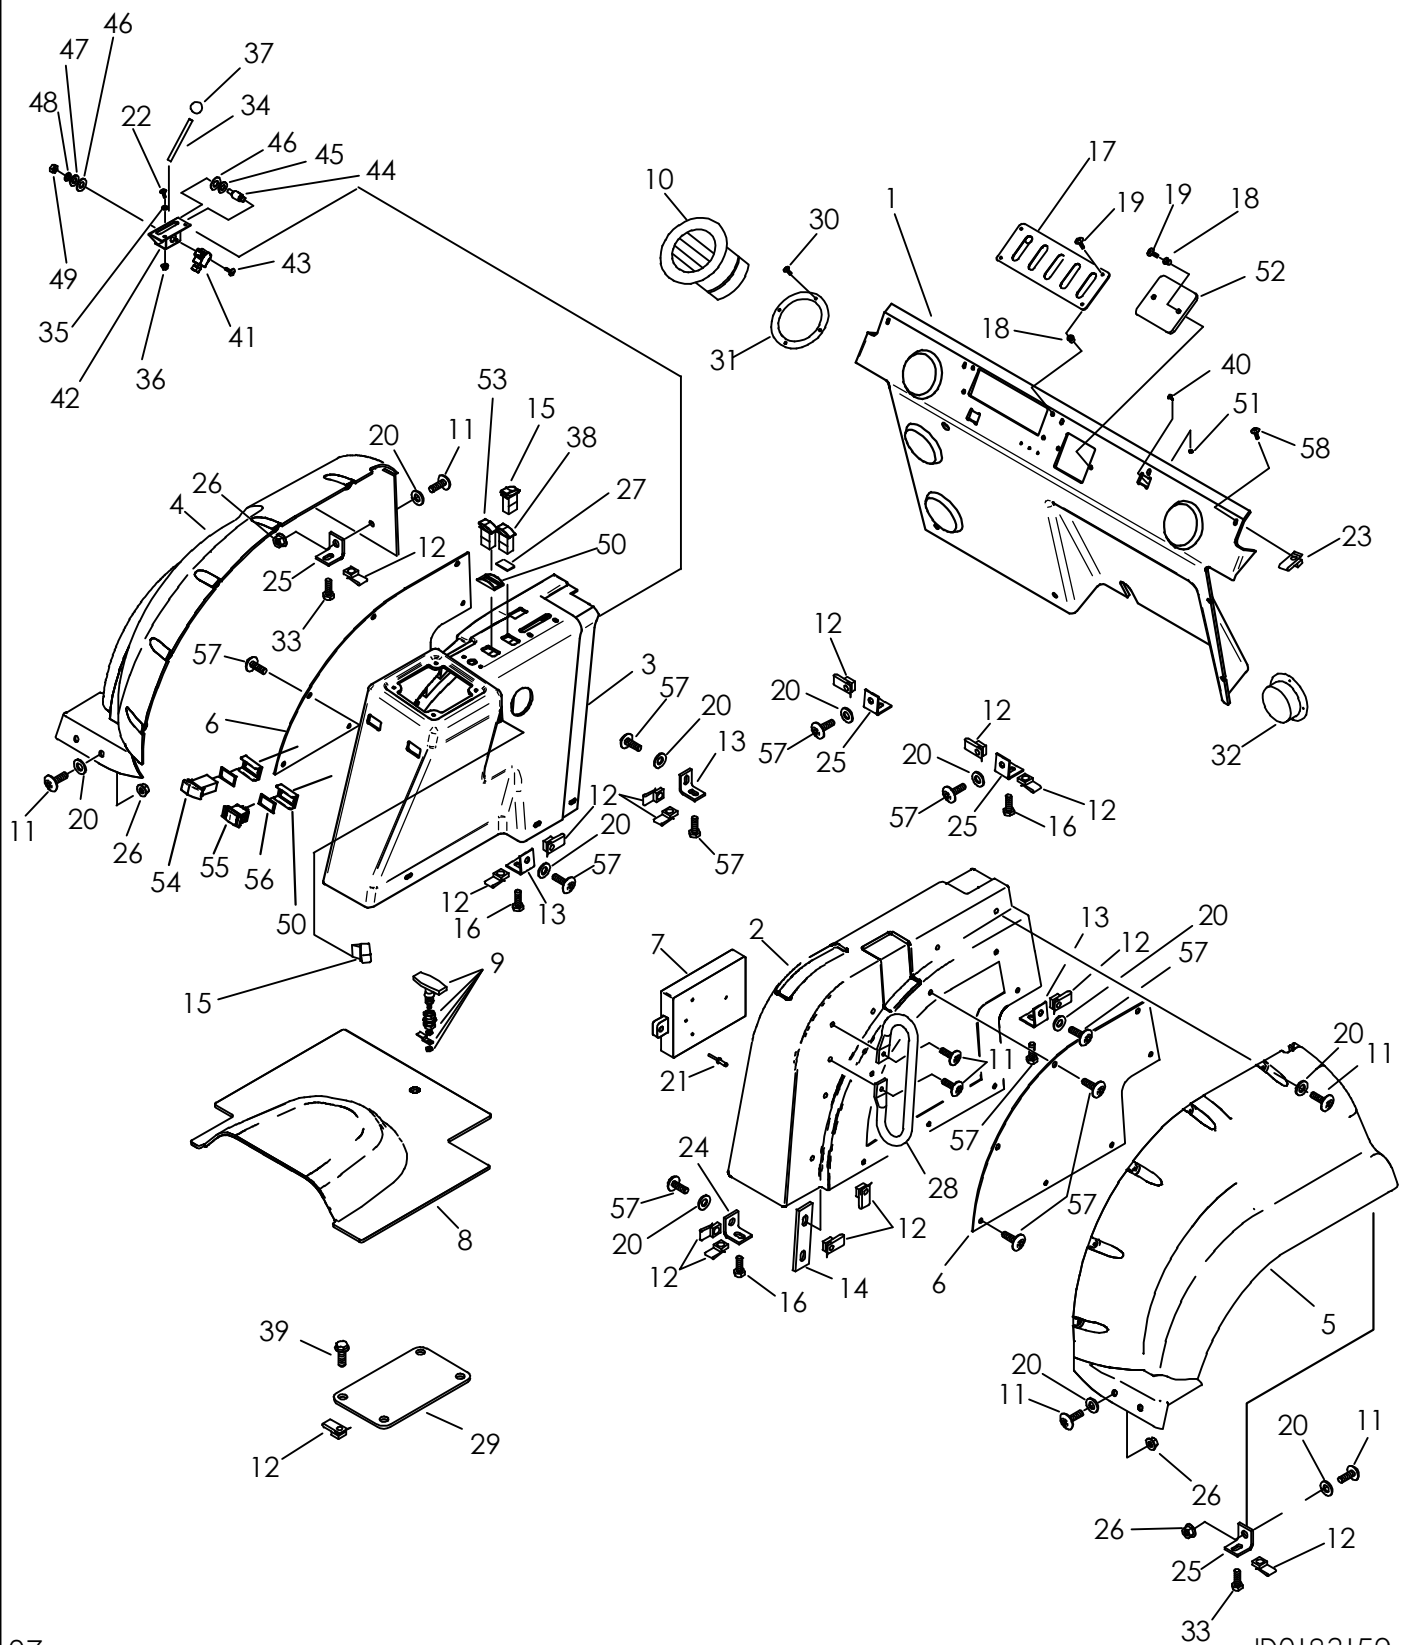

FENDERS AND COVERS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	362-1234	1	REAR PANEL W/O AC DUCT	SEE FOOTNOTE 7
	362-1233	1	REAR PANEL W/ AC DUCT	
2.	306-491	1	LEFT FENDER	
3.	306-490	1	RIGHT FENDER	
4.	313-225	1	RIGHT OUTSIDE FENDER	
5.	313-226	1	LEFT OUTSIDE FENDER	
6.	308-897	2	PANEL	
7.	250-622	1	MANUAL COMPARTMENT	
8.	313-238	1	FLOOR PLATE	
9.	107-461	1	LOCKING LATCH	
10.	120-085	4	ADJUSTABLE LOUVER (23-0005)	
11.	107-778	26	SCREW (M8-1.25 X 30mm,BUT SOC)	
12.	107-135	38	CLIP NUT (M8-1.25)	
13.	306-796	5	TAB	
14.	309-816	2	STRAP	
15.	217-762	2	ROCKER SWITCH (SPDT)	SEE FOOTNOTE 1
16.	106-992	8	FLG LK SCREW (M8-1.25 X 25mm)	
17.	307-644	1	COVER	
18.	107-358	10	WELLNUT (M4-0.7 X 12.67mm LG)	
19.	107-580	6	SCREW (M4-0.70 X 16mm,BUT SOC)	
20.	107-629	37	WASHER (M8)	
21.	110-348	3	POP RIVET (3/16" X .664")	
22.	106-640	2	SCREW (M6-1.00 X 20mm, BUT. SOC.)	
23.	106-574	5	CLIP NUT (M6-1.00)	
24.	306-795	1	TAB	
25.	309-434	6	TAB	
26.	106-386	9	FLG LOCKNUT (M8-1.25)	
27.	362-823	6	COVER	SEE FOOTNOTES 2 & 6
28.	117-360	2	GRAB HANDLE	
29.	309-847	1	FUEL SENDER COVER	
30.	106-155	20	SCREW (#4-40 X 1", PAN PLPS)	
31.	120-084	4	HOSE ADAPTER (23-0048)	
32.	120-123	1	HOSE ADAPTER (23-0090)	
33.	106-989	2	FLG LK SCREW (M8-1.25 X 35mm)	
34.	117-342	1	ROD	
35.	107-744	2	WASHER (M6)	
36.	106-385	2	FLG LOCKNUT (M6-1.00)	
37.	110-590	1	KNOB (3/8-NC, ORANGE)	
38.	217-764	1	ROCKER SWITCH (SPDT)	SEE FOOTNOTE 3
39.	106-992	4	FLG LK SCREW (M8-1.25 X 25mm)	

FOOTNOTES:

- 1) 1 REQUIRED WITH AXLE LOCK &
1 REQUIRED WITH REEL WINDER
 - 2) 1 REQUIRED PER FOLLOWING OPTION NOT USED: FRAME TILT, REAR STEER, AXLE LOCK, REEL WINDER
 - 3) 1 REQUIRED WITH FRAME TILT OPTION
 - 4) 1 REQUIRED WITH STEER SELECT OPTION
 - 5) USED WITH REAR STEER SYSTEM. FIELD INSTALLED REAR STEER KITS ALSO USE BRACKET 300-9262 @ 1X, BOLTS 107-312 @ 4X, AND NUTS 107-871 @ 4X.
BEGINS WITH S/N'S: CMWRT95MH90000290, CMWRT95HV90000367, AND CMWR15T3C90000132.
 - 6) UNITS WITHOUT REAR STEER USE PLUGS 362-823.
 - 7) LOCATE AND CUT A 3.25" DIAMETER HOLE IN THE 362-1233 REAR PANEL TO ALIGN WITH THE AC INLET DURING INSTALLATION.
- NOTE:

FENDERS AND COVERS

REF	PART				REMARKS
NO.	NUMBER	QTY	DESCRIPTION		
40.	107-269	4	SCREW (#4-40 X 3/4", PAN)		
41.	217-304	1	THROTTLE SENSOR		
42.	319-498	1	THROTTLE BRACKET		
43.	105-815	2	BOLT (#10-24 X 1", PAN SLT)		
44.	179-554	1	THROTTLE PIVOT PIN		
45.	106-598	1	WASHER (9/16", HARDENED)		
46.	107-529	2	WASHER (1.250", UHMW)		
47.	105-118	1	WASHER (3/8")		
48.	105-805	1	BELLEVILLE WASHER (3/8")		
49.	105-287	1	LOCKNUT (3/8-NC)		
50.	110-854	6	SWITCH ACTUATOR GUARD		
51.	105-662	4	NUT (#4-40)		
52.	322-871	1	TDM COVER		
53.	217-854	1	SWITCH		SEE FOOTNOTE 4
54.	217-072	1	ROCKER SWITCH		SEE FOOTNOTES 5 & 6
55.	217-817	1	ROCKER SWITCH (SEALED)		SEE FOOTNOTES 5 & 6
56.	165-817	2	SWITCH GASKET		SEE FOOTNOTES 5 & 6
57.	106-163	22	FLG SCREW (M8-1.25 X 30MM)		
58.	105-1549	7	SCREW (M6-1.00 X 20MM)		

FOOTNOTES:

NOTE:



FUEL TANK

RT95/RT115 T3

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	194-165	1	FUEL TANK	
2.	110-563	3	SPRING CLAMP (3/8")	
3.	156-268	1	FUEL STRAINER (04H)	
	194-505	1	FUEL PICKUP (04H)	
4.	364-567	1	FILL NECK	SEE FOOTNOTE 3
	153-760	1	CAP	
	153-594	2	GASKET, FILL NECK CAP	
	153-607	1	FLANGE GASKET	
	153-761	1	FLANGE	
	107-781	6	HEX SCREW (#10-24 X 5/8")	
	153-606	1	STRAINER BASKET	
5.	156-269	2	S/O COUPLER (04H-05H90)	
6.	110-528	4	SNAP-ON CLAMP (.531" TO .593")	
7.	106-387	4	FLG LOCKNUT (M10-1.50)	
8.	319-484	1	COVER	
9.	116-108	AR	BULK HOSE (5/16", SOLD PER 1")	USE 1 @ 65" FOR RT95H & RT115, USE 1 @ 80" FOR RT95M
10.	116-108	AR	BULK HOSE (5/16", SOLD PER 1")	USE 1 @ 51" FOR RT95H & RT115, USE 1 @ 80" FOR RT95M
11.	215-1368	1	FUEL SENDER	
	165-704	1	GASKET	
12.	116-325	2	GROMMET (.362")	
13.	106-558	4	CLIP NUT (M10-1.50)	
14.	156-108	1	S/O COUPLER (08N-08H90)	
15.	110-217	1	WORM CLAMP(7/16" TO 1")	
16.	116-322	AR	BULK HOSE (1/2",SOLD PER 1")	USE 1 @ 48"
17.	111-021	1	BREATHER CAP (TANK)	
18.	105-818	2	BOLT (1/4-NC X 1-1/2")	
19.	110-411	1	BOLT-ON CLAMP (3/4", SET)	
20.	322-289	1	BACKUP (BOLT-ON)	
21.	118-096	AR	BULK FUEL TUBING (1/4", PER FT)	USE 1 @ 24"
22.	118-096	AR	BULK FUEL TUBING (1/4", PER FT)	USE 1 @ 20"
23.	114-002	1	PLUG (06N, SOC)	
24.	105-829	2	FLG LK BOLT(1/2 NC X 1")	
25.	106-386	2	FLG LOCKNUT (M8-1.25)	

NOT SHOWN:

FOOTNOTES:

1. ARRANGE LINER PADS IN AN EVEN PATTERN ON INTERIOR SURFACES OF THE SIDE PLATES, BOTTOM PLATE AND KICK PLATE. USE .12 THICK AND .25 THICK TO PROVIDE A SNUG FIT FOR THE TANK. APPLY AND ADJUST THE LINER PADS UNTIL THE LEAST MOVEMENT POSSIBLE HAS BEEN ACCOMPLISHED. ONCE FILLED THE TANK SHOULD NOT SHIFT.
2. LAYER SUPPORT MAT BETWEEN LEDGE OF TANK AND UNDERSIDE OF STEP UNTIL FIRM PRESSURE IS REQUIRED TO ALIGN SLOTS AND INSERT SCREWS
3. ORIENT PADLOCK LUGS AWAY FROM STAIRWELL

NOTE:

FUEL TANK

RT95/RT115 T3


REF	PART				REMARKS
NO.	NUMBER	QTY	DESCRIPTION		
26.	300-9750	1	CRADLE WELDMENT		
27.	105-1190	5	BOLT (#10-24 X 1-1/4")		
28.	117-425	AR	LINER PAD (.12"THK)		SEE FOOTNOTE 1
	117-463	AR	LINER PAD (.25"THK)		
29.	313-821	1	TREAD, FUEL		
30.	107-001	12	FLG LK SCREW (M10-1.50 X 25mm)		
31.	117-442	AR	SUPPORT MAT		SEE FOOTNOTE 2
32.	106-198	2	FLG LOCKNUT (1/2 NC, GD8)		
33.	313-911	1	LEFT AIR DEFLECTOR		
34.	105-831	2	FLG LOCK BOLT (1/2-NC X 1-1/2")		
35.	110-333	1	BOLT ON CLAMP (1")		
36.	105-033	1	BOLT (5/16-NC X 2")		
37.	313-226	-	LEFT OUTSIDE FENDER		
38.	107-629	3	WASHER (M8)		
39.	107-778	2	SCREW (M8-1.25 X 30mm, BUT SOC)		
40.	106-640	1	SCREW (M6-1.00 X 20mm, BUT SOC)		
41.	106-574	1	CLIP NUT (M6-1.00)		
42.	105-003	1	FLG LOCKNUT (5/16-NC)		
43.	117-671	1	ABRASION SLEEVE (1" X 12")		
44.	319-452	1	CONNECTOR PLATE		

NOT SHOWN:

FOOTNOTES:

NOTE:

HYDRAULIC RESERVOIR RT95 / RT115 T3

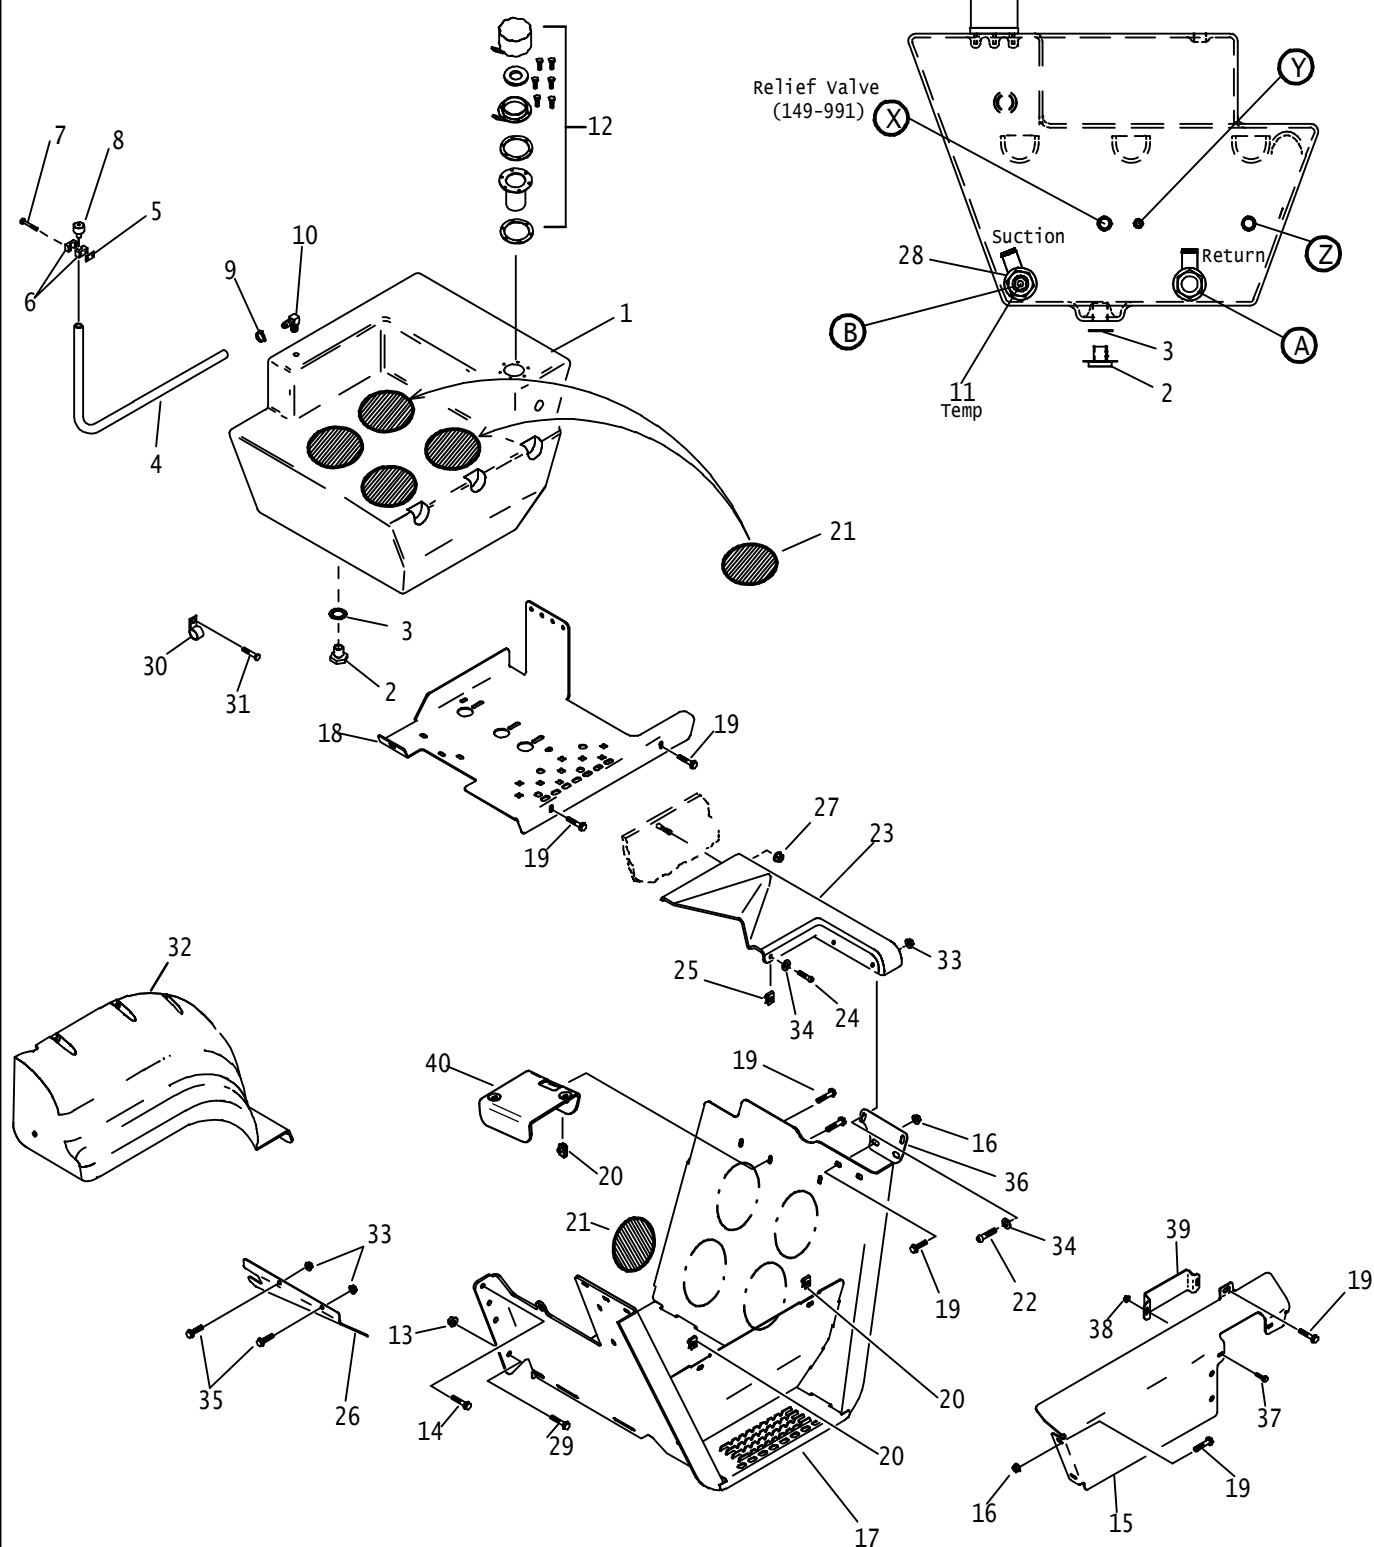

HYDRAULIC RESERVOIR

RT95 / RT115 T3

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	150-1388	1	HYDRAULIC RESERVOIR	
	121-040	-	SIGHT GLASS	
2.	157-466	1	DRAIN PLUG (1-UNF, .375 ORF)	
3.	500-749	1	O-RING (211 D70)	
4.	116-322	AR	BULK HOSE (1/2", SOLD PER 1")	USE 1 @ 48"
5.	322-289	1	BACKUP (BOLT-ON)	
6.	110-411	1	BOLT-ON CLAMP (3/4", SET)	
7.	105-818	2	BOLT (1/4-NC X 1-1/2")	
8.	111-021	1	BREATHER CAP (TANK)	
9.	110-217	1	WORM CLAMP (7/16" TO 1")	
10.	156-108	1	S/O COUPLER (08N-08H90)	
11.	214-854	-	TEMPERATURE SWITCH	
12.	364-567	1	FILL NECK	SEE FOOTNOTE 2
	153-760	1	CAP	
	153-594	1	GASKET, FILL NECK CAP	
	153-607	1	FLANGE GASKET	
	153-606	1	STRAINER BASKET	
	153-761	1	FLANGE	
	107-781	6	HEX SCREW (#10-24 X 5/8)	
13.	106-198	2	FLG LOCKNUT (1/2-NC, GD8)	
14.	105-829	6	FLG LK BOLT (1/2-NC X 1")	
15.	320-118	1	BATTERY COVER	SEE FOOTNOTE 3
16.	106-387	6	FLG LOCKNUT (M10-1.50)	
17.	300-9750	1	CRADLE WELDMENT	
18.	320-116	1	BATTERY TRAY STEP	
19.	107-001	8	FLG LK SCREW (M10-1.50 X 25mm)	
20.	106-558	3	CLIP NUT (M10-1.50)	
21.	117-425	AR	LINER PAD (.12"THK)	SEE FOOTNOTE 1
	117-463	AR	LINER PAD (.25"THK)	SEE FOOTNOTE 1
22.	107-778	2	SCREW (M8-1.25 X 30mm, BUT SOC)	
23.	313-910	1	RIGHT AIR DEFLECTOR	
24.	106-640	1	SCREW (M6-1.00 X 20mm, BUT SOC)	
25.	106-574	1	CLIP NUT (M6-1.00)	
26.	315-440	1	TOP MUD SHIELD	
27.	105-003	1	FLG LOCKNUT (5/16-NC)	
28.	157-987	1	S/O COUPLER (20S-16H90,04NF)	
	514-446	1	REDUCER (24S-20SF)	

40. 300-4466 1 FUSE HOLDER MOUNT

FOOTNOTES

1. ARRANGE LINER PADS IN AN EVEN PATTERN ON INTERIOR SURFACES OF THE SIDE PLATES, BOTTOM PLATE AND AND KICK PLATE. USE .12" THICK AND .25" THICK TO PROVIDE A SNUG FIT FOR THE TANK. APPLY AND ADJUST THE LINER PADS UNTIL THE LEAST MOVEMENT POSSIBLE HAS BEEN ACCOMPLISHED. ONCE FILLED THE TANK SHOULD NOT SHIFT.
2. ORIENT PADLOCK LUGS AWAY FROM STAIRWELL.
3. REFER TO PAGE "BATTERY INSTALLATION" FOR BATTERY INSTALLATION DETAILS.

HYDRAULIC RESERVOIR


RT95 / RT115 T3

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
29.	105-831	2	FLG LK BOLT (1/2-NC X 1-1/2")	
30.	110-333	1	BOLT-ON CLAMP (1")	
31.	105-033	1	BOLT (5/16-NC X 2")	
32.	313-225	-	RIGHT OUTSIDE FENDER	
33.	106-386	4	FLG LOCKNUT (M8-1.25)	
34.	107-629	3	WASHER (M8)	
35.	106-162	2	FLG SCREW (M8-1.25 X 20mm)	
36.	319-452	1	CONNECTOR PLATE	
37.	106-379	2	FLG LK SCREW (M6-1.00 X 20mm)	
38.	106-353	2	FLG NUT (M6-1.00)	
39.	323-279	1	COVER	
40.	300-4466	1	FUSE HOLDER MOUNT	

FOOTNOTES

SEAT PLATFORM

RT70M - RT90M - RT70H - RT90H
RT115 - RT115T2

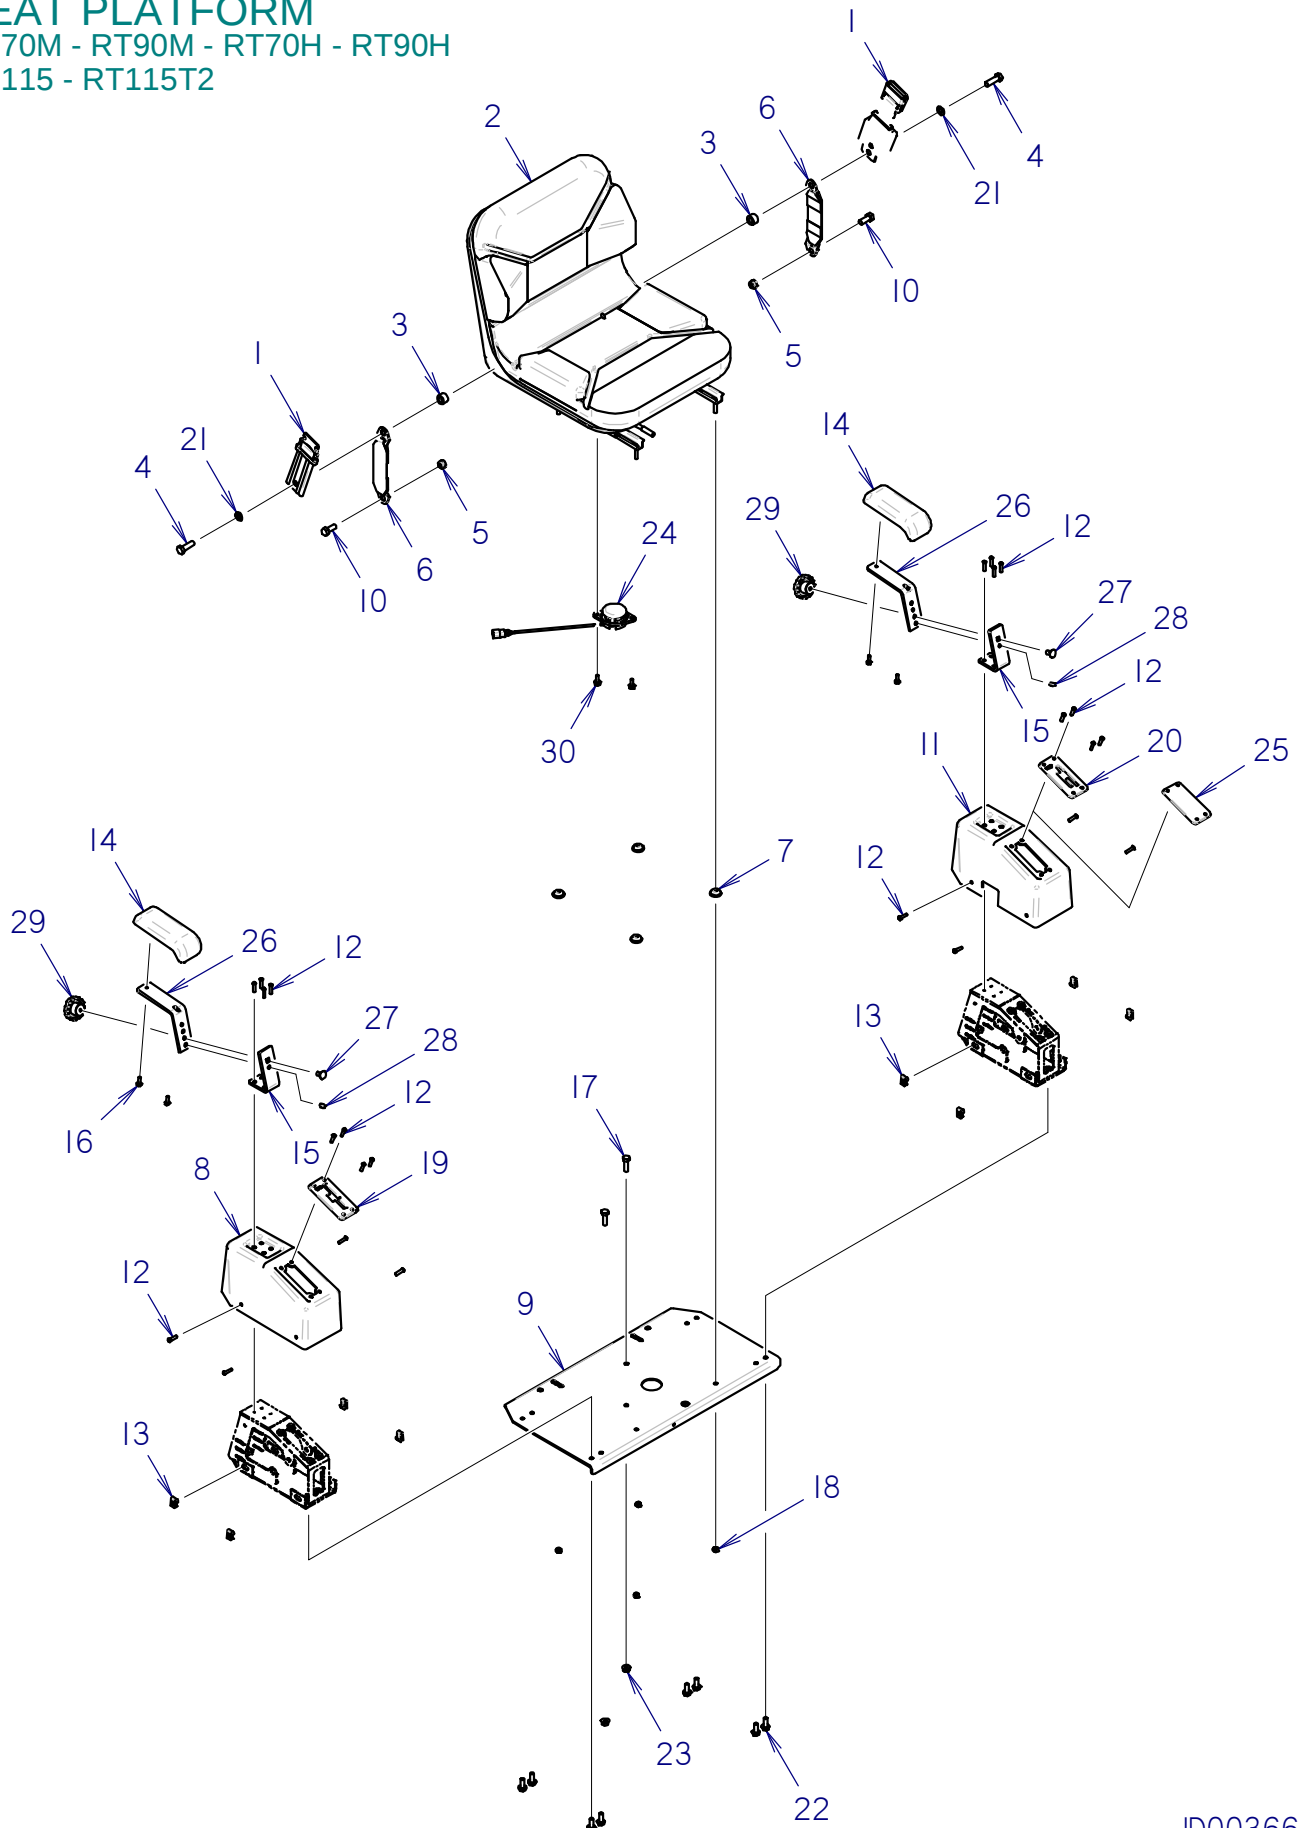

SEAT PLATFORM

RT70M - RT90M - RT70H - RT90H

RT115 - RT115T2

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	117-924	1	SEAT BELT SET W/ 5.75" TONGUE	
	117-925	-	SEAT BELT TONGUE (5.75")	
2	117-429	1	SEAT	
	115-445		REPLACEMENT SEAT	
	115-428		ADJUSTABLE TRACK	
3	184-252	2	BUSHING (.562" X 1" X .590")	
4	106-333	2	SCREW (M12-1.75 X 40MM, 8.8)	
5	106-031	2	LOCKNUT (M12-1.75, NLK)	
6	115-430	2	SEAT BELT TETHER	
7	105-267	4	CUP WASHER (5/16")	
8	309-431	1	RIGHT SEAT CONSOLE	
9	314-594	1	SEAT BASE	
10	105-273	2	SCREW (M12-1.75 X 30MM)	
11	305-649	1	LEFT SEAT CONSOLE	
12	107-312	32	SCREW (M6-1.00 X 25MM, BUT SOC)	
13	106-574	8	CLIP NUT (M6-1.00)	
14	117-314	2	ARMREST	
15	309-294	2	LOWER ARMREST BRACKET	
16	106-159	4	FLG SCREW (1/4-NC X 3/4")	
17	105-876	2	SCREW (M10-1.50 X 35MM)	
18	105-089	4	LOCKNUT (5/16-NC)	
19	309-295	1	Z-GATE	USED WITH GROUND DRIVE ON ALL MACHINES
	319-158	1	Z-GATE	USED WITH GROUND DRIVE ON ALL MACHINES
20	313-411	1	Y-GATE	USED WITH COMBO ATTACHMENT
	316-479	1	PLOW GATE	USED WITH PLOW ATTACHMENT
21	106-391	2	WASHER (M12)	
22	107-001	8	FLG LK SCREW (M10-1.50 X 25MM)	
23	106-387	2	FLG LOCKNUT (M10-1.50)	
24	215-1894	1	SEAT SWITCH	
25	310-801	1	BLANK	USED ON MECHANICAL UNITS ONLY
26	313-707	2	UPPER ARMREST BRACKET	
27	107-702	2	CARRIAGE BOLT (3/8-NC X 3/4")	
28	107-698	2	DOWEL PIN (.375 X .500)	
29	110-383	2	KNOB (3/8-NC, BLACK)	
30	106-168	2	FLG LK BOLT (1/4-NC X 3/4")	SEE FOOTNOTE 1


NOT SHOWN:

FOOTNOTES:

1. USE LOCTITE 242 OR EQUIVALENT

NOTE:

SEAT SWIVEL AND BASE

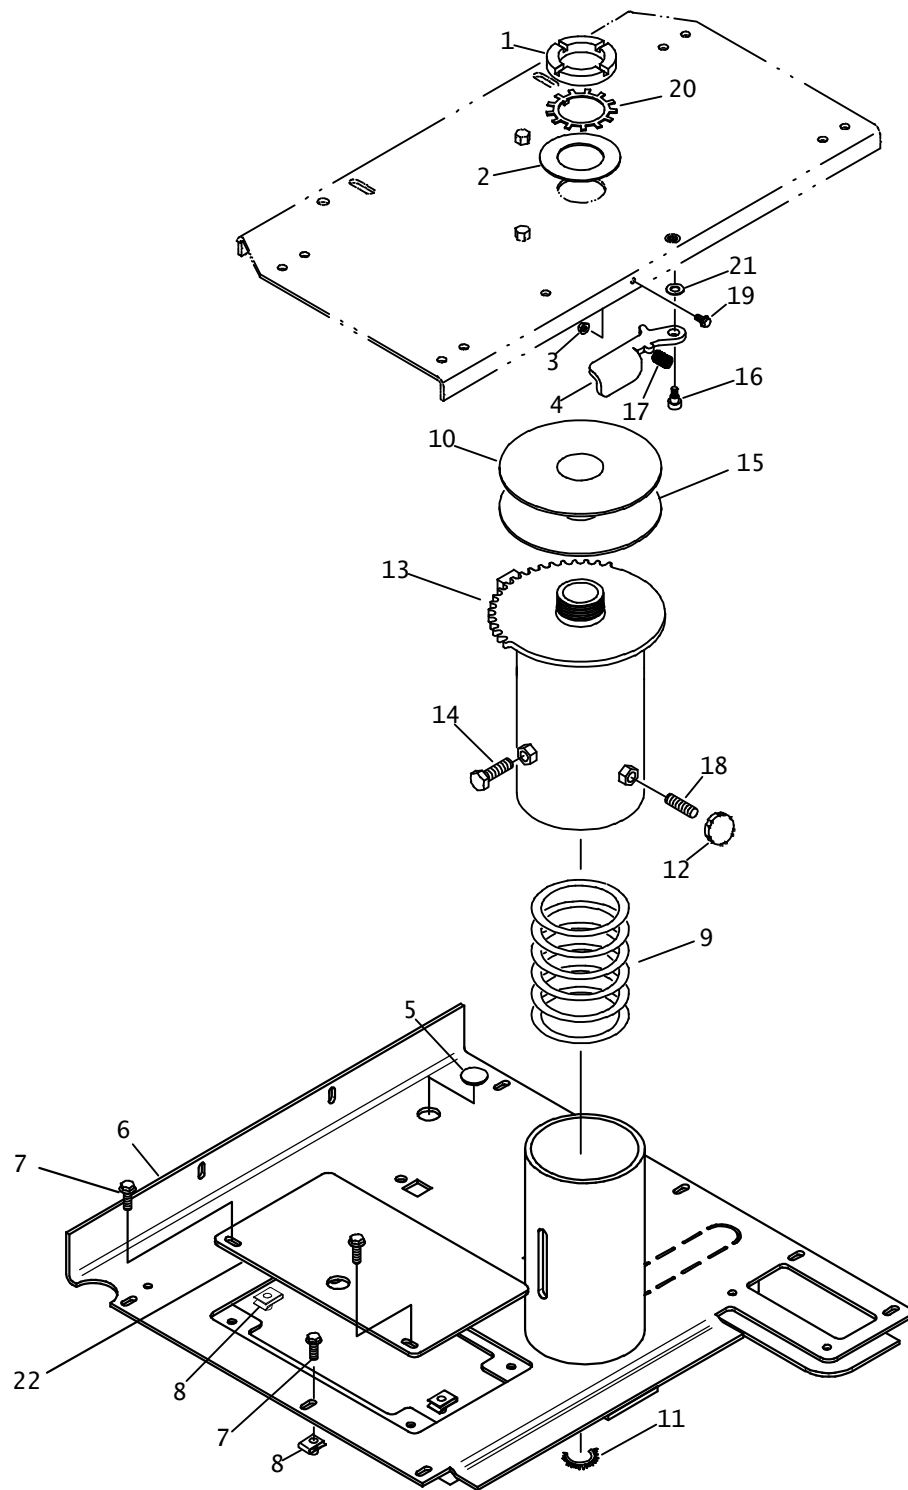

SEAT SWIVEL AND BASE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	107-528	1	PN10 SLOTTED NUT	SEE FOOTNOTE 2
2	106-522	1	WASHER (2-1/16")	
3	106-385	1	FLG LOCKNUT (M6-1.00)	
4	308-895	1	LEVER	
5	110-178	2	PLUG (7/8")	
6	306-844	1	SEAT BASE	
	322-986	1	SEAT BASE	FOR TIER 2 RT90 & RT115
	324-729	1	SEAT BASE	FOR HT115
	300-8537	1	SEAT BASE	SEE FOOTNOTE 4 FOR INSTR. & BEG. S/N; FOOTNOTE 5
7	106-992	9	FLG LK SCREW (M8-1.25 X 25mm)	SEE FOOTNOTE 1
8	107-135	13	CLIP NUT (M8-1.25)	
9	117-816	1	COMPRESSION SPRING	
10	179-382	1	SHIM (.020)	
11	115-662	1	GROMMET EDGE (3/16" X 12.7")	
12	110-383	1	KNOB (3/8-NC, BLACK)	
13	308-879	1	SWIVEL	
14	106-559	1	SCREW (M12-1.75 X 25mm)	
15	117-301	1	SWIVEL DISK (7" UHMW)	SEE FOOTNOTE 3
16	107-582	1	SHLD BOLT (3/8" X 1/4", 5/16-NC)	SEE FOOTNOTE 1
17	115-645	1	COMPRESSION SPRING	
18	106-121	1	STUD BOLT (3/8-NC X 1-1/2")	
19	106-986	1	FLG LK SCREW (M6-1.00 X 12mm)	
20	107-606	1	TANG LOCK WASHER (2")	
21	105-095	1	WASHER (1/4")	
22	300-8446	1	ACCESS PANEL	SEE FOOTNOTE 4 FOR INSTR. & BEG. S/N; FOOTNOTE 5


NOT SHOWN:

FOOTNOTES:

1. USE LOCTITE 242 OR EQUIVALENT
2. TORQUE SPANNER NUT TO PREVENT ROTATION, THEN REVERSE DIRECTION AND LOOSEN 1/8 OF A TURN.
3. NO LUBRICANT ON ITEM #15
4. SEAT BASE 300-8537, ACCESS PANEL 300-8446 MUST BE USED TOGETHER.
BEGINS WITH SERIAL NUMBERS; RT95ME90000274 RT95HJ90000351 RT115T3T90000125.
5. USE 2X 106-264 FOR RETAINING 300-8446 TO 300-8537 IF WELDNUTS ARE PRESENT.
BEGINS WITH SERIAL NUMBERS; RT95HP90000380 RT95ME90000291 RI5T3L90000135.

NOTE:

BATTERY INSTALLATION

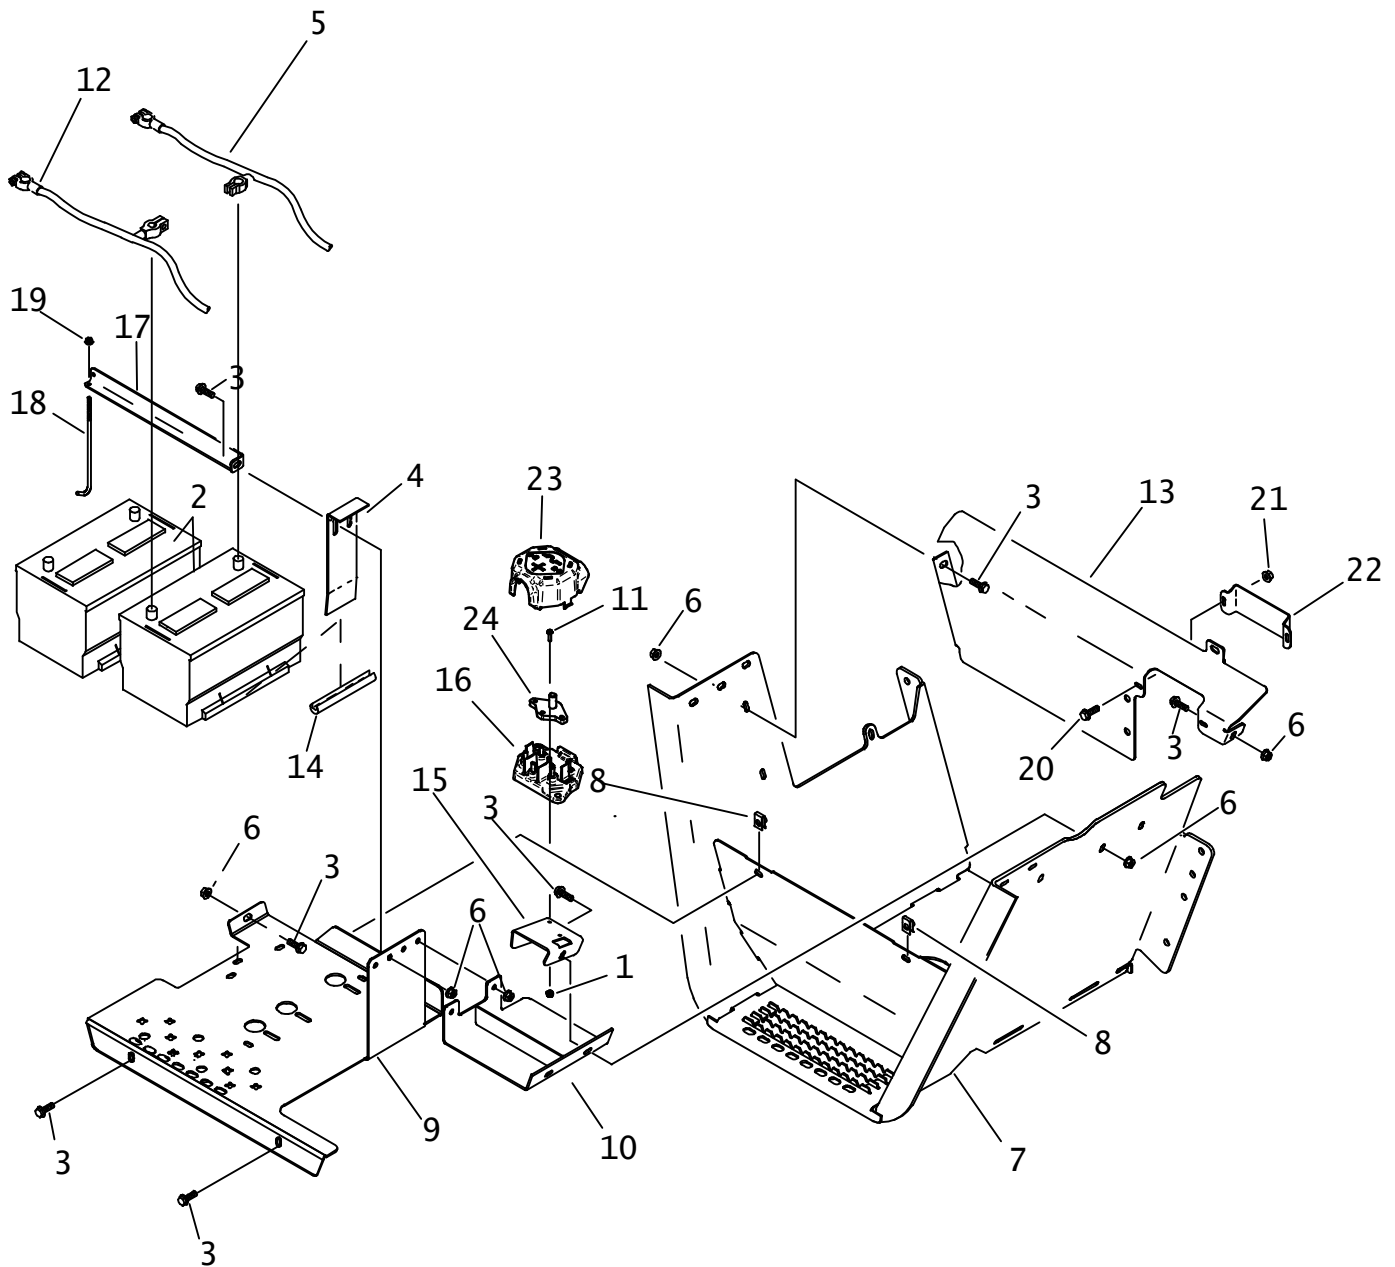

BATTERY INSTALLATION


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	107-859	2	LOCKNUT (#6-32 NYLON INSERT)	
2.	213-104	2	BATTERY (12V, 875CCA)	
3.	107-001	13	FLG LK SCREW (M10-1.50 X 25mm)	
4.	320-112	1	HOLD DOWN	
5.	213-015	1	POS BATTERY CABLE RT115 TR2	
6.	106-387	11	FLG LOCKNUT (M10-1.50)	
7.	300-9750	1	CRADLE WELDMENT	
8.	106-558	2	CLIP NUT (M10-1.50)	
9.	320-116	-	BATTERY TRAY STEP	
10.	320-115	1	TRAY SUPPORT	
11.	106-367	2	SCREW (#6-32 X 1/2 PLPS SS)	
12.	213-017	1	NEG BATTERY CABLE RT115 TR2	
13.	320-118	-	BATTERY COVER	
14.	116-789	AR	RUBBER EDGE TRIM 1/8" (12 GA)	USE 3"
15.	300-4466	1	FUSE HOLDER MOUNT ASSEMBLY	
16.	215-1009	1	MAIN FUSE HOLDER BASE	
17.	322-951	1	BATTERY HOLD DOWN	
18.	179-799	1	J HOOK (7.3")	
19.	105-832	1	FLG LOCKNUT (1/4-NC)	
20.	106-379	2	FLG LK SCREW (M6-1.00 20mm)	
21.	106-353	2	FLG NUT (M6-1.00)	
22.	323-279	1	COVER	
23.	215-1010	1	MAIN FUSE HOLDER COVER	
24.	215-1011	1	BUSSBAR (MAIN FUSE HOLDER)	

NOT SHOWN:

FOOTNOTES:

NOTE:

FUSE BLOCK ASSEMBLY

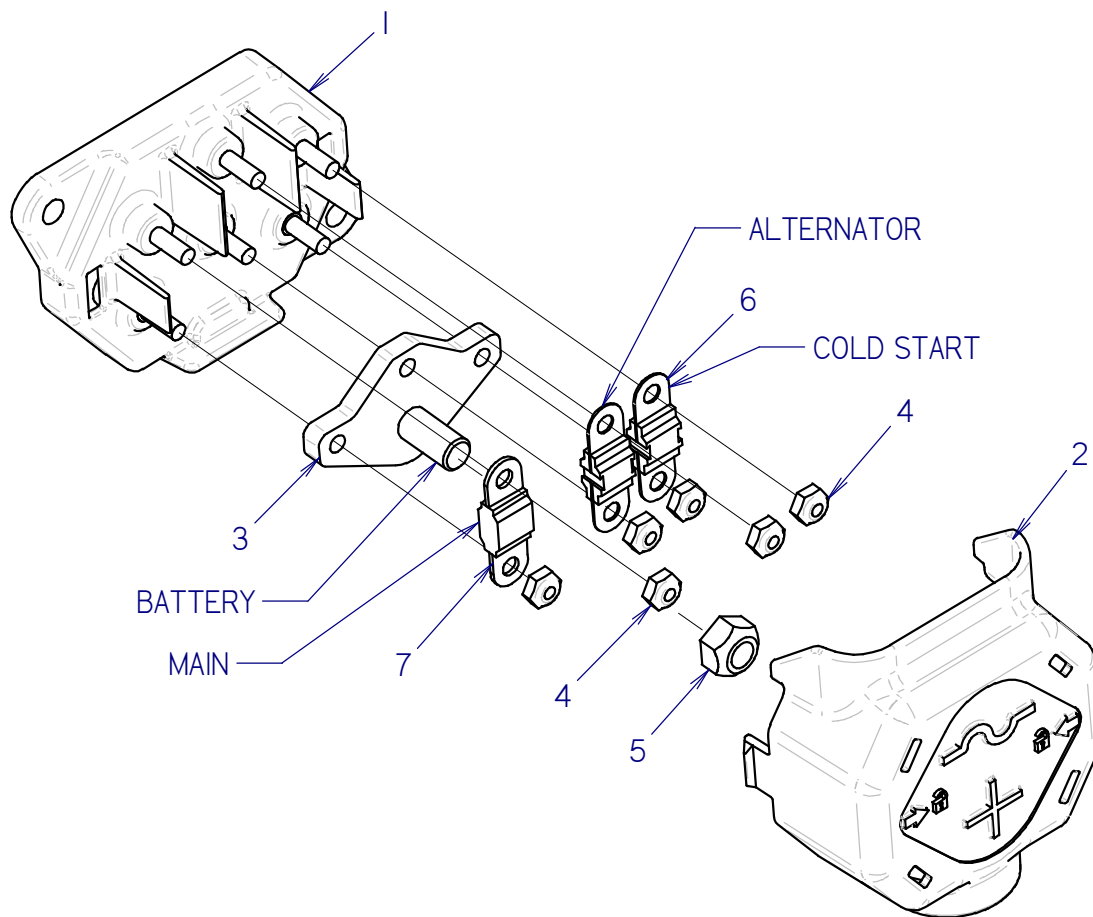

FUSE BLOCK ASSEMBLY

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	215-1009	1	MAIN FUSE HOLDER BASE	
2	215-1010	1	MAIN FUSE HOLDER COVER	
3	215-1011	1	BUSSBAR (MAIN FUSE HOLDER)	
4	106-048	6	LOCKNUT (#10-24)	
5	105-047	1	LOCKNUT (3/8-NC)	
6	211-305	2	BK/AMI 125 AMP FUSE	
7	211-311	1	BK/AMI 100 AMP FUSE	


NOT SHOWN:

FOOTNOTES:

NOTE:

4 POST ROPS

BEGINS WITH S/N 5W0527 HYDROSTAT UNITS
BEGINS WITH S/N 5Y0468 POWERSHIFT UNITS

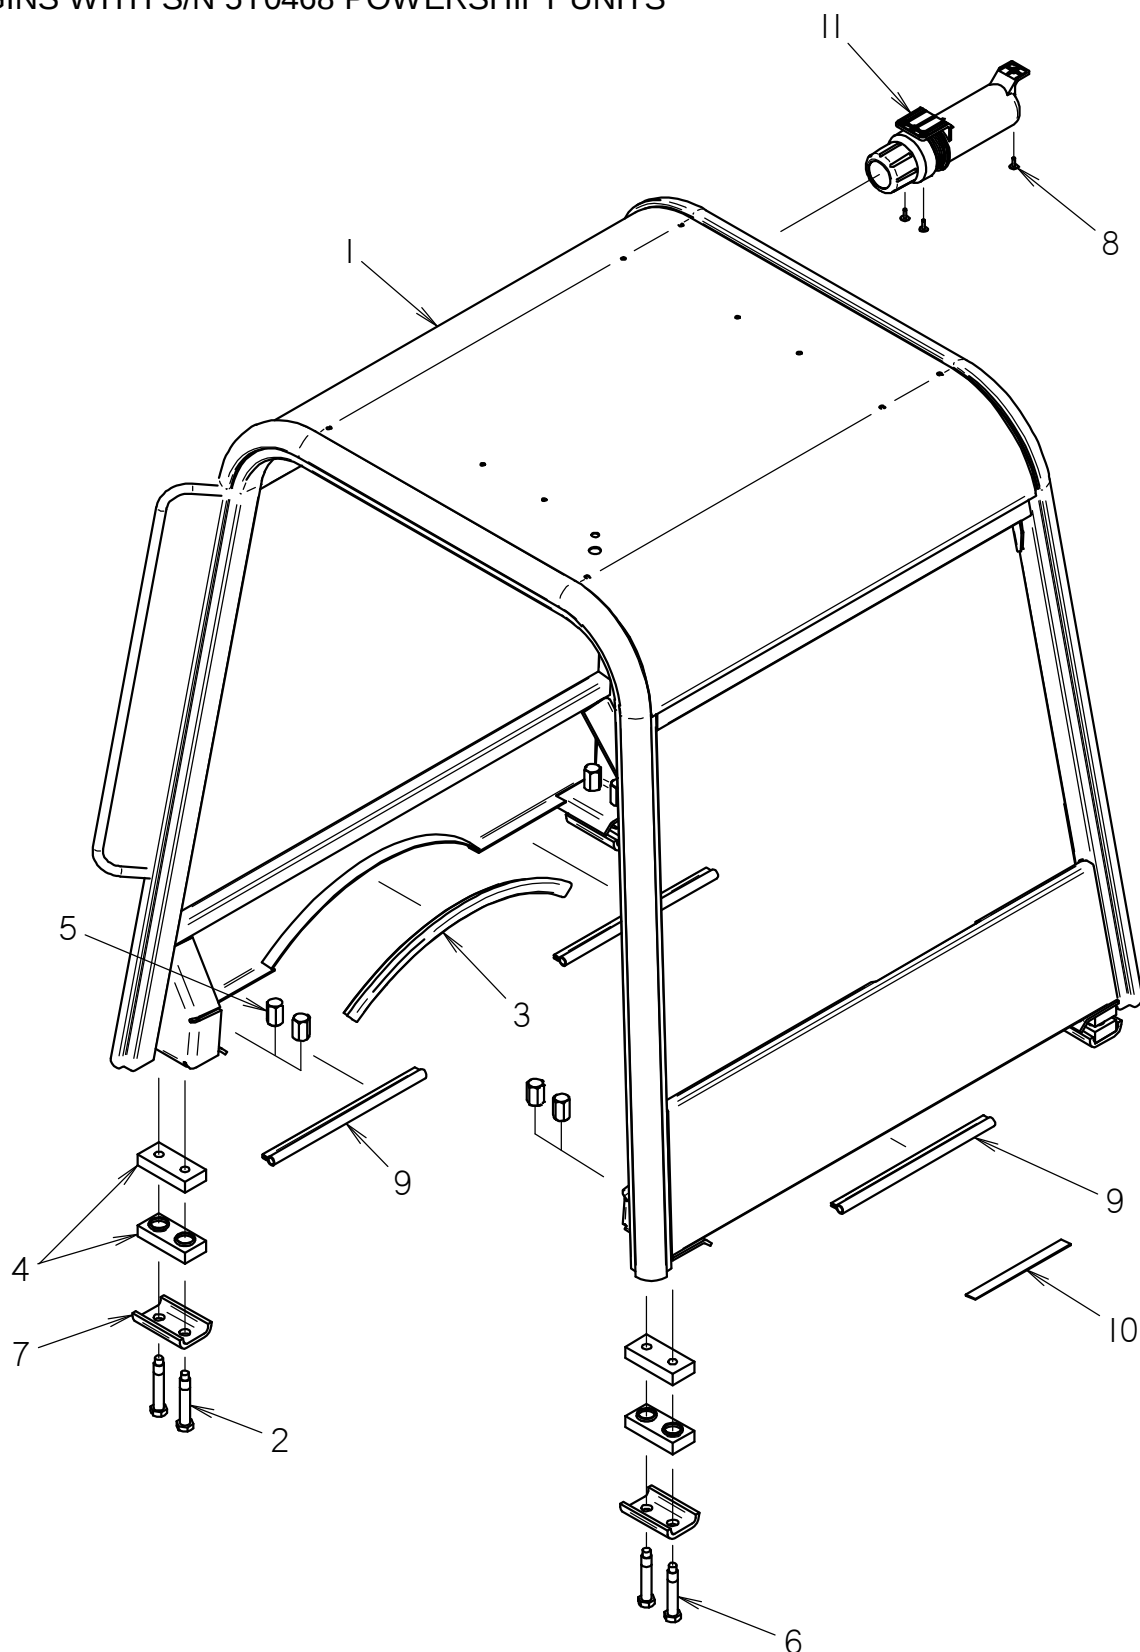

4 POST ROPS

BEGINS WITH S/N 5W0527 HYDROSTAT UNITS
BEGINS WITH S/N 5Y0468 POWERSHIFT UNITS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	301-1473	1	ANGUS-PALM ROPS	REPLACES 320-250 4 POST ROPS, SEE NOT SHOWN FOR SERVICE PART
2	107-923	4	SCREW (3/4-NC X 5", GD5) SPEC.	SEE FOOTNOTE 1
3	116-421	1	BULK EDGE (1/8", SOLD PER FT)	USE 1 @ 2.5'
4	117-973	8	SHOCK MOUNT	
5	107-924	8	NUT (3/4-NC) SPECIAL	
6	107-922	4	SCREW(3/4-NCX4-1/2",GD5)SPEC.	SEE FOOTNOTE 2
7	320-240	4	ISOLATOR IRON	
8	110-348	3	POP RIVET (3/16" X .664")	
9	117-344	3	BULK EDGE (3/16", SOLD PER FT)	USE 2 @ 1.0', USE 1 @ 3.5'
10	320-745	1	CHECK GAGE	
11	250-063	1	MANUAL COMPARTMENT	


NOT SHOWN:
500-2428 ROPS HEADLINER

FOOTNOTES:

1. SCREW (107-923) HAS GOLD PLATING TO DISTINGUISH IT FROM SCREW (107-922). PROPER LOCATION IS IMPORTANT FOR PROPER ASSEMBLY OF THE ROPS. TORQUE TO 200 Ft.Lbs, USE LOCTITE 271 OR EQUIVALENT.
2. SCREW (107-922) HAS SILVER PLATING TO DISTINGUISH IT FROM SCREW (107-923). PROPER LOCATION IS IMPORTANT FOR PROPER ASSEMBLY OF THE ROPS. TORQUE TO 200 Ft.Lbs, USE LOCTITE 271 OR EQUIVALENT.

NOTE:

ROPS

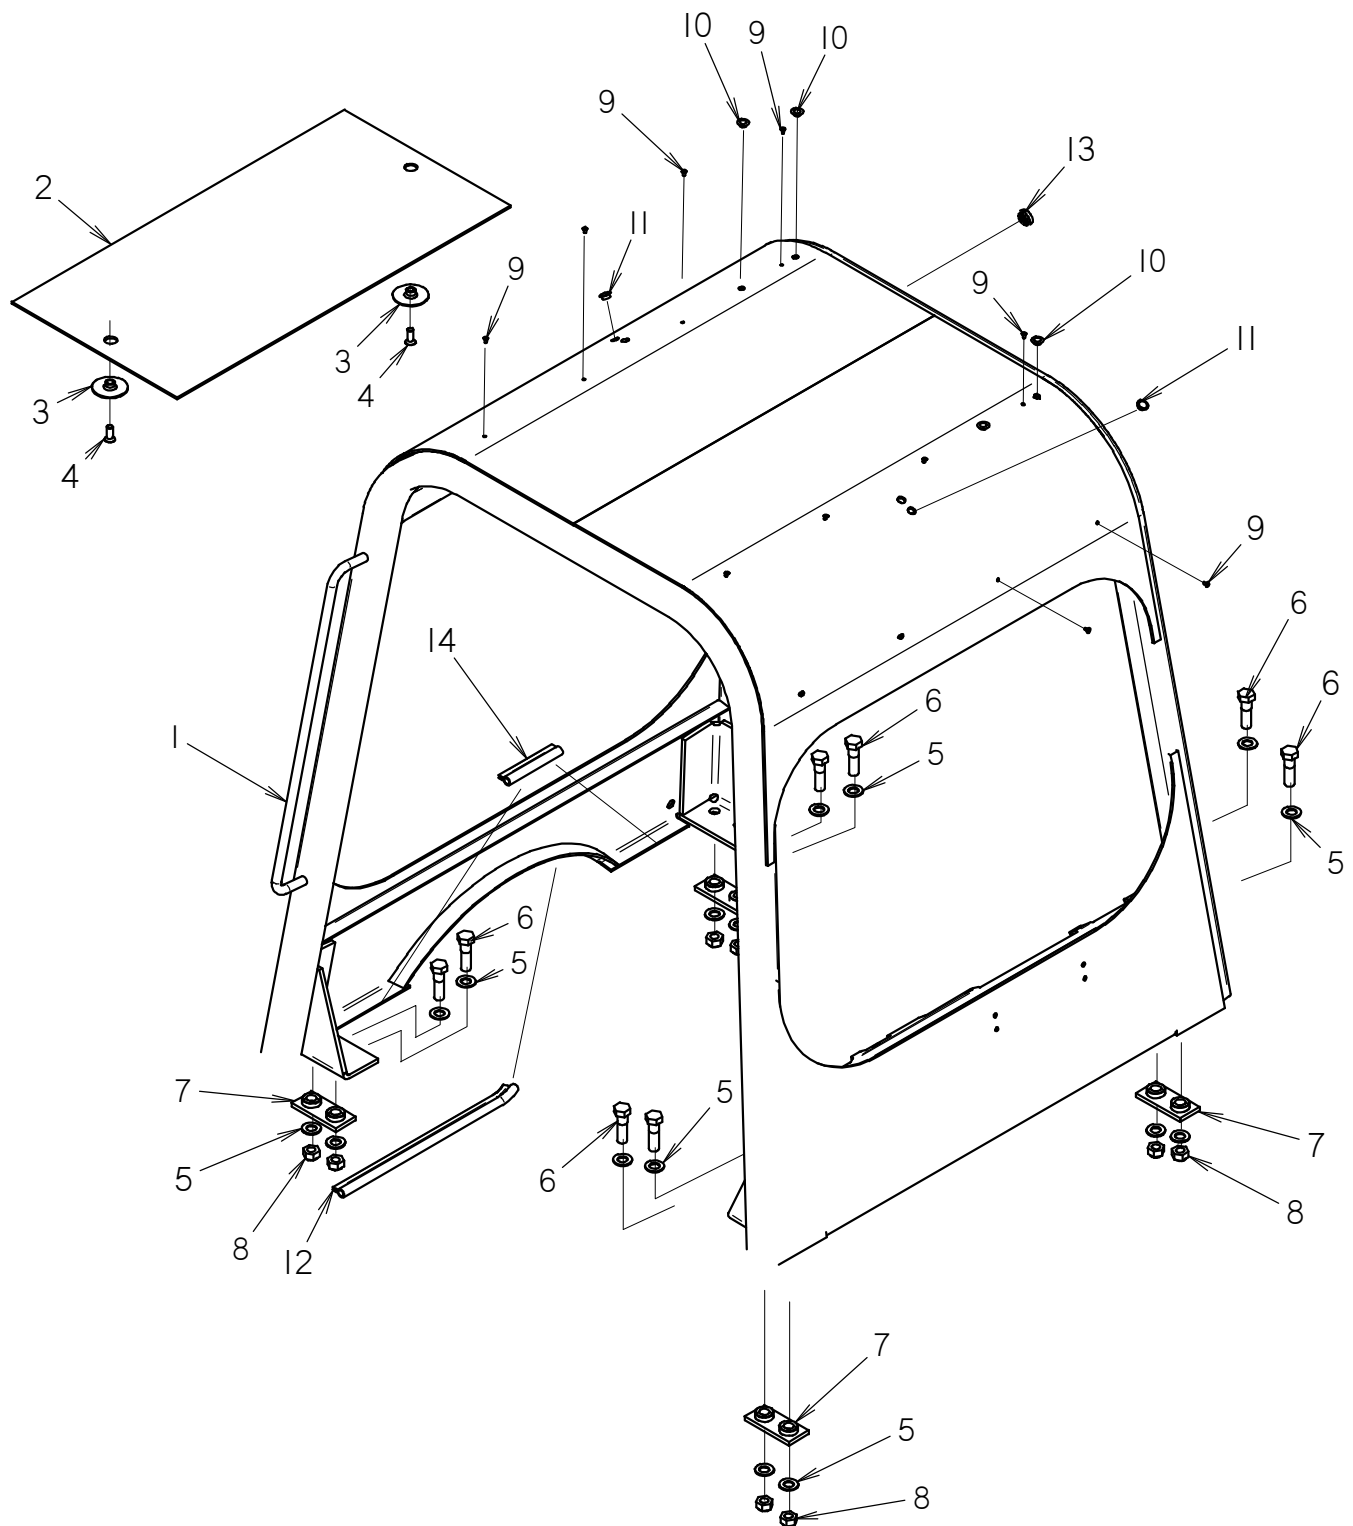

ROPS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	327-817	1	ROPS	SEE FOOTNOTE 2
2	118-300	1	HEADLINER	
3	115-038	2	RETAINER	
4	195-611	2	BOLT (1/2-NC X 1-1/4",CSK SOC)	
5	106-393	16	WASHER (M20)	
6	106-459	8	SCREW (M20-2.50 X 70MM, 10.9)	USE LOCKTITE 271
7	350-2550	4	BACKUP PLATE ASSEMBLY	
8	106-665	8	LOCKNUT (M20-2.50, 10.9)	TORQUE NUT TO 250 FT-LBS
9	159-976	12	PLUG (1/4")	
10	159-936	4	PLUG (5/8")	
11	159-958	2	PLUG (3/4")	
12	117-344	30	BULK EDGE (3/16", SOLD PER FT)	USE 1 @ 30"
13	159-919	1	PLUG (1 3/8" SPLIT BUSHING)	
14	116-421	12	BULK EDGE (1/8", SOLD PER FT)	SEE FOOTNOTE 1

NOT SHOWN:


FOOTNOTES:

1. 12" REQUIRED, CUT INTO TWO 6" PIECES & PLACE WHERE INDICATED BY GRAPHICS.
2. THIS ROPS IS USED WHEN A 46" HYDRA-WHEEL IS MOUNTED.

NOTE:

CAB KIT

RT75, RT95, RT115, RT100 & RT120

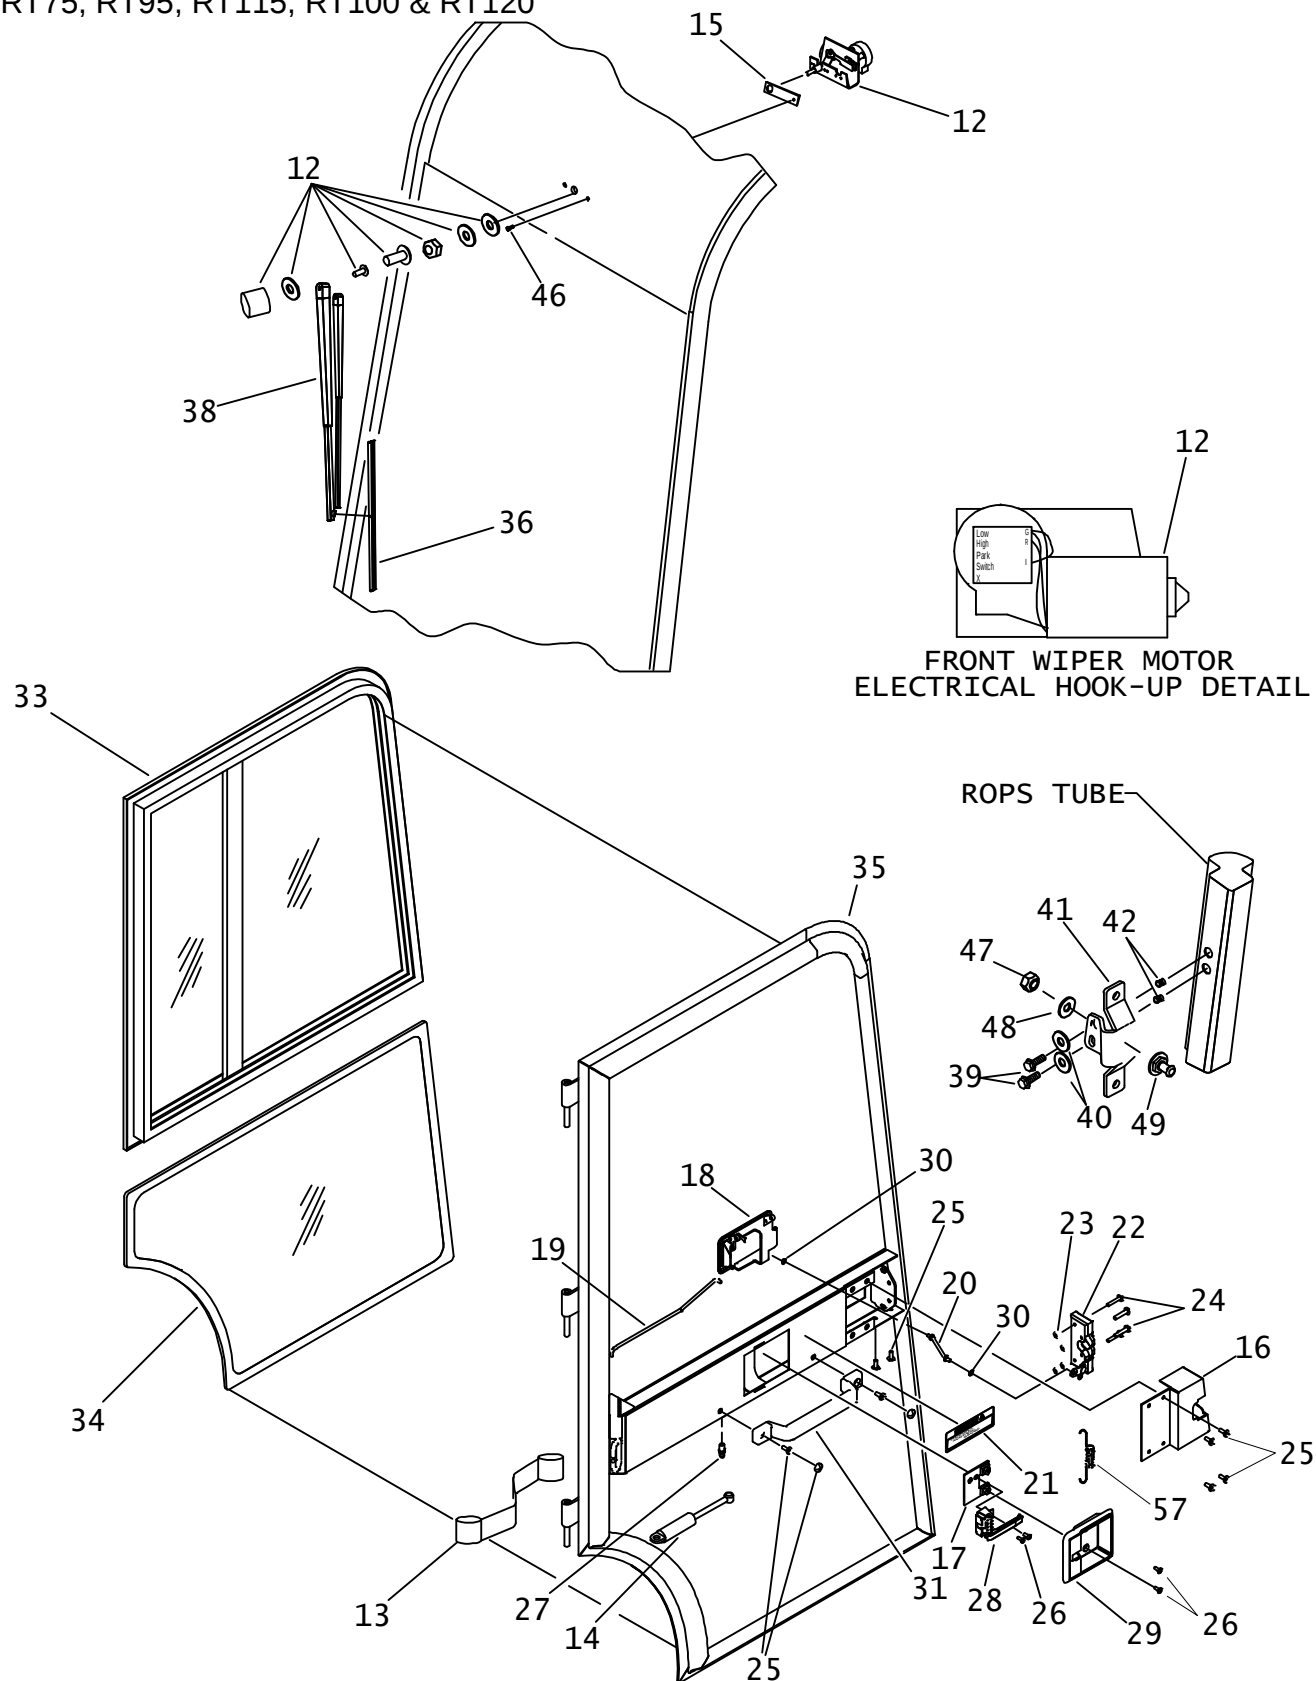

CAB KIT

RT75, RT95, RT115, RT100 & RT120

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	191-179		CAB KIT	INCL. REF. #S I-57
1.	499-436	1	DOOR ASSY (RIGHT)	
	499-437	1	DOOR ASSY (LEFT)	
2.	121-044	1	SLIDER ASS'Y (REAR)	SEE NOT SHOWN FOR REPLACEMENT LATCH.
	499-747	-	WINDOW FRAME	OBSOLETE
	499-748	-	REAR WINDOW	
3.	121-045	1	SIDE WINDOW (LEFT)	
	121-046	1	SIDE WINDOW (RIGHT)	
4.	121-047	1	FRONT WINDOW	
5.	117-829	21	SEAL, PSA DOUBLE D	
6.	318-374	1	U-CLAMP	
7.	318-358	1	DOORPOST (LEFT)	
	318-359	1	DOORPOST (RIGHT)	
8.	318-375	2	BRACKET, LOWER DOOR POST	
9.	318-376	2	WINDOW RETAINING CLIP	
10.	318-377	2	PLATE	
11.	107-786	32	SCREW, (#10-32 X 1-1/2") HEX	
12.	214-897	1	WIPER MOTOR	
13.	499-441	2	DOOR STRAP	
14.	499-438	2	GAS SPRING STRUT	
15.	119-003	1	SPACER, WIPER MOTOR	
16.	318-360	1	CAM LATCH COVER (RIGHT)	
	318-361	1	CAM LATCH COVER (LEFT)	
17.	318-362	1	INNER BRACKET (RIGHT)	
	318-363	1	INNER BRACKET (LEFT)	
18.	117-825	1	L. LATCH, PADDLE W/KEY	
	117-854	1	R. LATCH, PADDLE W/KEY	
19.	117-821	1	LEFT ROD, DOOR LINKAGE	
	117-855	1	RIGHT ROD, DOOR LINKAGE	
20.	117-856	2	ROD, DOOR LINKAGE	
21.	273-279	1	WARNING TAG	
22.	117-824	1	LEFT LATCH, ROTARY	
	117-857	1	RIGHT LATCH, ROTARY	
23.	105-085	4	LOCKNUT (1/4-NC)	
24.	107-787	4	SCREW (1/4-20 X 1-1/4) TRUS, TORX	
25.	107-788	8	SCREW (1/4 X 5/8) TRUS, TORX T27	COMES WITH SNAP-ON COVER
26.	107-789	4	SCREW (#10-24 X 1/2 ") TRUS, TORX	
27.	166-450	1	STUD, CYLINDER	
28.	117-823	1	LEFT HANDLE, INSIDE	
	117-858	1	RIGHT HANDLE, INSIDE	
29.	499-440	1	INSIDE DOOR BEZEL	
30.	117-828	4	RETAINER, INTERNAL TOOTH	
31.	499-439	1	DOOR PULL	
32.	107-245	4	FLG LK BOLT (3/8-NC X 3/4", NLK)	


NOTES:

MOUNTING A CAB ON THE RT70/RT90/RT115

1. A CAB CAN BE MOUNTED DIRECTLY ON RT70M OR RT90M WHEN OLD ROPS HAS NOT BEEN MODIFIED WITH THE NEW ISOLATORS.
2. A CAB CAN NOT BE MOUNTED ON A RT70H, RT90H OR RT115H WHEN AN OLD ROPS HAS BEEN MODIFIED WITH THE NEW ISOLATORS.
3. A CAB CAN BE MOUNTED ON A RT70H, RT90H OR RT115H WITH A NEW ROPS WITH THE NEW ISOLATORS.

CAB KIT

RT75, RT95, RT115, RT100 & RT120

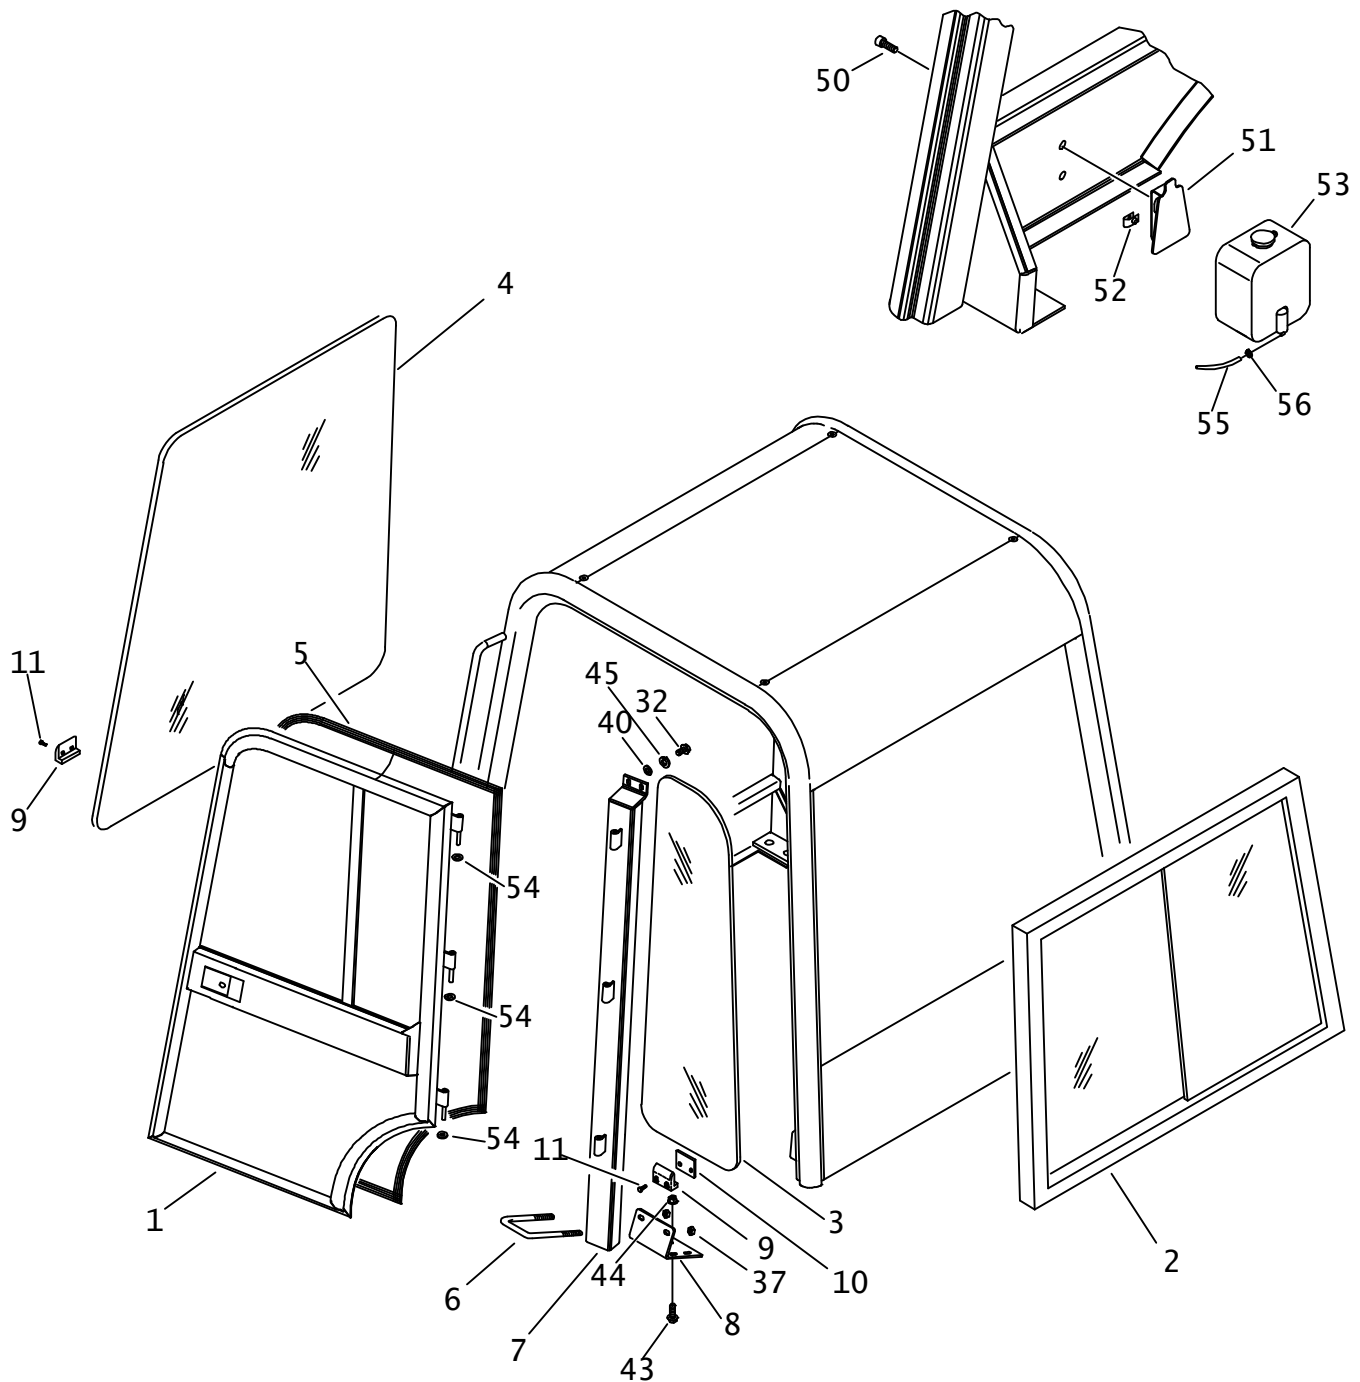

CAB KIT

RT75, RT95, RT115, RT100 & RT120


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
33.	121-048	1	SLIDER, (LEFT DOOR)	SEE NOT SHOWN FOR REPLACEMENT LATCH.
	121-049	1	SLIDER, (RIGHT DOOR)	SEE NOT SHOWN FOR REPLACEMENT LATCH.
34.	121-050	1	GLASS (LOWER DOOR), LEFT	
	121-051	1	GLASS (LOWER DOOR), RIGHT	
35.	318-364	1	RIGHT DOOR	
	318-365	1	LEFT DOOR	
36.	121-052	1	WIPER BLADE	
37.	105-047	4	LOCKNUT (3/8-NC)	
38.	121-053	1	WIPER ARM	
39.	106-991	8	FLG LK SCREW (M8-1.25 X 20mm)	
40.	106-415	8	WASHER (.406")	
41.	117-826	1	STRIKE BRACKET (RIGHT)	
	117-827	1	STRIKE BRACKET (LEFT)	
42.	106-565	8	NUTSERT, (M8-1.25)	
43.	106-469	8	FLG SCREW (M12-1.75 X 30mm)	
44.	106-709	8	FLG LK NUT (M12-1.75)	
45.	105-895	4	LOCK WASHER (3/8")	
46.	105-865	1	BOLT (1/4-NC X 3/4", GD8)	
47.	105-151	2	LOCKNUT (7/16-NC)	
48.	105-059	2	WASHER (7/16)	
49.	117-861	2	STRIKER BOLT	
50.	107-778	2	SCREW (M8-1.25 X 30mm, BUT SOC)	
51.	318-879	1	BOTTLE BRACKET	
52.	107-135	2	CLIP NUT (M8-1.25)	
53.	344-115	1	WINDSHIELD WASHER TANK	
54.	107-875	6	WASHER (.400" ID. BRASS)	
55.	116-866	AR	BULK HOSE (3/16", SOLD PER 1')	USE 1 @ 150"
56.	110-249	1	WORM CLAMP (1/4" TO 5/8")	
57.	118-357	1	EXTENSION SPRING	
NOT SHOWN:				
	256-669	2	URETHANE ADHESIVE	10.5 FL. OZ. TUBES
	105-1305	1	KEYS (RT TRACTOR CAB)	REPLACEMENT KEYS
	115-1014	2	CLIP	RETAINS STRUT 499-438 ONTO STUD 166-450
	500-2067		LEFT SLIDER LATCH REAR	USED ON 121-044 SLIDER (REAR)
	500-2068		RIGHT SLIDER LATCH REAR	USED ON 121-044 SLIDER (REAR)
	500-2069		LEFT SLIDER LATCH	USED ON 121-048 SLIDER (LT DOOR)
	500-2070		RIGHT SLIDER LATCH	USED ON 121-049 SLIDER (RT DOOR)
	500-2450		KNOB KIT, SLIDER WINDOW	

NOTES:

CAB HEATER ASS'Y

RT95 T3

RT115 / HT115 T3

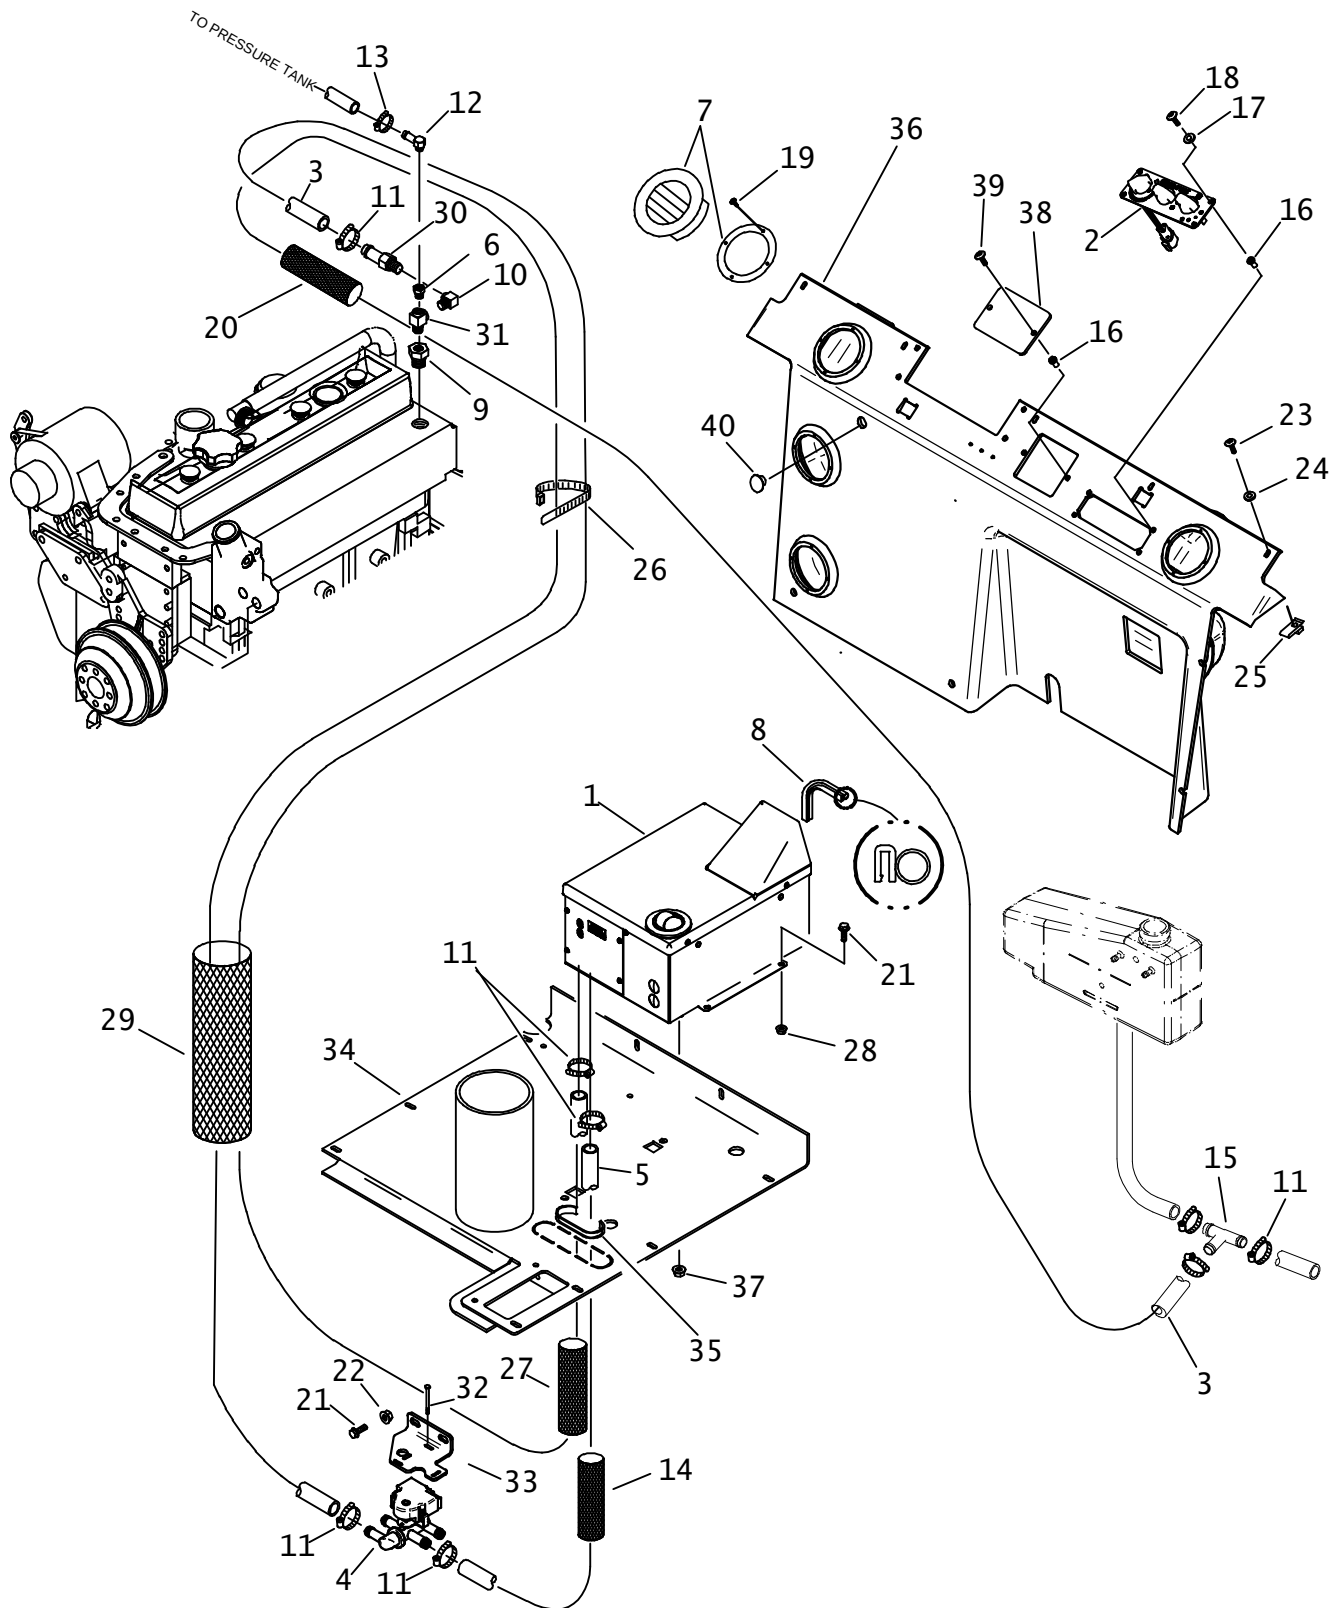

CAB HEATER ASS'Y

RT95 T3


RT115 / HT115 T3

REF	PART				
NO.	NUMBER	QTY	DESCRIPTION	REMARKS	
	190-1374		A/C HEATER KIT, TIER 3		
	190-1375		HEATER KIT, TIER 3		
1.	499-802	1	MODEL EE320, HVAC, 12V		
	194-439	1	HEATER		
2.	499-837	1	CONTROL PANEL, FAN-AC-HT	USE 500-1214 FOR UNITS WITH HEATER ONLY(NO A/C)	
3.	116-044	AR	BULK HOSE (5/8" , SOLD PER 1")	USE 2 @ 90"	
4.	499-705	1	HEATER VALVE		
5.	116-044	AR	BULK HOSE (5/8" , SOLD PER 1")	USE 1 @ 22"	
6.	115-106	1	REDUCER (06N-04NF)		
7.	499-833	4	LOUVER MOUNT, 3.1" HOLE		
8.	117-344	AR	BULK EDGE (3/16", SOLD PER FT)	USE 1 @ 16"	
9.	514-085	1	REDUCER (08N-06NF)		
10.	156-260	1	STREET ELBOW (06N-06NF90)		
11.	110-217	8	WORM CLAMP (7/16"TO 1")		
12.	155-164	1	S/O COUPLER (04N-05H90)		
13.	110-249	1	WORM CLAMP (1/4"TO 5/8")		
14.	117-622	1	ABRASION SLEEVE (1.25" X 20")		
15.	514-159	1	S/O TEE (-10H)		
16.	107-358	6	WELLNUT (M4-0.7 X 12.67mm LG)		
17.	107-597	4	WASHER (M4)		
18.	107-580	4	SCREW (M4-0.70 X 16mm, BUT SOC)		
19.	107-852	16	SCREW (#8 X 5/8" CSK PLPS)		
20.	117-397	1	ABRASION SLEEVE (1.25" X 35")		
21.	106-992	4	FLG LK SCREW (M8-1.25 X 25mm)		
22.	106-386	-	FLG LOCKNUT (M8-1.25)		
23.	105-1549	-	SCREW (M6-1.00 X 20MM)		
24.	106-388	-	WASHER (M6)		
25.	106-574	-	CLIP NUT (M6-1.00)		
26.	110-030	1	CABLE TIE (1/16" TO 4")		
27.	117-396	1	ABRASION SLEEVE (1.25" X 28")		
28.	106-386	4	FLG LOCKNUT (M8-1.25)		
29.	117-265	1	ABRASION SLEEVE (1.75" X 50")		
30.	155-112	1	S/O COUPLER (06N-10H)		
31.	155-017	1	SERVICE TEE (06N-06NF-06NF)		
32.	108-113	2	SCREW (#6-19 X 1-1/4" PLASTIC)		
33.	318-811	1	VALVE BRACKET		
34.	322-986	-	SEAT BASE		
	324-729	-	SEAT BASE	HT115 ONLY	
35.	115-662	1	GROMMET EDGE (3/16" X 12.7")		
36.	362-1233	1	REAR PANEL W/ AC DUCT		
37.	105-814	4	FLG LOCKNUT (3/8-NC)	SCREWS ONTO STUD BOLTS ON BOTTOM OF REF #1 (499-802)	
38.	322-871	1	TDM COVER		
39.	107-393	2	SCREW (M4-0.70 X 16mm, BX)		
40.	157-333	1	HOLE PLUG (.750")		

FOOTNOTES:

NOTE:

AIR CONDITIONING KIT RT115 T3

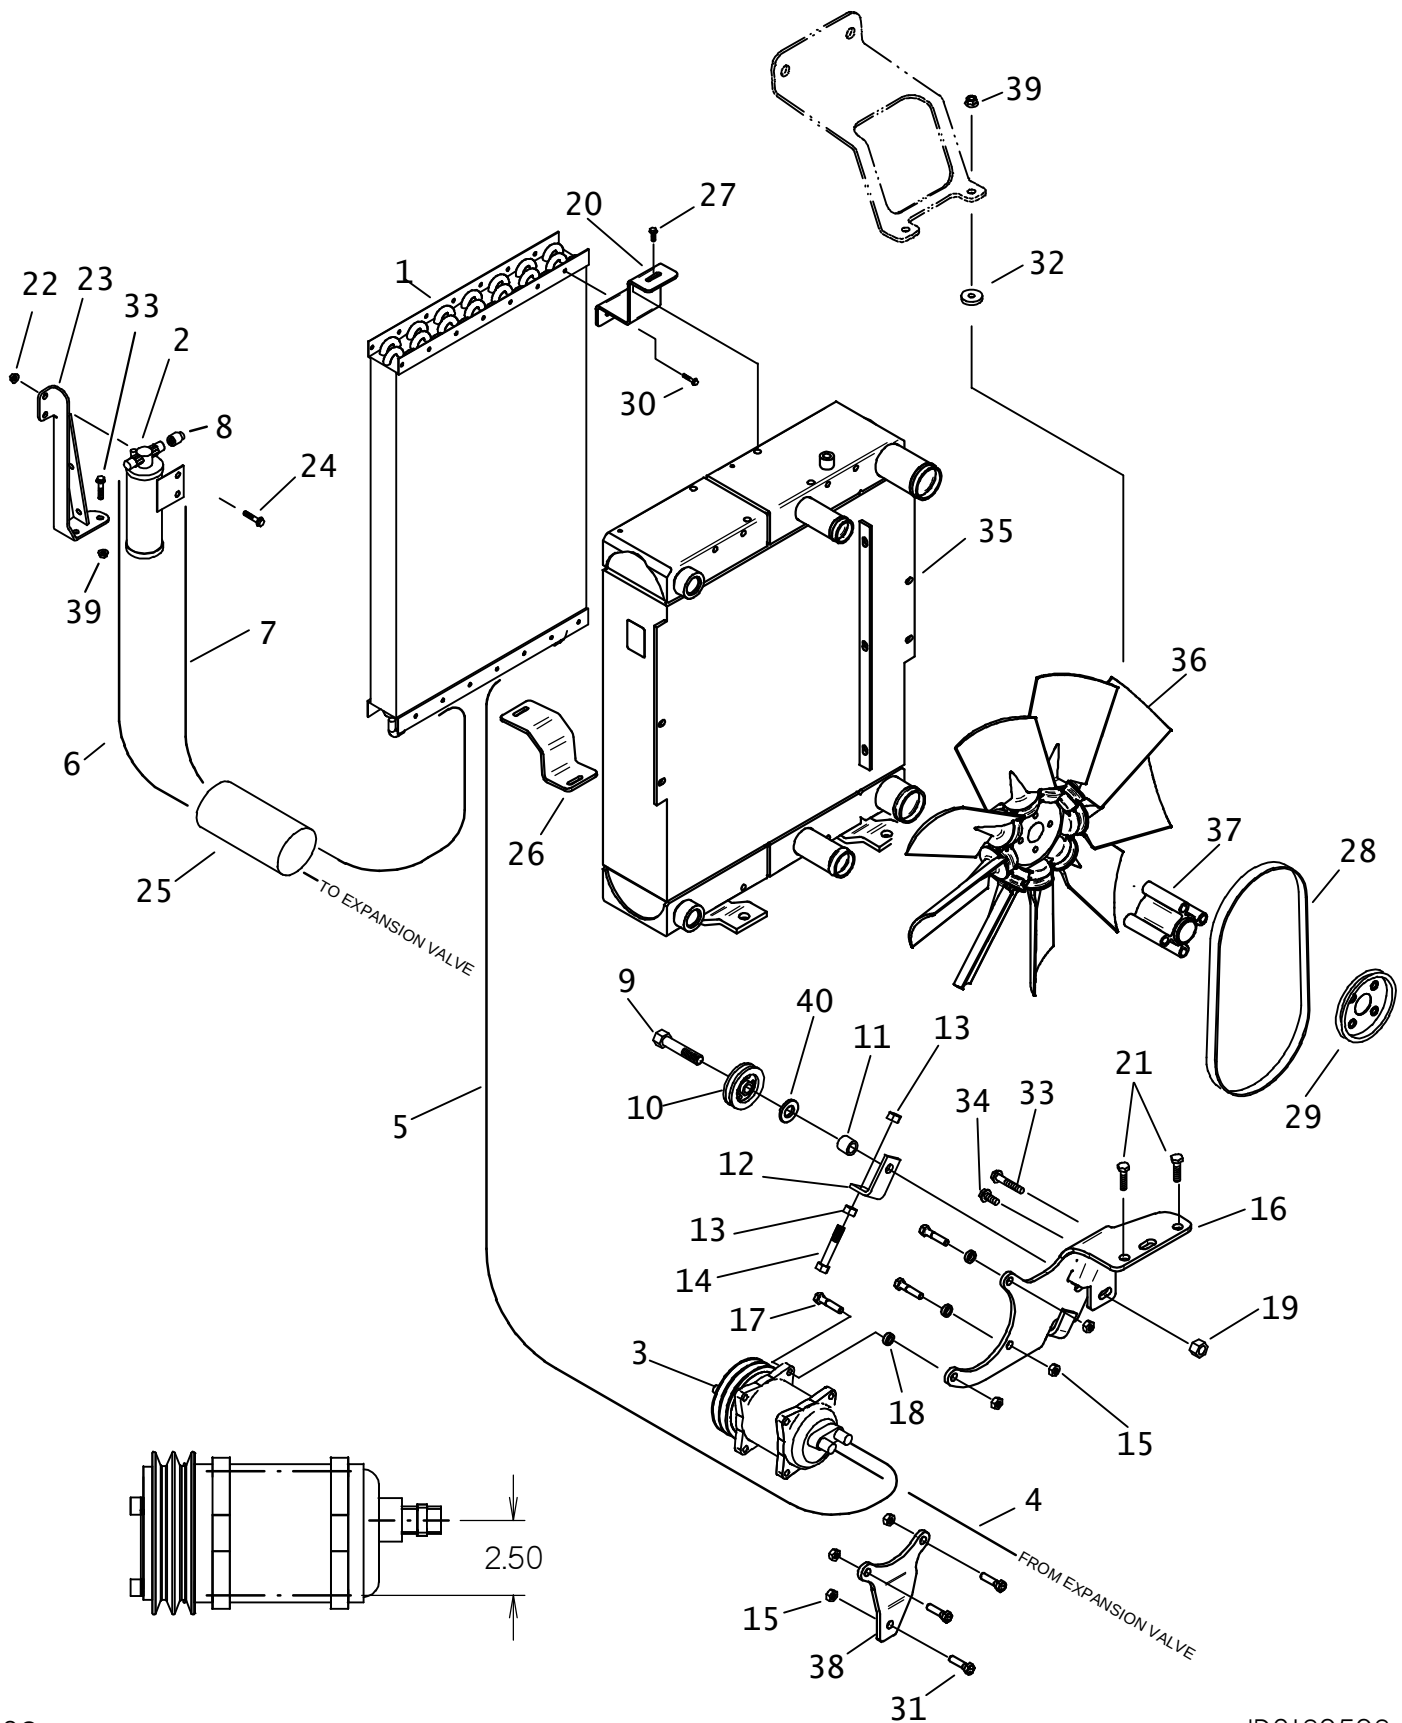

AIR CONDITIONING KIT


RT115 T3

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	191-358		A/C-HEATER KIT	INCL. REF. #'S 1-34.
1.	499-836	1	CONDENSER COIL	
2.	499-205	1	RECEIVER DRIER	
3.	499-706	1	COMPRESSOR	
	499-841	1	COMPRESSOR FITTING	
4.	499-845	1	HOSE (#10 X 90" EVP-CP)	
5.	499-846	1	HOSE (#08 X 55" CP-CND)	
6.	499-847	1	HOSE (#06 X 36" CND-RD)	
7.	499-848	1	HOSE (#06 X 118" RD-EVP)	
8.	214-946	1	BINARY SWITCH	
9.	106-342	1	SCREW (M16-2.00 X 90mm)	SEE FOOTNOTE 1
10.	170-359	1	BALL BEARING V-PULLEY IDLER	
11.	179-723	1	SPACER	
12.	307-980	1	SLIDE BAR	
13.	106-089	2	NUT (M12-1.75, 10.9)	
14.	106-720	1	SCREW (M12-1.75 X 70mm)	
15.	105-089	6	LOCKNUT (5/16-NC)	
16.	300-4448	1	COMPRESSOR MOUNT	
17.	105-109	3	BOLT (5/16-NC X 1-1/2")	
18.	300-7727	3	SPACER (3/16")	
19.	106-077	1	HEX NUT (M16-2.00, 10.9)	
20.	300-4458	2	COMPRESSOR MOUNT BKT TOP	
21.	105-876	3	SCREW (M10-1.50 X 35mm)	SEE FOOTNOTE 1
22.	106-386	2	FLG LOCKNUT (M8-1.25)	
23.	323-217	1	AC DRIER MOUNT	
24.	106-380	2	FLG LK SCREW (M8-1.25 X 16mm)	
25.	115-687	1	ABRASION SLEEVE (SOLD PER FOOT)	USE 1 @ 2'
26.	300-4457	1	CONDENSER MOUNT BKT BOTTOM	
27.	106-987	6	FLG LK SCREW (M6-1.00 X 16mm)	
28.	170-393	1	BELT	
29.	170-365	1	DRIVE PULLEY	
30.	105-836	4	FLG LOCK BOLT (1/4-NC X ")	
31.	105-160	3	BOLT (5/16-NC X 1-1/4")	
32.	105-886	1	WASHER (.410")	
33.	107-001	3	FLG LK SCREW (M10-1.50 X 25MM)	
34.	106-654	1	FLG LK SCREW (M10-1.50 X 16MM)	
35.	195-1115	-	RADIATOR/OIL COOLER /CAC TIER 3	
36.	195-1116	-	FAN	
37.	194-052	-	FAN SPACER	
38.	300-4459	1	MOUNT PLATE	
39.	106-387	2	FLG LOCKNUT (M10-1.50)	
40.	106-398	1	WASHER (M16, HARDENED)	

FOOTNOTES:

1- USE LOCTITE 242 OR EQUIVALENT.

CANOPY AND LIGHT KIT

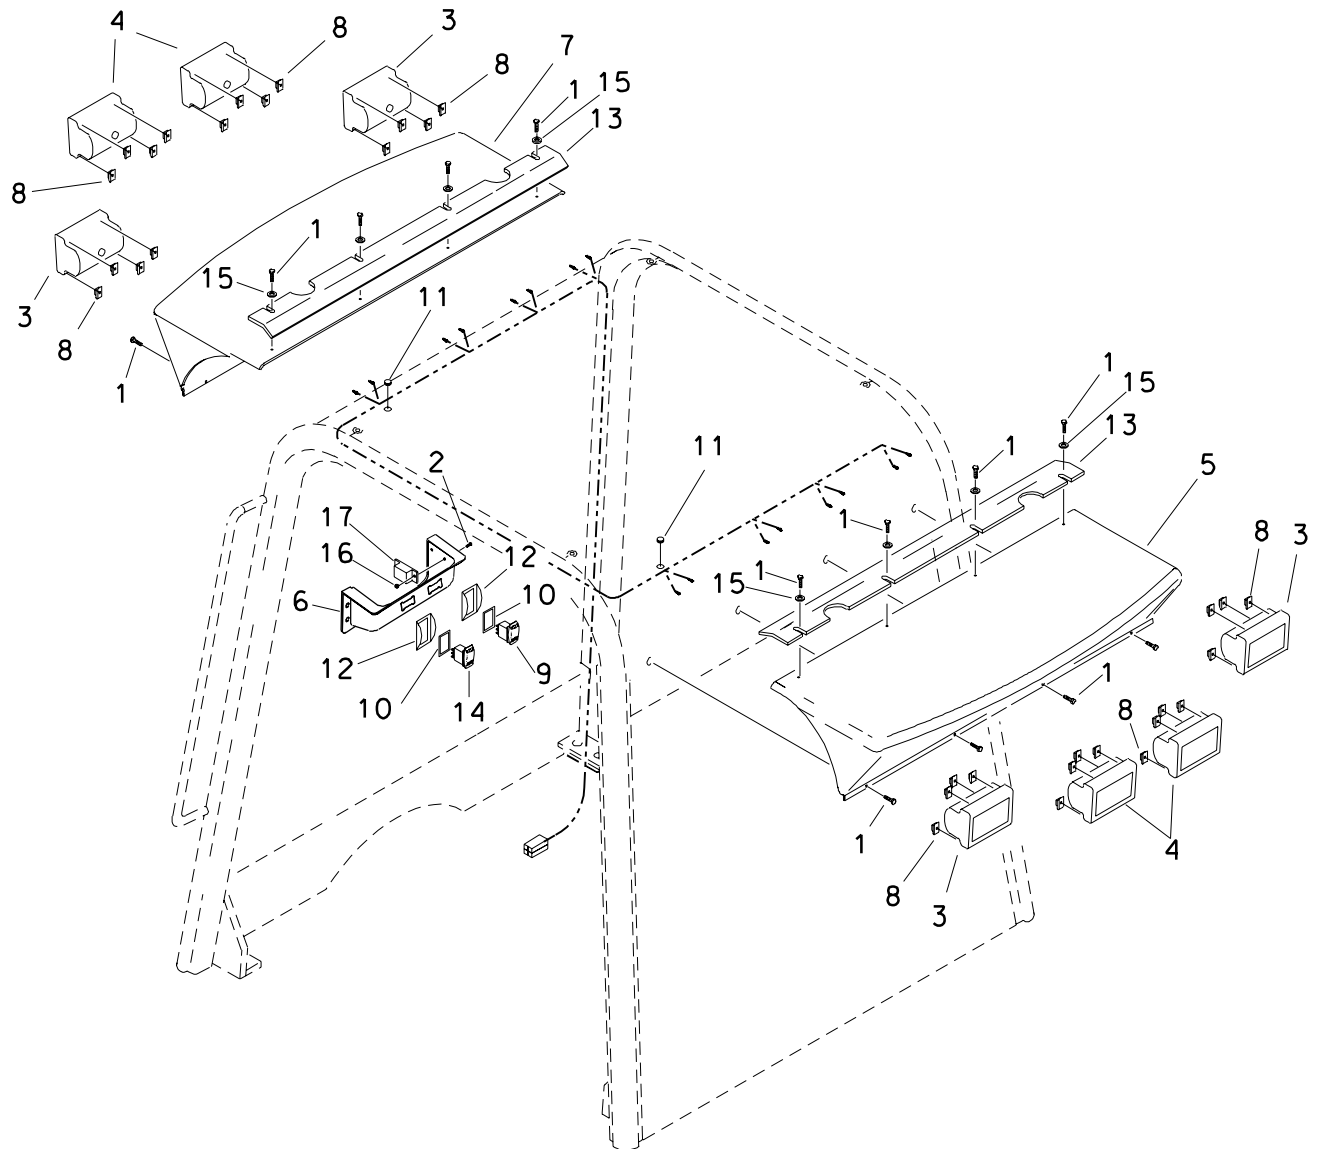


CANOPY AND LIGHT KIT

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	191-180		LIGHT KIT	INCLUDES REF #'S 1-17
1.	107-716	16	SCREW (1/4" - 14 x 7/8" SLF DRL)	
2.	105-185	2	BOLT (#10-24 X 1/2", RD SLT)	
3.	217-288	4	WORK LIGHT (100FO)	
4.	217-287	4	WARNING LIGHT	
5.	305-658	1	EYE-BROW CANOPY	
6.	308-894	1	OVERHEAD CONSOLE	
7.	310-113	1	FRONT EYE-BROW CANOPY	
8.	107-405	32	CLIP NUT (6-32)	
9.	217-762	1	ROCKER SWITCH (SPDT)	
10.	165-817	2	SWITCH GASKET	
11.	115-349	2	GROMMET (1/2")	DRILL 2-23/32" HOLES ON DIMPLES
12.	110-854	2	SWITCH ACTUATOR GUARD	
13.	318-661	2	STRAP	
14.	214-912	1	DPST ON-OFF ROCKER SWITCH	
15.	105-284	8	WASHER (3/16")	
16.	106-048	2	LOCKNUT (#10-24)	
17.	215-041	1	FLASHER	

NOT SHOWN:
362-823 COVER

FOOTNOTES

SOUND BLANKETS

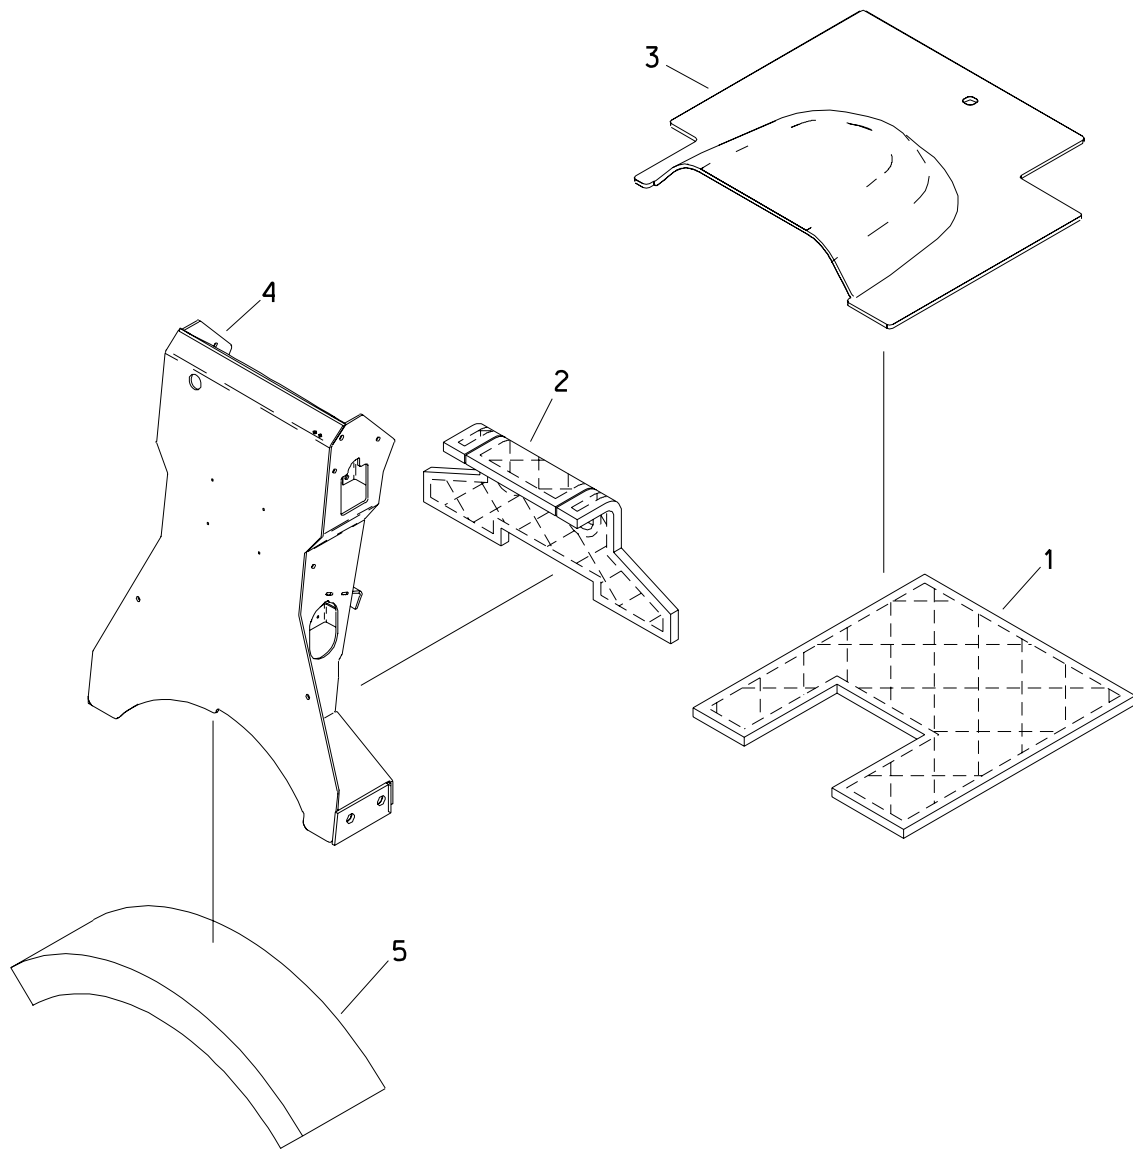


SOUND BLANKETS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	117-833	1	SOUND BLANKET	POWERSHIFT ONLY
	117-832	1	SOUND BLANKET	HT115 AND HYDROSTAT ONLY
2.	117-834	1	SOUND BLANKET	USED ON RT/HT115 & POWERSHIFT ONLY
	117-835	1	SOUND BLANKET	USED ON RT75/95 HYDROSTAT ONLY
3.	313-238	-	FLOOR PLATE	
	318-793	-	FLOOR PLATE	
	324-566	-	FLOOR PLATE	HT115 ONLY
4.	315-142	-	PEDESTAL	
5.	117-847	1	HEAT BLANKET	

FOOTNOTES

WEIGHT RACK

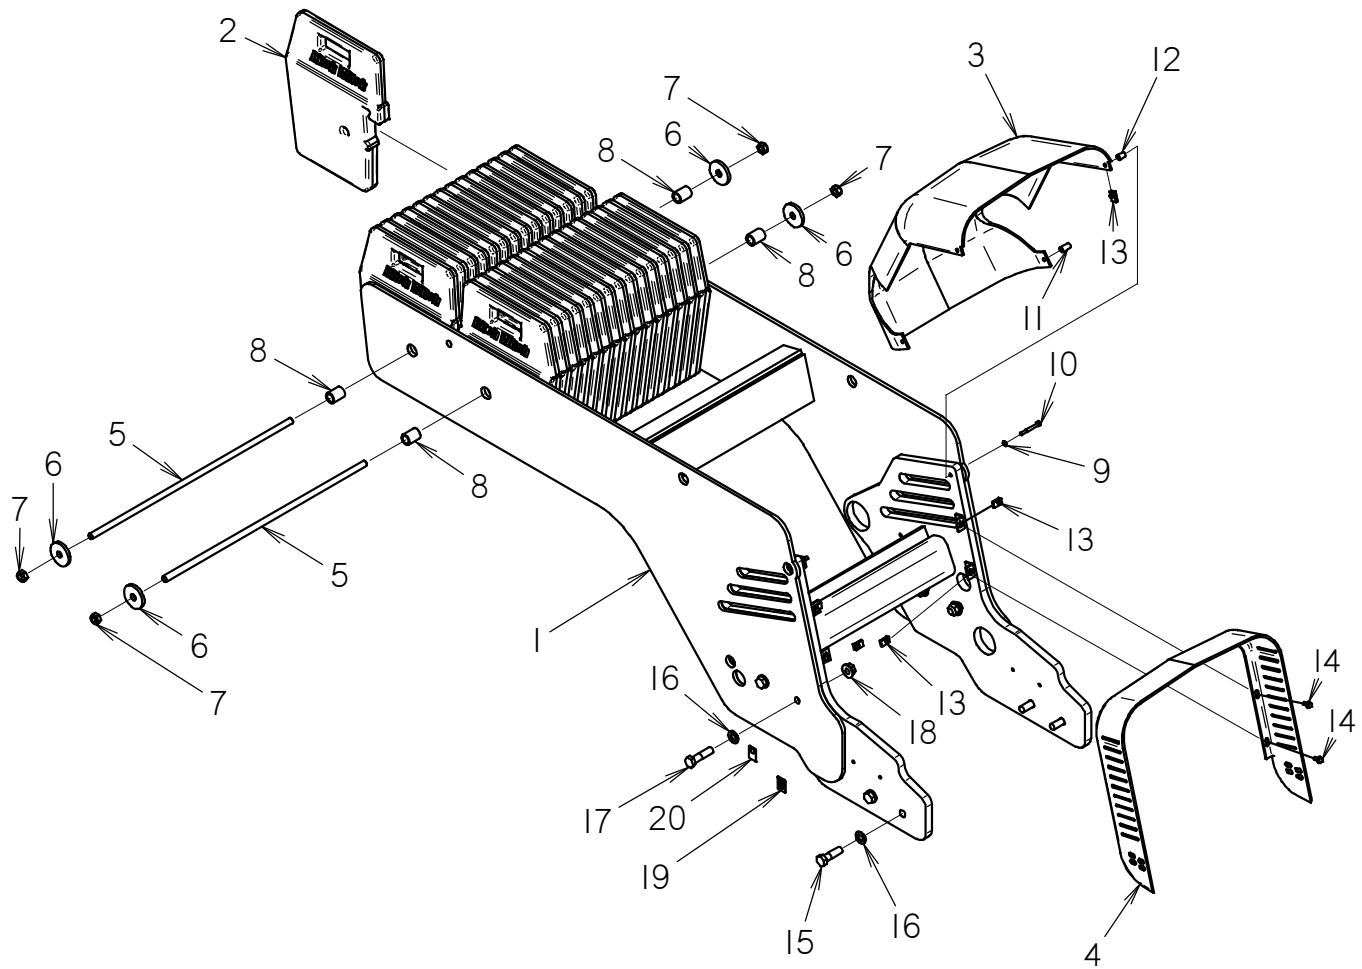

WEIGHT RACK

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	191-511		WEIGHT RACK, EXTENDED	INCLUDES ITEMS 1 & 3-20, ALSO SEE FOOTNOTE 1
1	329-401	1	FRAME, WEIGHT RACK	
2	375-080	30	COUNTERWEIGHT	
3	316-755	1	COVER	
4	308-883	1	TOP VENT PANEL	
5	107-058	2	MOUNT BOLT (3/4-NC X 33")	
6	105-423	4	WASHER (3/4")	
7	105-372	4	LOCKNUT (3/4-NC)	
8	181-398	4	SPACER	
9	106-389	4	WASHER (M8)	
10	106-330	4	SCREW (M8-1.25 X 70MM)	
11	179-444	2	SPACER	
12	179-443	2	SPACER	
13	107-135	8	CLIP NUT (M8-1.25)	
14	106-991	4	FLG LK SCREW (M8-1.25 X 20MM)	
15	106-459	4	SCREW (M20-2.50 X 70MM, 10.9)	
16	106-399	8	WASHER (M20, HARDENED)	
17	107-127	4	SCREW (M20-2.50 X 80MM, 10.9)	
18	106-356	4	FLG NUT (M20-2.50, 10.9)	
19	274-318	2	TIE DOWN LOCATION	
20	274-442	2	LIFT LOCATION	


NOT SHOWN:

FOOTNOTES:

1. WEIGHT RACK REQUIRED FOR SEVERAL HYDRAWHEEL SAWS.

NOTE:

TAPE DISPENSER

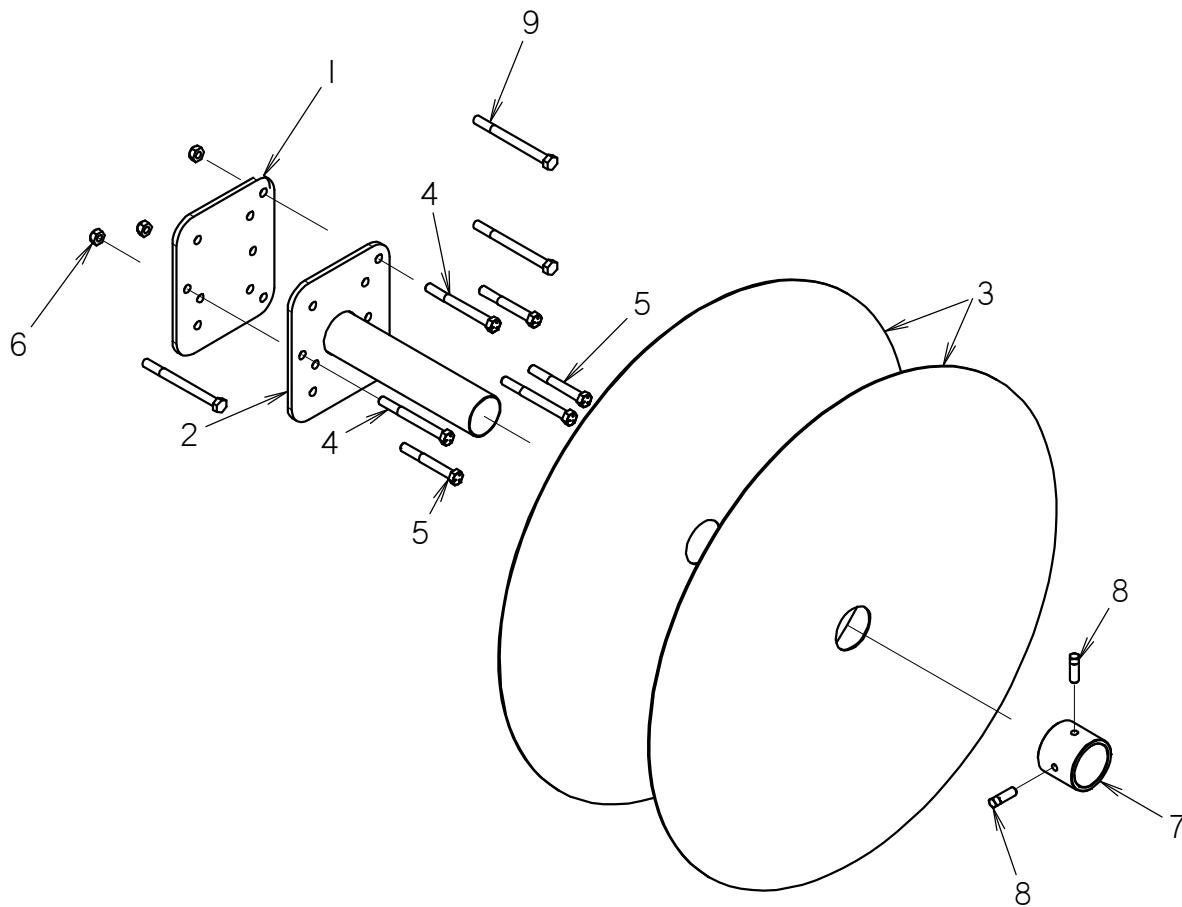

TAPE DISPENSER

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	190-1637	-	TAPE DISPENSER	INCL'S REF #'S 1 THRU 9
1	301-1490	1	PLATE	
2	301-1399	1	MOUNT	
3	301-1491	2	RING	
4	105-258	3	BOLT (3/8-NC X 3-3/4")	RT80 & RT55
5	105-098	3	BOLT (3/8-NC X 3")	HT/RT115 & RT115Q
6	105-047	3	LOCKNUT (3/8-NC)	
7	301-1492	1	COLLAR	
8	105-714	2	SET SCREW (3/8-NC X 1", SQ)	
9	105-207	3	BOLT (3/8-NC X 4-1/4")	RT80Q


NOT SHOWN:

FOOTNOTES:

NOTE:

CONTROL COMPONENTS

BFB BLADE CONTROLS

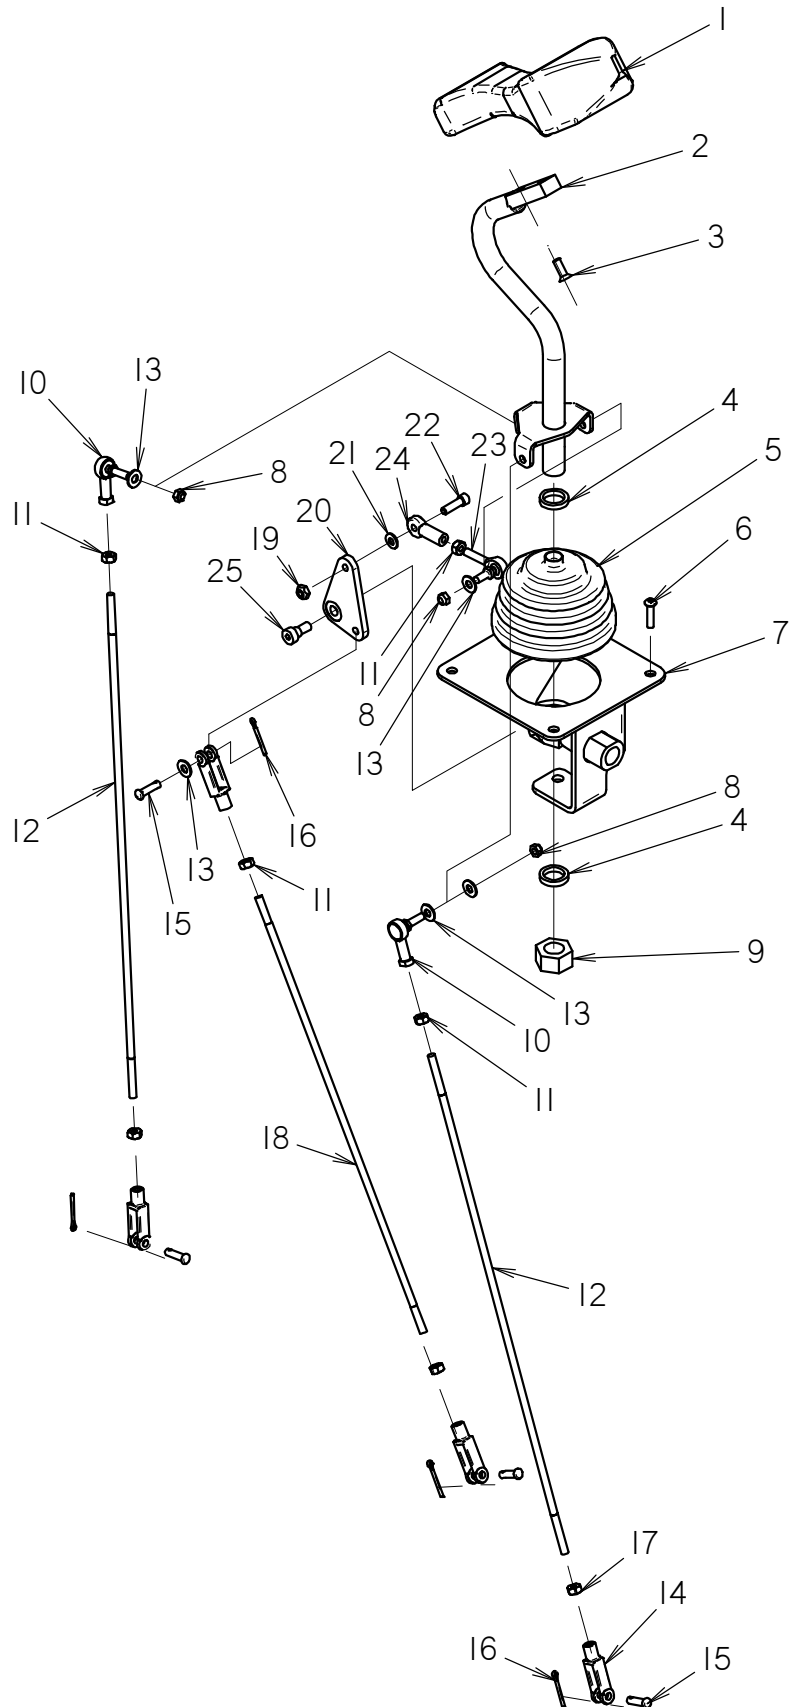

BFB BLADE CONTROLS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	117-345	1	CONTROL HANDLE	
2	305-728	1	HANDLE ASSEMBLY	
3	105-263	2	BOLT (1/4-NC X 3/4", CSK, SOC)	
4	178-421	2	BUSHING	
5	110-330	1	DUST BOOT	
6	107-312	4	SCREW (M6-1.00 X 25MM, BUT SOC)	
7	305-727	1	MOUNT ASSEMBLY	
8	107-770	3	LOCKNUT (1/4-NF, NYL INSERT)	
9	105-387	1	LOCKNUT (3/4-NF)	
10	160-540	2	ROD END	
11	105-152	4	NUT (1/4-NF)	
12	179-884	2	ROD	USE LINKAGE ROD 306-767 ON EARLIER MACHINES
13	106-076	5	WASHER (1/4")	
14	107-790	3	CLEVIS (1/4-NF-LH)	
15	110-082	4	CLEVIS PIN (1/4 X 11/16)	
16	105-508	4	COTTER PIN (3/32" X 1")	
17	105-878	3	NUT (1/4-NF, LH)	
18	179-885	1	ROD (16.62")	USE LINKAGE ROD 107-581 ON EARLIER MACHINES
19	105-085	1	LOCKNUT (1/4"-NC)	
20	305-724	1	LINKAGE PLATE	
21	105-284	1	WASHER (3/16")	
22	105-087	1	BOLT (1/4-NC X 7/8", SOC)	
23	110-565	1	BALL JOINT (1/4-NF)	
24	110-281	1	ROD END (1/4-NF, FM)	
25	107-582	1	SHLD BOLT (3/8" X 1/4", 5/16-NC)	

NOT SHOWN:

FOOTNOTES:

NOTE:

GRND SPEED DIRECTION HAND CNTL

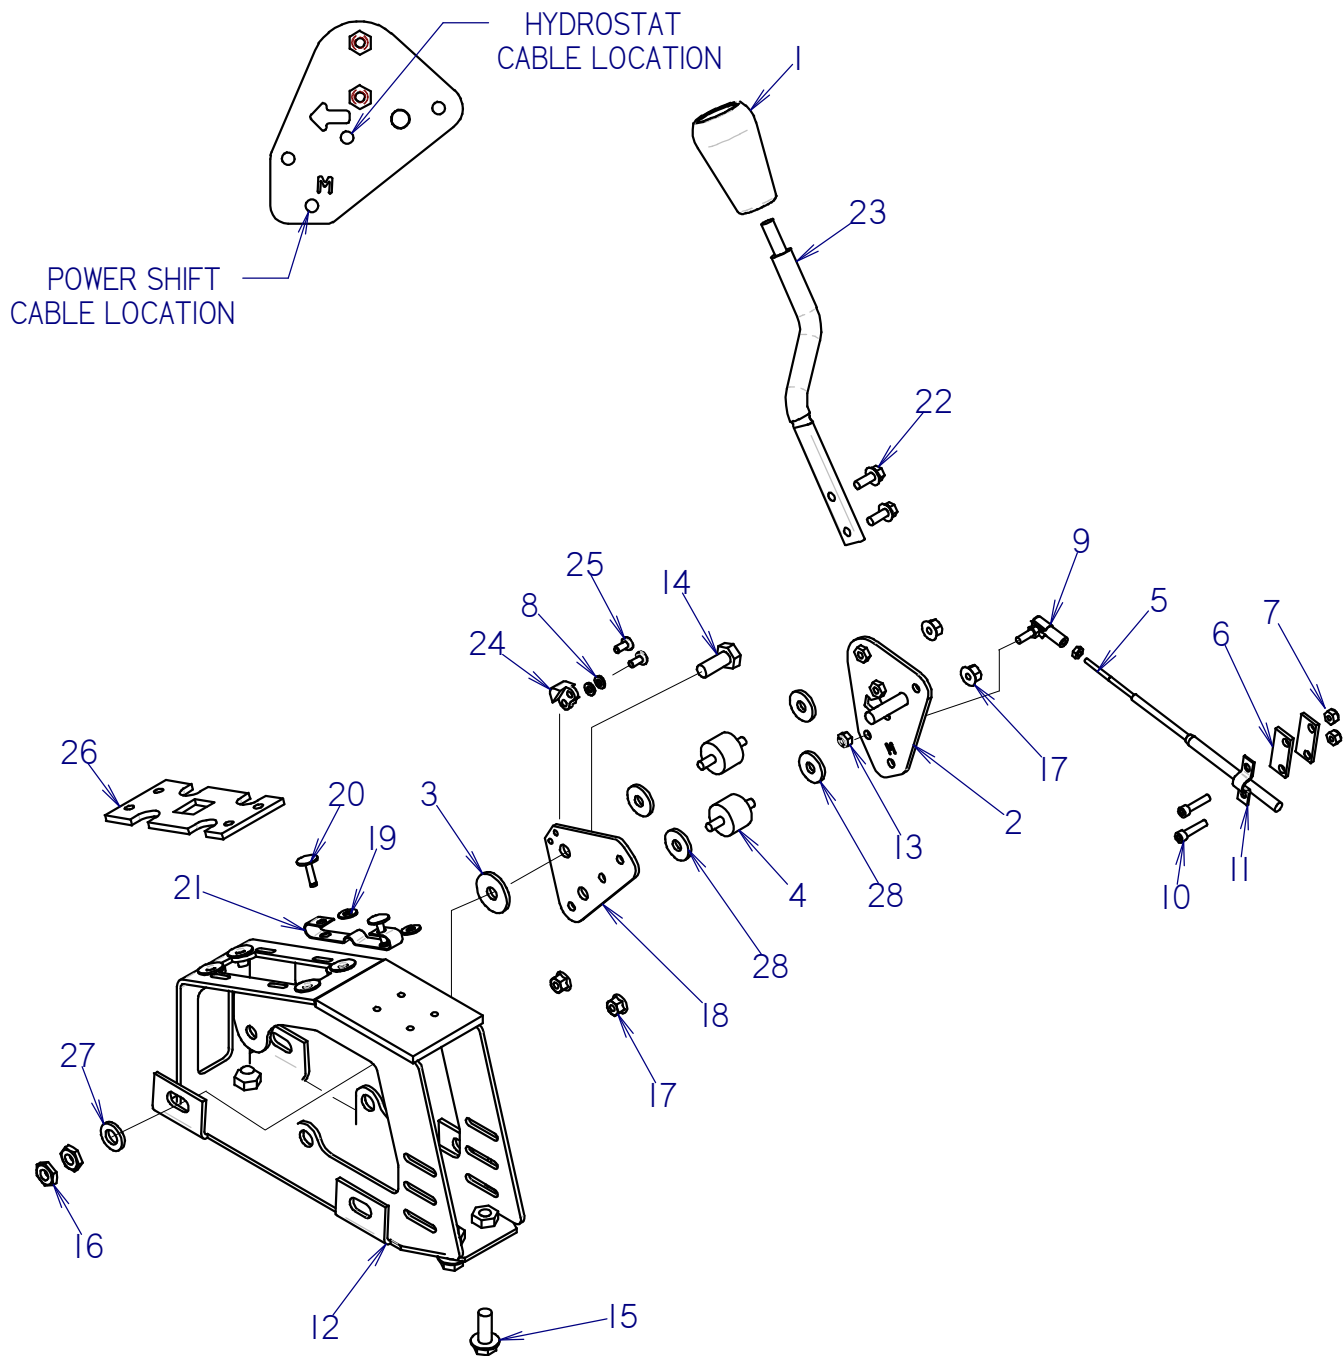

GRND SPEED DIRECTION HAND CNTL


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	110-445	1	KNOB (3/8-NC, ORANGE)	
2	319-914	1	RIGHT CONTROL	SEE FOOTNOTE 3 AND INCLUDES HARDWARE
3	107-529	1	WASHER UHMW (3/8)	
4	116-980	2	SHOCK MOUNT	
5	196-287	1	CONTROL CABLE	SEE FOOTNOTE 4
6	331-166	2	BOLT-ON BACK-UP (.306")	
7	106-048	2	LOCKNUT (#10-24)	
8	106-205	2	WASHER (.191")	
9	110-318	1	BALL JOINT (#10-32, FM)	
10	105-810	2	BOLT (#10-24 X 7/8", SOC)	
11	110-697	1	BOLT-ON CLAMP (.360")	
12	309-227	1	CONTROL LEVER FRAME	
13	107-770	1	LOCKNUT (1/4-NF, NYL INSERT)	
14	105-245	1	SCREW (M10-1.50 X 25MM)	
15	107-001	4	FLG LK SCREW (M10-1.50 X 25MM)	
16	107-769	2	JAM NUT (M10-1.50)	SEE FOOTNOTE 2
17	105-832	4	FLG LOCKNUT (1/4-NC)	
18	310-127	1	PIVOT PLATE	
19	105-284	2	WASHER (3/16")	
20	110-348	2	POP RIVET (3/16" X .664")	
21	115-598	1	SPRING DETENT	
22	106-987	2	FLG LK SCREW (M6-1.00 X 16MM)	
23	117-519	1	CONTROL HANDLE	
24	315-149	1	DETENT TIP	
25	106-271	2	SCREW (M5-0.80 X 8MM, PLPS)	SEE FOOTNOTE 1
26	316-476	1	TEMPLATE	
27	106-396	1	WASHER (M10, HARDENED)	
28	106-261	4	WASHER (.334")	

FOOTNOTES

1. USE LOCTITE 242 OR EQUIVALENT
2. TORQUE TO 70 IN.-LBS.
3. IF ORDERING THIS PART FOR MACHINE WITH S/N _____ OR OLDER, YOU MUST ALSO ORDER LEVER (#319-916) AND REFER TO PARTS PAGE "GRD SPEED DIRECTION FOOT CONTROL", IF THIS UNIT IS EQUIPPED WITH CRUISE CONTROL, PART 319-916 IS NOT NEEDED.
4. 196-287 IS FOR HYDROSTAT TRACTORS. USE 194-196 FOR POWER SHIFT TRACTORS.

NOTE:

GROUND SPEED DIRECTION FOOT CONTROL

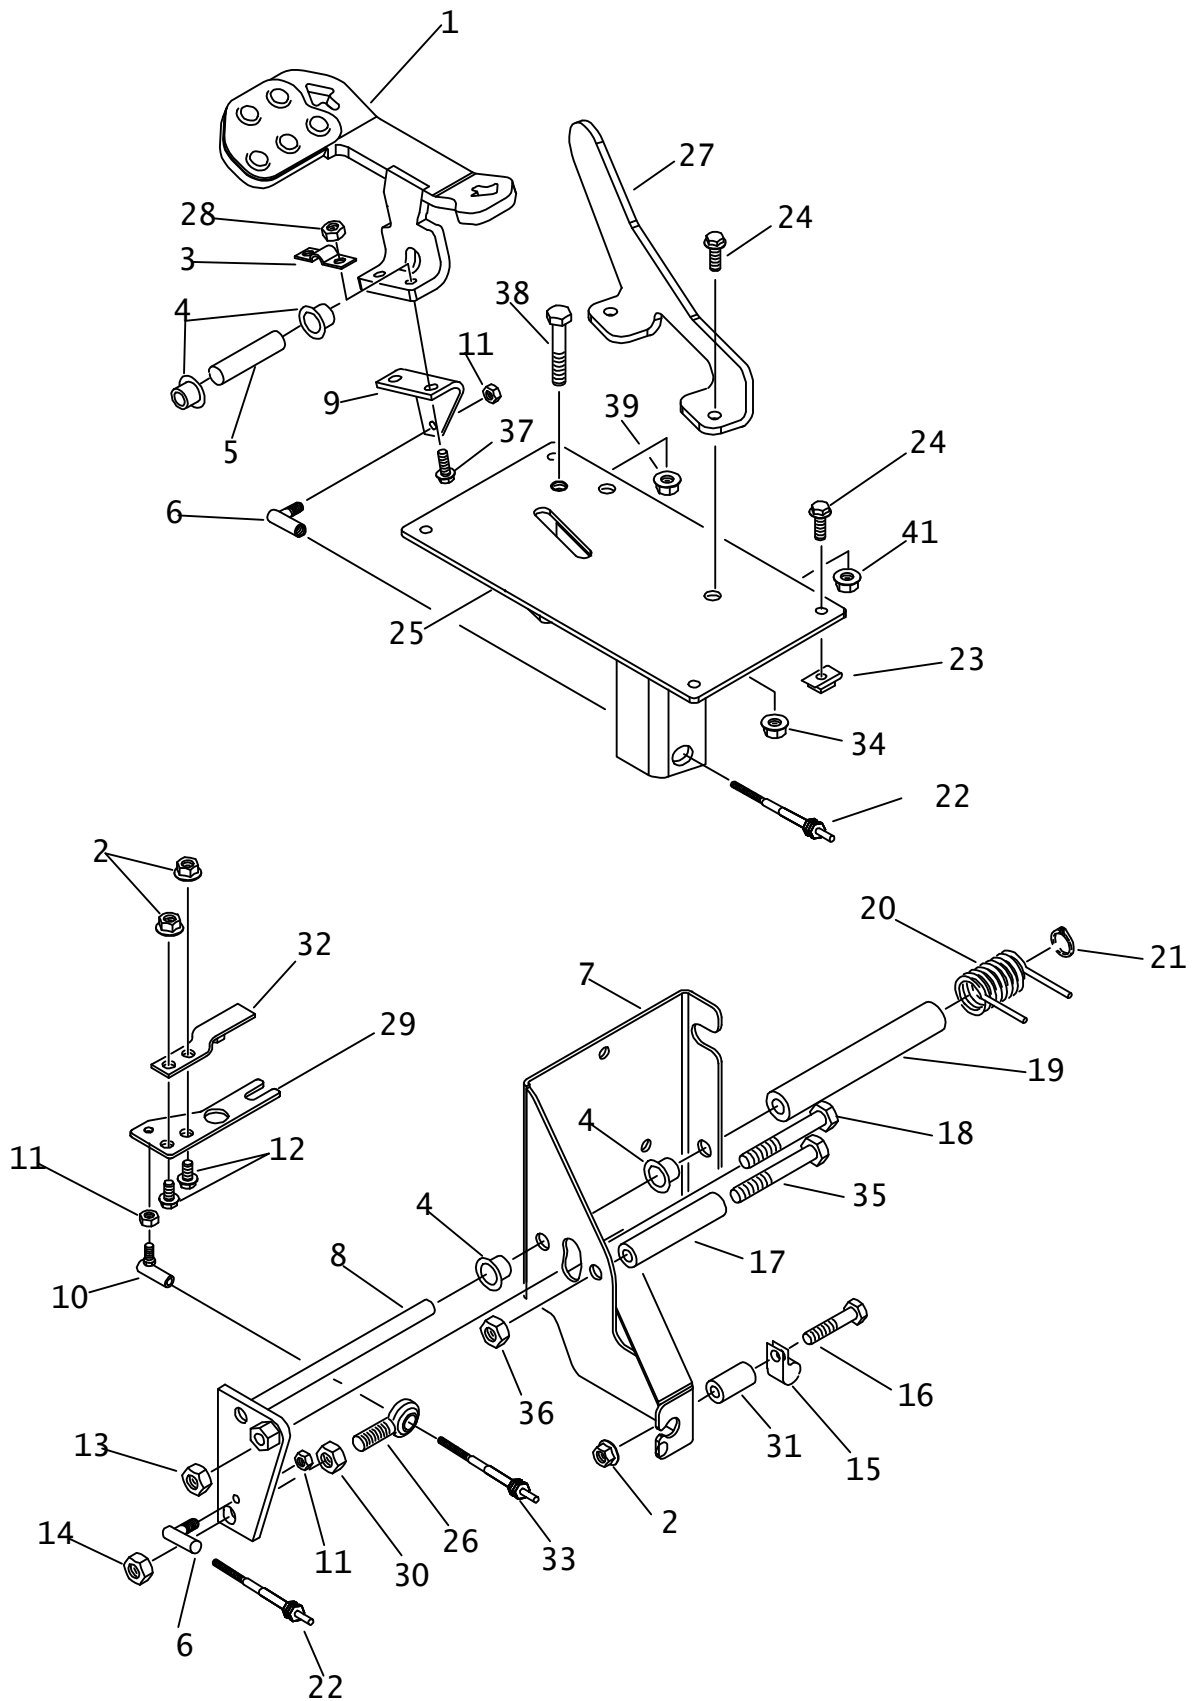

GROUND SPEED DIRECTION FOOT CONTROL

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	309-943	1	PEDAL	
2.	106-387	3	FLG LOCKNUT (M10-1.5)	
3.	310-411	1	CLAMP	
4.	179-293	4	BRONZE BUSHING	
5.	183-221	1	PIN	
6.	110-774	2	BALL JOINT (1/4-NF)	
7.	309-707	1	CABLE BRACKET	
8.	308-441	1	CONTROL ARM	
9.	309-939	1	CABLE BRACKET	
10.	110-318	1	BALL JOINT (#10-32, FM)	
11.	107-770	3	LOCKNUT (1/4-NF, NYL INSERT)	
12.	106-654	2	FLG LK SCREW (M10-1.50 X 16mm)	
13.	106-685	2	LOCKNUT (M12-1.75, PRV TRQ, 10.9)	
14.	105-188	1	LOCKNUT (7/16-NF)	
15.	110-333	1	BOLT-ON CLAMP (1")	
16.	106-628	1	SCREW (M10-1.50 X 60mm)	
17.	370-036	1	SPACER	
18.	106-620	1	SCREW (M12-1.75 X 150mm)	
19.	178-582	1	SPACER	
20.	115-650	1	TORSION SPRING	
21.	115-482	1	GRIP RING (.500")	
22.	196-359	1	CONTROL CABLE	
23.	107-135	4	CLIP NUT (M8-1.25)	
24.	106-992	6	FLG LK SCREW (M8-1.25 X 25mm)	
25.	331-595	1	PEDAL MOUNT	
26.	107-604	1	ROD END (7/16-NF)	
27.	319-365	1	PROTECTIVE BAR	
28.	106-175	2	NUT (M10-1.50)	
29.	<u>309-705</u>	1	LEVER	
	319-916	1	LEVER	SEE FOOTNOTE 1
30.	105-920	1	JAM NUT (7/16-NF)	
31.	181-566	1	SLEEVE (1.5")	
32.	365-240	-	CONTROL LEVER	
33.	196-287	-	CONTROL CABLE	
	506-021	-	NUT (#10-32)	
34.	106-386	2	FLG LOCKNUT (M8-1.25)	
35.	105-472	1	BOLT (1/2-NC X 5")	
36.	105-065	1	LOCKNUT (1/2-NC)	
37.	107-002	2	FLG LK SCREW (M10-1.50 X 30mm)	
38.	106-142	1	SCREW (M10-1.50 X 65mm)	
39.	106-387	1	FLG LOCKNUT (M10-1.5)	


FOOTNOTES:

- I. IF ORDERING THIS PART FOR A MACHINE WITH SERIAL NUMBER_____ OR OLDER, YOU MUST ALSO ORDER NUMBER 319-914 RIGHT CONTROL LEVER, AND REFER TO PARTS PAGE "GRD SPEED DIRECTION HAND CONTROL".

NOTE:

SEE INSTALLATION INSTRUCTIONS

HYDROSTATIC SHIFT

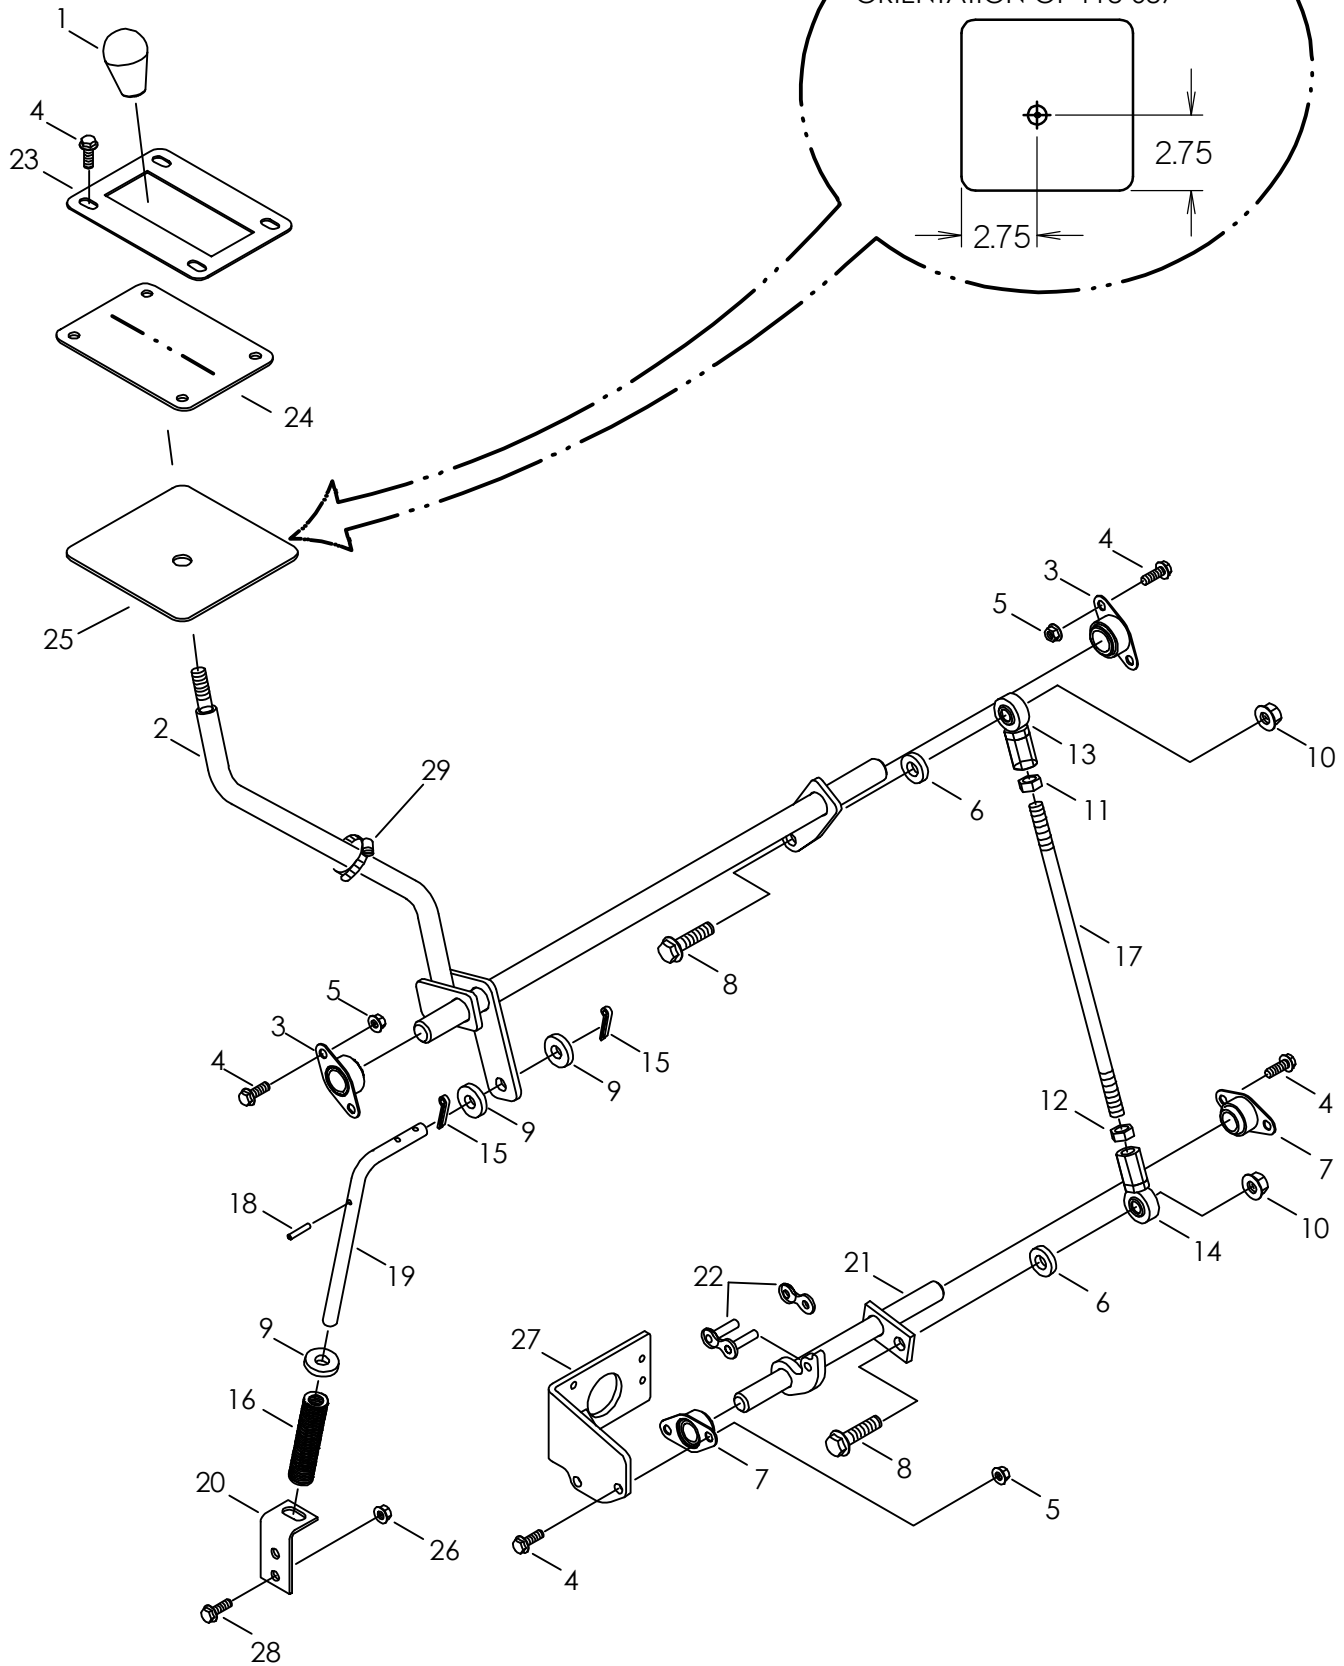

HYDROSTATIC SHIFT

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	110-375	1	KNOB (1/2-NC, YELLOW)	
2.	307-718	1	SHIFT ARM	
3.	125-488	2	FLANGE BUSHING (.875")	
4.	106-992	12	FLG LK SCREW (M8-1.25 X 25mm)	
5.	106-386	8	FLG LOCKNUT (M8-1.25)	
6.	106-397	2	WASHER (M12, HARDENED)	
7.	125-609	2	BRONZE BUSHING (.750", FLG)	
8.	107-004	2	FLG LK SCREW (M12-1.75 X 45mm)	
9.	105-244	AR	WASHER (1/2")	
10.	106-354	2	FLANGE NUT (M12-1.75)	
11.	106-447	1	JAM NUT (1/2-NF)	
12.	107-573	1	JAM NUT (1/2-NF, LH)	
13.	110-290	1	ROD END (1/2-NF, FM)	
14.	107-574	1	ROD END (1/2-NF, FM, LH)	
15.	105-506	2	COTTER PIN (3/16" X 1-1/2")	
16.	117-019	1	COMPRESSION SPRING	
17.	306-762	1	SHIFT ROD	
18.	105-525	1	ROLL PIN (3/16" X 1-1/4")	
19.	306-666	1	SPRING ROD	
20.	307-568	1	SPRING MOUNT	
21.	307-567	1	SHIFT ARM	
22.	130-304	1	CONNECTOR LINK (#80)	
23.	307-580	1	BELLOW MOUNT	
24.	307-585	1	BELLOW	OBSOLETE
	118-074	1	DUST SHIELD	
25.	118-087	1	DUST SHIELD	
26.	106-266	2	FLG NUT (M10-1.50)	
27.	307-563	-	SHIFT MOUNT	
28.	107-002	2	FLG LK SCREW (M10-1.50 X 30mm)	
29.	110-217	1	WORM CLAMP (7/16" TO 1")	SEE FOOTNOTE 1


NOT SHOWN:

FOOTNOTES:

1. PLACE WORM CLAMP (110-217) ON SHIFTER TO PREVENT DUST SHIELD (118-087) FROM SLIPPING DOWN.

NOTE:

ATTACHMENT CONTROL HANDLE

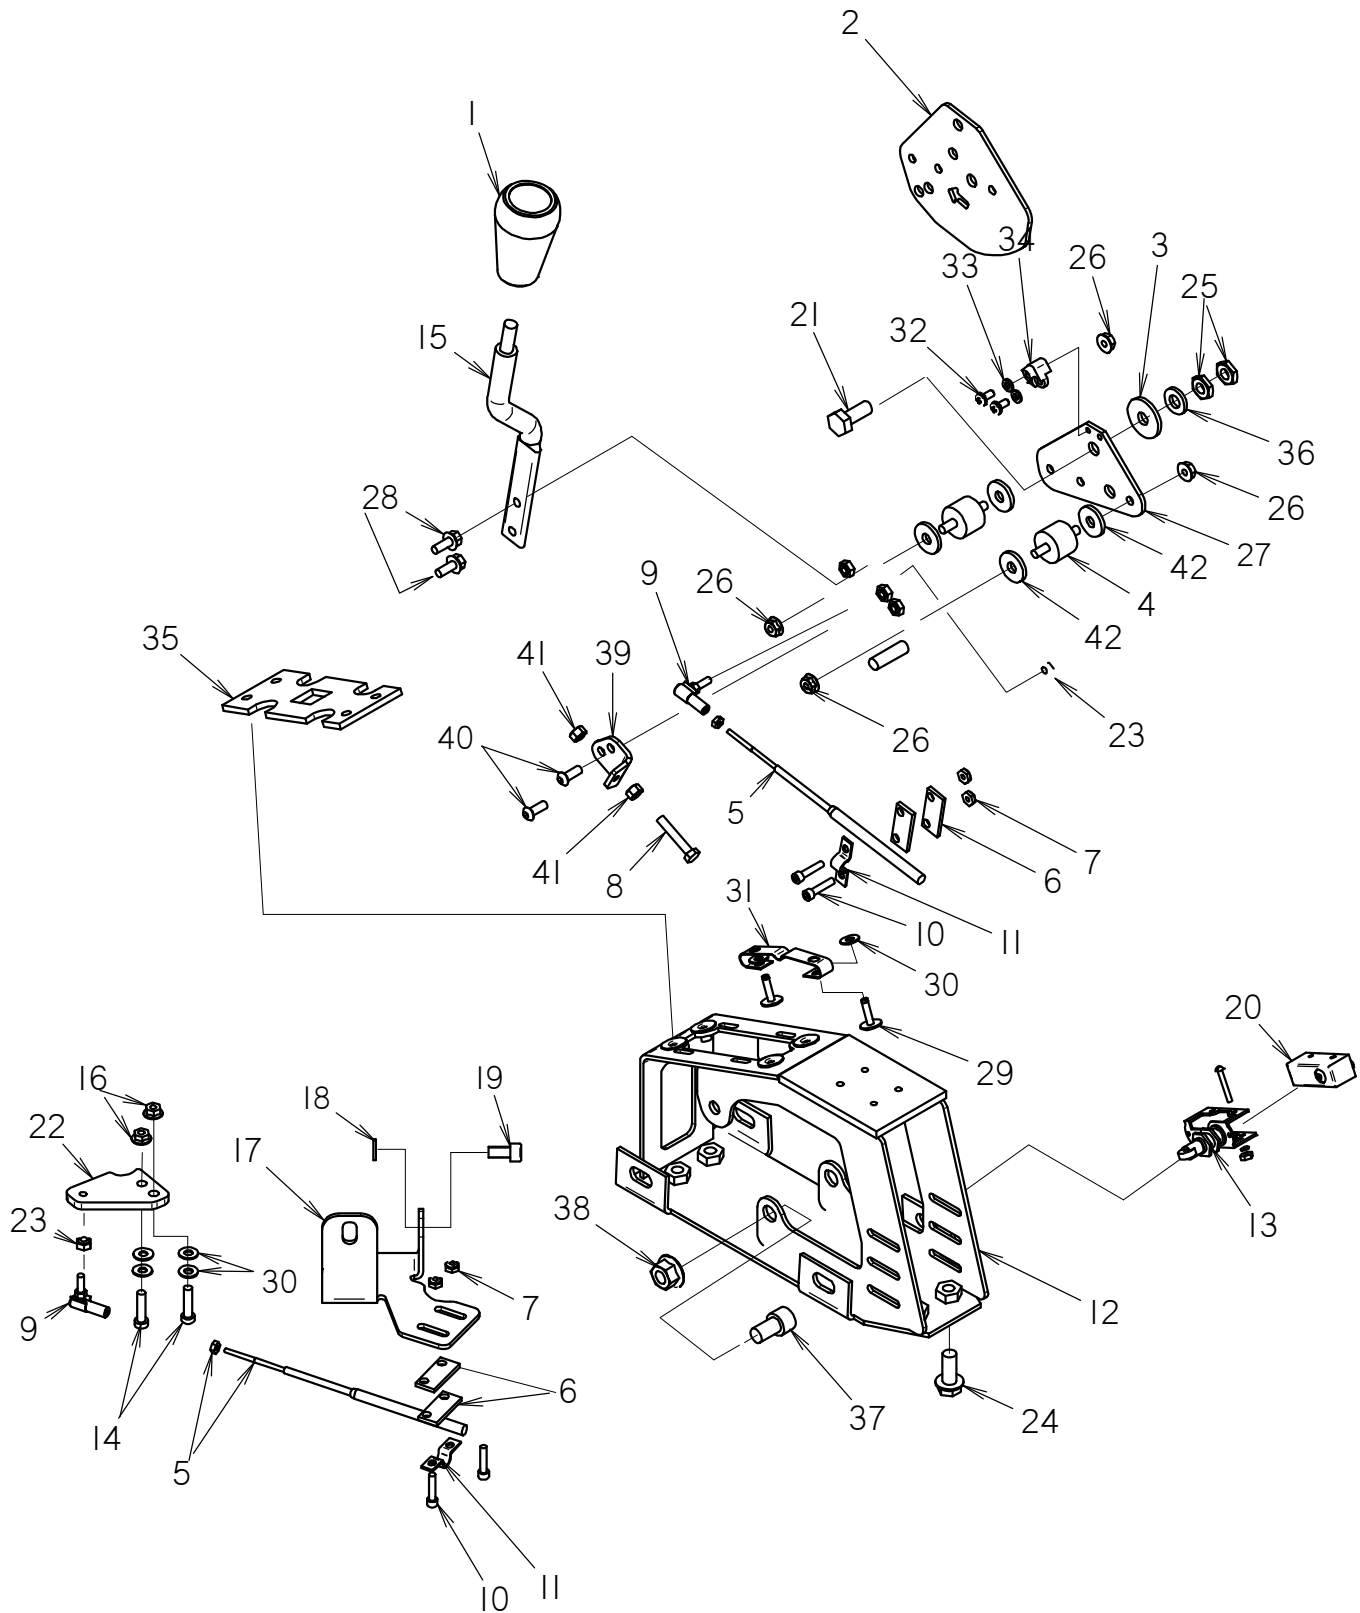

ATTACHMENT CONTROL HANDLE


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	117-470	1	KNOB (3/8-NC, YELLOW)	
2	309-671	1	LEFT CONTROL LEVER	
3	107-529	1	WASHER UHMW (3/8)	
4	116-980	2	SHOCK MOUNT	
5	196-294	2	CONTROL CABLE	INCLUDES JAM NUT
6	331-166	4	BOLT-ON BACK-UP (.306")	
7	106-048	4	LOCKNUT (#10-24)	
8	105-688	1	SCREW (M6-1.00 X 35MM)	SEE FOOTNOTE 4
9	110-318	2	BALL JOINT (#10-32, FM)	
10	105-810	4	BOLT (#10-24 X 7/8", SOC)	
11	110-697	2	BOLT-ON CLAMP (.360")	
12	309-227	1	CONTROL LEVER FRAME	
13	215-082	1	ACTUATOR BRACKET	SEE FOOTNOTE 1 AND INCLUDES HARDWARE
14	107-322	2	SCREW (M6-1.00X25MM,SOC,12.9)	
15	117-519	1	CONTROL HANDLE	
16	106-385	2	FLG LOCKNUT (M6-1.00)	
17	308-682	1	ATTACHMENT BRACKET	
18	106-389	1	WASHER (M8)	
19	106-005	1	SCREW (M8-1.25 X 16MM, SOC)	
20	215-1455	1	PLUNGER SWITCH	SEE FOOTNOTE 1 AND INCLUDES HARDWARE
21	105-245	1	SCREW (M10-1.50 X 25MM)	
22	308-901	1	LEVER EXTENSION	
23	107-770	2	LOCKNUT (1/4-NF, NYL INSERT)	
24	107-001	4	FLG LK SCREW (M10-1.50 X 25MM)	
25	107-769	2	JAM NUT (M10-1.50)	SEE FOOTNOTE 3
26	105-832	4	FLG LOCKNUT (1/4-NC)	
27	310-127	1	PIVOT PLATE	
28	106-987	2	FLG LK SCREW (M6-1.00 X 16MM)	
29	110-348	2	POP RIVET (3/16" X .664")	
30	105-284	6	WASHER (3/16")	
31	115-598	1	SPRING DETENT	
32	106-271	2	SCREW (M5-0.80 X 8MM, PLPS)	SEE FOOTNOTE 2
33	106-205	2	WASHER (.191")	
34	315-149	1	DETENT TIP	
35	316-476	1	TEMPLATE	
36	106-396	1	WASHER (M10, HARDENED)	
37	107-277	1	SCREW (M12-1.75 X 20MM, SOC)	SEE FOOTNOTE 4
38	106-709	1	FLG LK NUT (M12-1.75)	SEE FOOTNOTE 4
39	316-851	1	STOP	SEE FOOTNOTE 4
40	107-193	2	SCREW (M6-1.00 X 16MM,BUT SOC)	SEE FOOTNOTE 2
41	106-538	2	LOCKNUT (M6-1.00,PRV TRQ,10.9)	SEE FOOTNOTE 4
42	106-261	4	WASHER (.334")	

FOOTNOTES:

1. USED W/COMBO ATTACHMENTS
2. USE LOCTITE 242 OR EQUIVALENT
3. TORQUE TO 70 IN-LBS
4. USE WITH H732, H752, H932, H952

NOTE:

CRUISE CONTROL

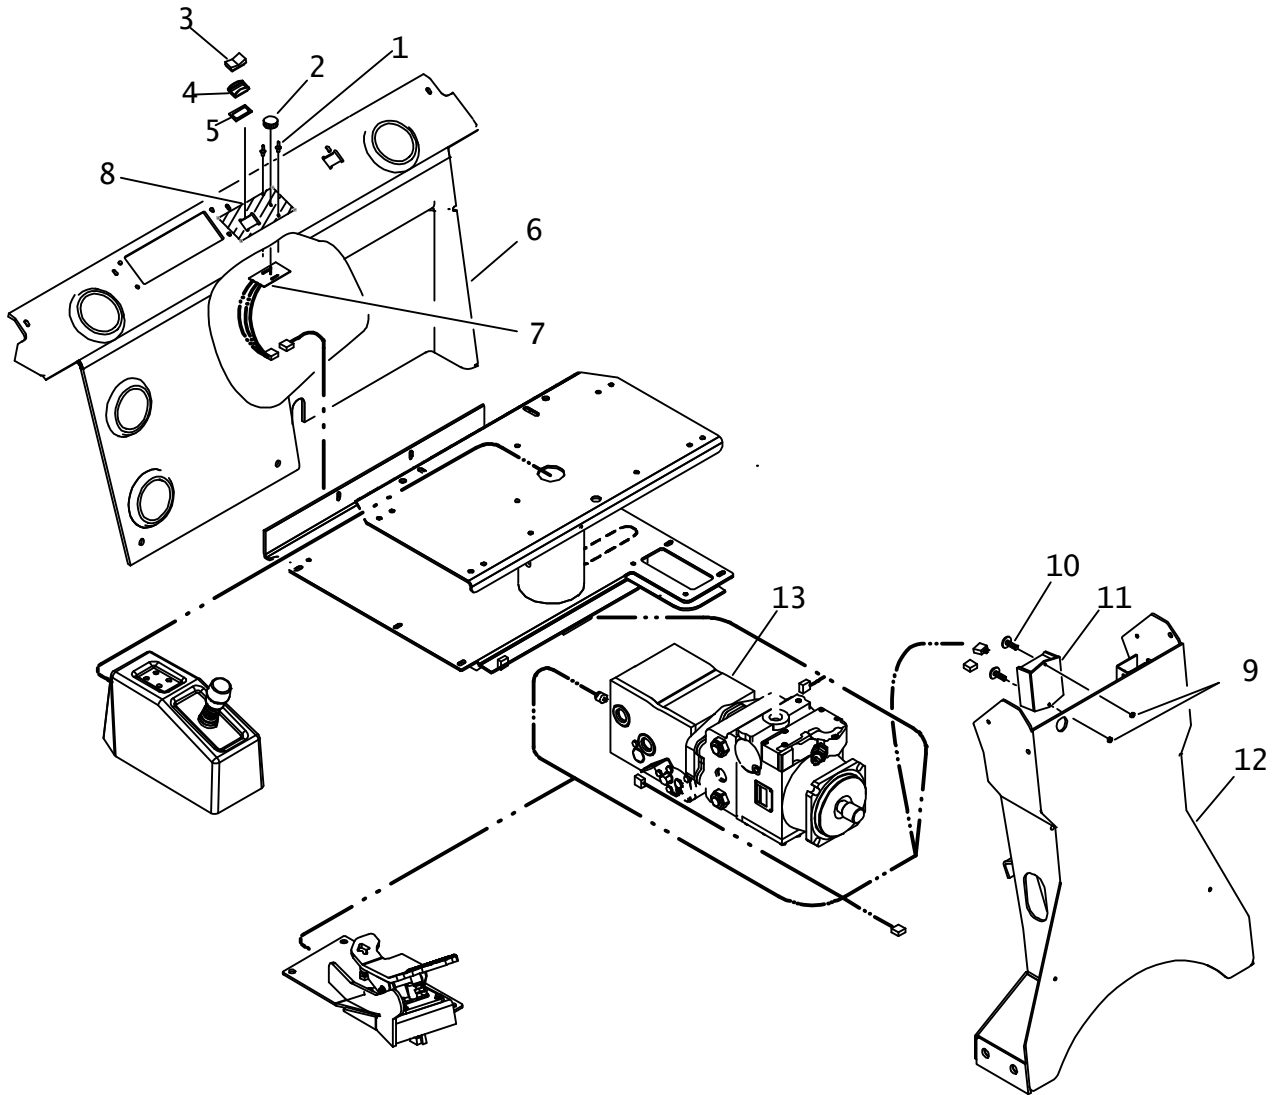

CRUISE CONTROL

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	110-560	2	POP RIVET (3/16" X 1/2 ", ALUM)	
2.	110-641	1	KNOB (1/8", BLK)	
3.	217-762	1	ROCKER SWITCH (SPDT)	
4.	110-854	1	SWITCH ACTUATOR GUARD	
5.	165-817	1	SWITCH GASKET	
6.	306-492	-	REAR PANEL	REFER TO (TILT STEERING) FOR DETAILS
7.	217-892	1	POTENTIOMETER-AUTOCROWD	
8.	273-449	1	CRUISE CONTROL OVERLAY	
9.	106-048	2	LOCKNUT (#10-24)	
10.	105-815	2	BOLT (#10-24 X 1", PAN SLT)	
11.	220-645	1	GENERALCRUISE CONTROL	SEE FOOTNOTE 3
12.	315-142	-	PEDESTAL	
13.	152-107	1	TANDEM PUMP (CRUISE CONTROL)	RT115/RT95 & SEE FOOTNOTE 1
	158-194	-	ATTACHMENT PUMP	RT115/RT95 & SEE FOOTNOTE 2
	157-354	-	GROUND DRIVE PUMP	EDC SEE NOT SHOWN
	153-866	1	TANDEM PUMP (CRUISE CONTROL)	RT75
	158-039	-	ATTACHMENT PUMP	RT75
	157-354	-	GROUND DRIVE PUMP	EDC
	217-258	-	ELECTRIC DISPLACEMENT CONTROL	
	165-728	-	SERVO GASKET	
	500-1937	-	SOLENOID	EDC

NOT SHOWN:


217-258 ELECTRIC DISPLACEMENT CONTROL
 165-728 SERVO GASKET
 500-1849 SOLENOID, EDC, MCVII16A3102 SAUER

FOOTNOTES:

1. TANDEM PUMP 152-107 SUPERCEDES PUMP 153-867.
2. ATTACHMENT PUMP 158-194 SUPERCEDES PUMP 158-038.
3. CRUISE CONTROL 220-645 SUPERCEDES CRUISE CONTROL 220-569.

NOTE:

CRUISE HAND CONTROL

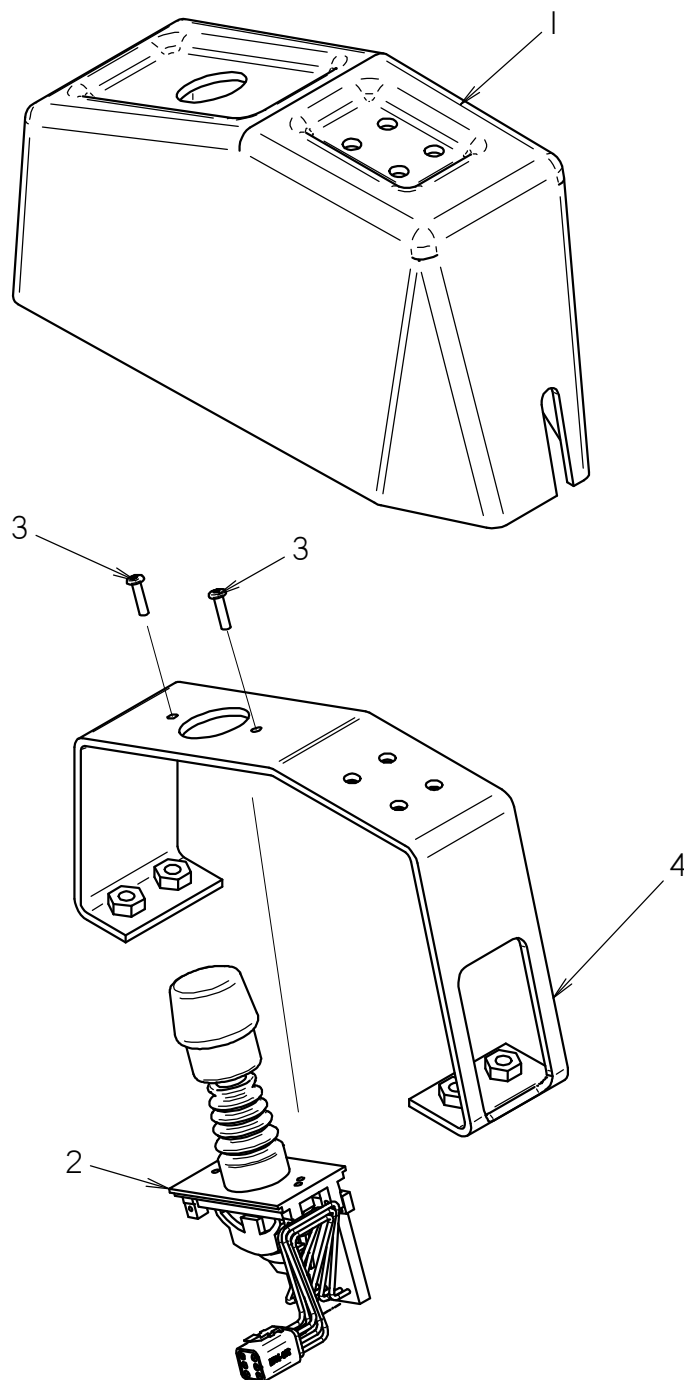

CRUISE HAND CONTROL

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	324-563	1	RIGHT SEAT CRUISE CONSOLE	
2	215-1943	1	ONE AXIS 12V HAND CTRL, ORG KNOB DEUTSCH	SEE FOOTNOTE 1, SEE NOT SHOWN FOR SERVICE PART
3	105-649	2	BOLT (#10-32 X .75", BUT)	
4	323-963	1	CRUISE HAND CONTROL BASE	

NOT SHOWN:


500-2132 KNOB, ORANGE

FOOTNOTES:

1. IF REPLACING HAND CONTROL 215-1242, 215-1536, OR 215-1663 USE KIT 190-2093, WHICH INCLUDES GROUND DRIVE HAND CONTROL 215-1943 AND CONNECTORS, BEGINS WITH S/N: CMWR15T3HD0000307.

NOTE:

CRUISE FOOT CONTROL

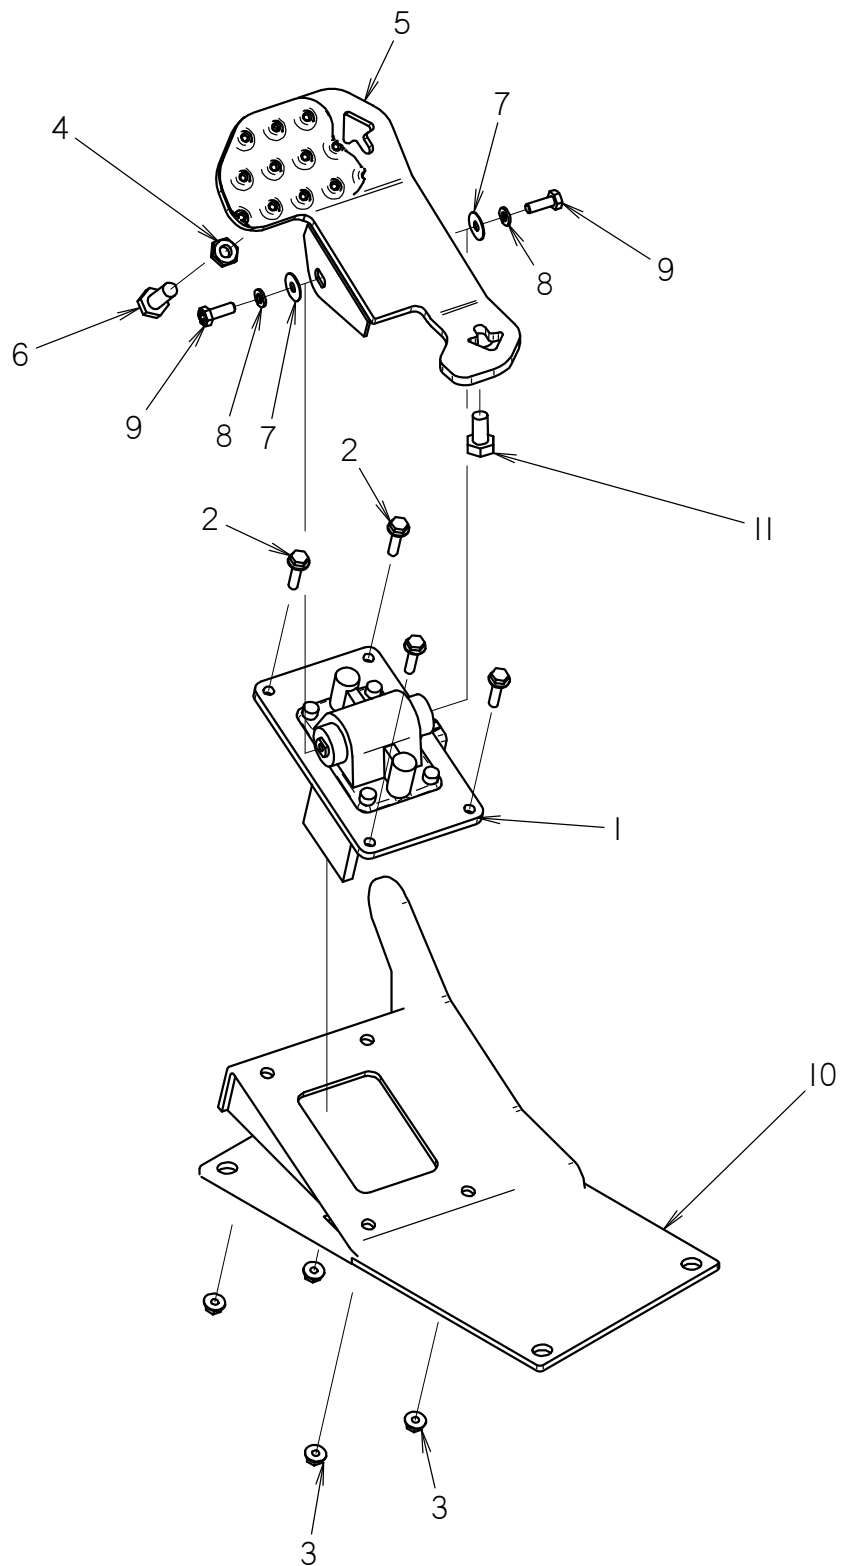

CRUISE FOOT CONTROL

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	215-1941	1	ONE AXIS 12V FOOT CONTROL, DEUTSCH	SEE FOOTNOTES 1 & 2
2	106-848	4	FLG SCREW (M6-1.00 X 25MM)	
3	106-385	4	FLG LOCKNUT (M6-1.00)	
4	107-769	1	JAM NUT (M10-1.50)	
5	324-554	1	PEDAL	
6	106-079	1	SCREW (M10-1.50 X 30MM)	
7	107-092	2	WASHER (254")	
8	105-079	2	LOCK WASHER (1/4)	
9	105-865	2	BOLT (1/4-NC X 3/4", GD8)	
10	323-921	1	CRUISE FOOT CONTROL BASE	
11	105-274	1	SCREW (M10-1.50 X 20MM, 10.9)	


NOT SHOWN:

FOOTNOTES:

1. USE ON RT115Q BEGINS WITH S/N: CMWR115QHD0000478. FOR RT115Q UNITS BEFORE THIS SERIAL NUMBER, USE KIT 190-1827 TO REPLACE CONTROLS AND UPDATE THE WIRE HARNESS, 215-1559, WITH THE CORRECT CONNECTORS.
2. IF REPLACING FOOT CONTROL 215-1537 ON A RT95 CRUISE UNIT OR RT115 CRUISE UNIT, USE KIT 190-2091, WHICH INCLUDES FOOT CONTROL 215-1941 AND CONNECTORS, BEGINS WITH S/N: CMWR15T3HD0000307.

NOTE:

REAR STEER CONTROL

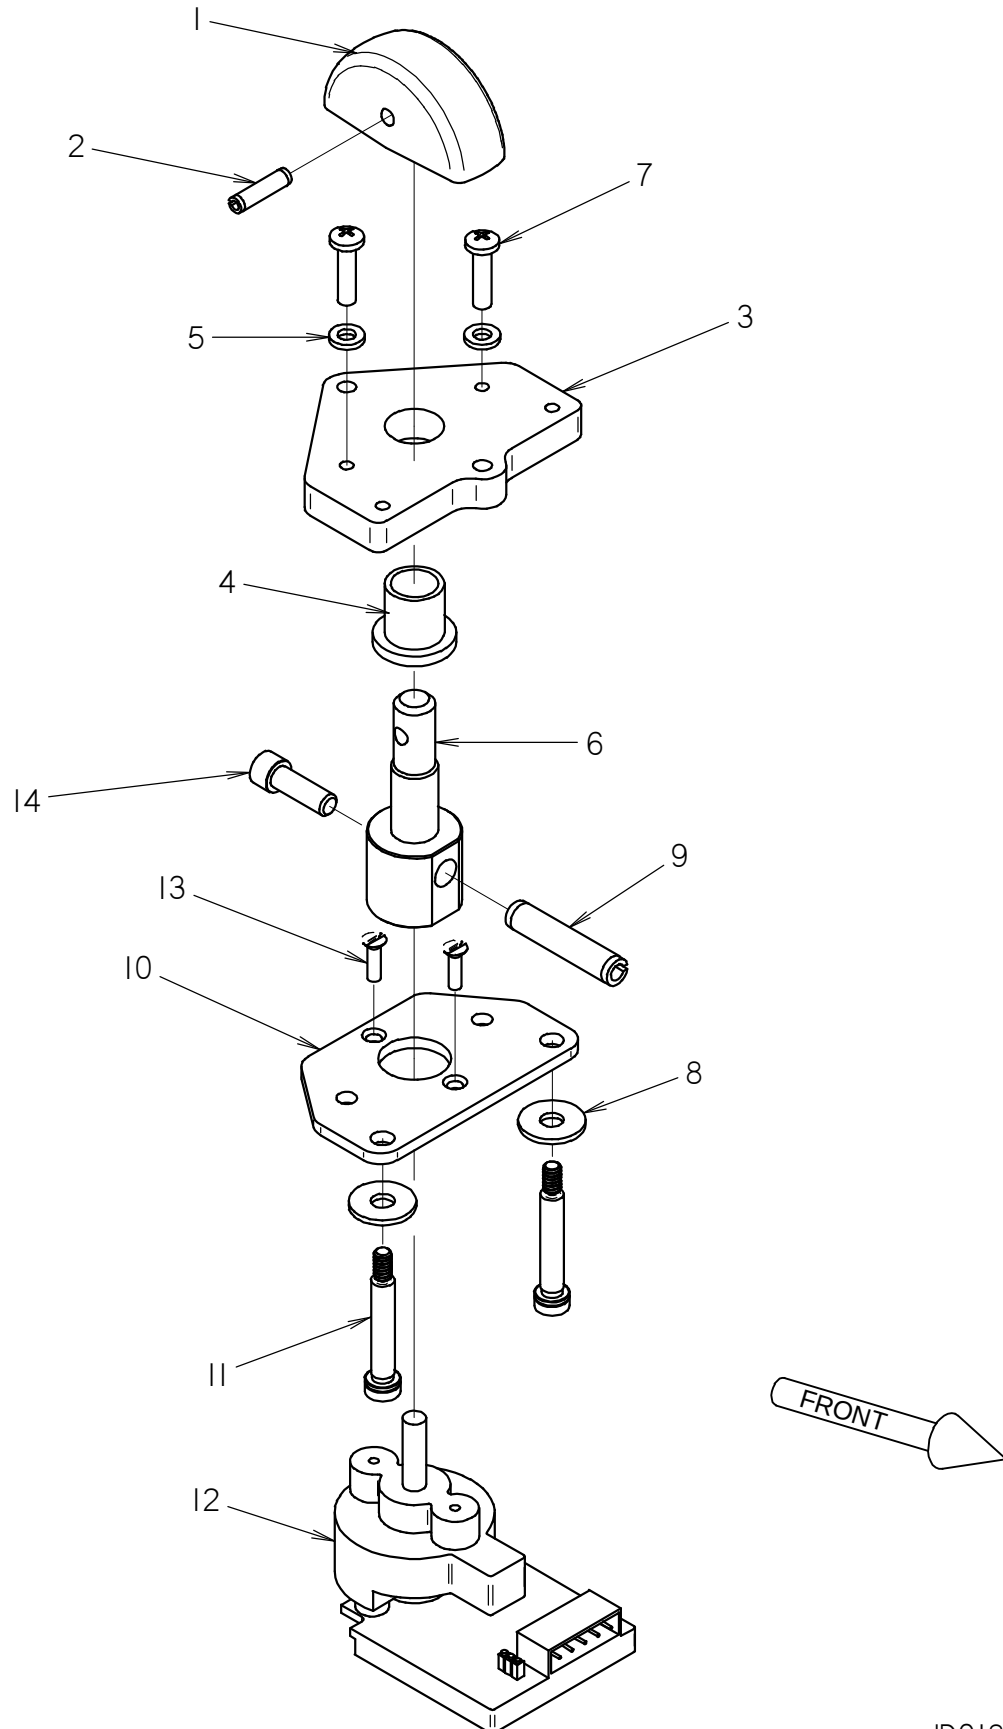

REAR STEER CONTROL

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	350-1919	-	REAR STEER CONTROL	INCL REF #S 1 THRU 14
1	117-887	1	KNOB	
2	105-522	1	ROLL PIN (3/16" X 3/4")	
3	318-366	1	MOUNT PLATE	
4	125-447	1	BUSHING	
5	106-205	2	WASHER (191")	
6	300-4783	1	SHAFT	
7	106-049	2	BOLT (#10-24 X 3/4", PLPS)	
8	107-801	2	WASHER (M6)	
9	105-529	1	ROLL PIN (5/16" X 1-1/2")	
10	318-367	1	BOTTOM PLATE	
11	107-785	2	SHLD BLT(1/4" X 1-1/4",#10-24)	SEE FOOTNOTE 1
12	215-1225	1	SWITCH, ROTARY HALL EFFECT	SEE FOOTNOTE 2
13	106-601	2	SCREW (#6-32 X 1/2", CSK)	SEE FOOTNOTE 1
14	105-161	1	BOLT (1/4-NC X 3/4", SOC)	SEE FOOTNOTE 1

NOT SHOWN:

FOOTNOTES:


1. USE LOCTITE 242 OR EQUIVALENT
2. SENSOR 215-1225 HAS BEEN SUPERSEDED BY KIT 190-1613. SEE PARTS PAGE ID0257134 FOR S/N BREAKS AND LIST OF PARTS.

NOTE:

REAR STEER CONTROL ASSEMBLY 350-1919 HAS BEEN SUPERSEDED. ORDER KIT 190-1613 IF REPLACING ASSEMBLY 350-1919 OR SENSOR 215-1225.

REAR STEER MANUAL CONTROL KIT

BEGINS WITH S/N: CMWR15T3VA0000170, CMWRT95MEA0000327, & CMWRT95HLA0000392

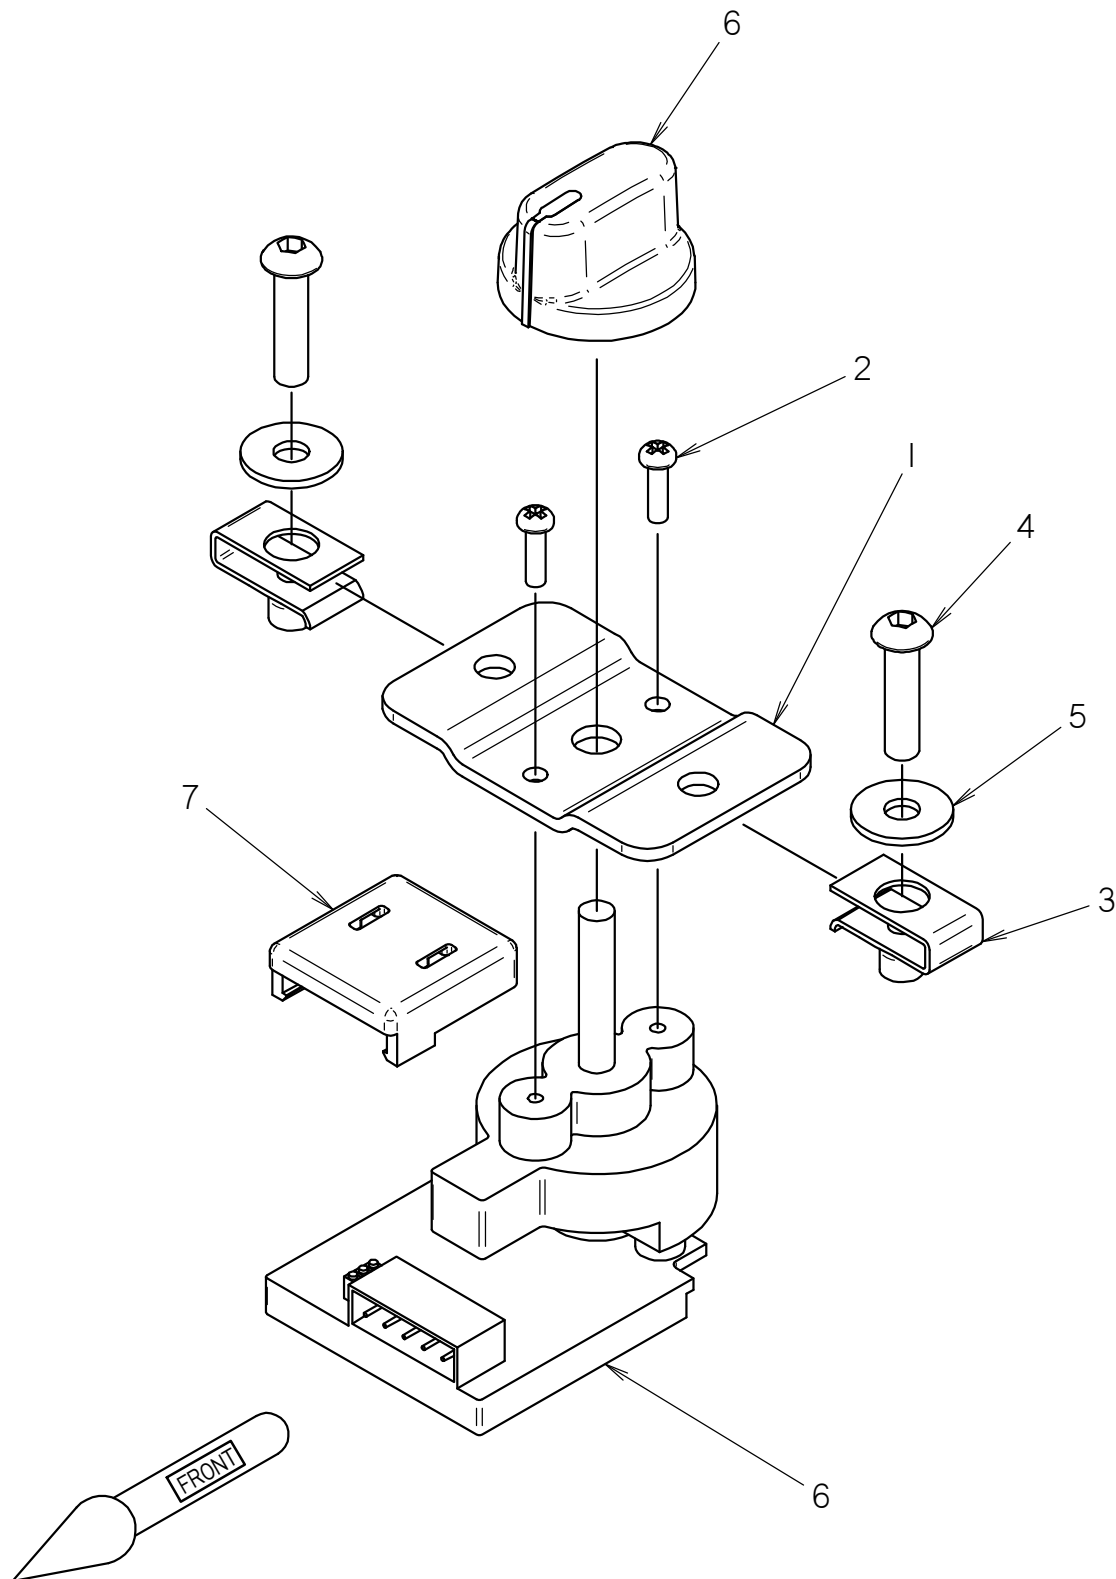

REAR STEER MANUAL CONTROL KIT

BEGINS WITH S/N: CMWR15T3VA0000170, CMWRT95MEA0000327, & CMWRT95HLA0000392

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	190-1613		REAR STEER MANUAL CONTROL KIT	INCLUDES ITEMS 1 - 6
1	301-0531	1	MANUAL CONTROL MOUNT PLATE	
2	106-367	2	SCREW (#6-32 X 1/2" PLPS SS)	SEE FOOTNOTE 2
3	106-574	2	CLIP NUT (M6-1.00)	
4	107-312	2	SCREW (M6-1.00 X 25MM, BUT SOC)	
5	107-801	2	WASHER (M6)	
6	215-1619	1	SENSOR, ROTARY HALL EFFECT (1.30" SHAFT)	SEE FOOTNOTE 1
7	362-1576	1	PQ CONNECTOR COVER	SEE FOOTNOTE 3 FOR S/N BREAKS.

NOT SHOWN:

FOOTNOTES:



1. THE MANUAL CONTROL KNOB FOR THE 215-1619 SENSOR HAS SERVICE PART NUMBER 500-2008.
2. USE LOCTITE 242 OR EQUIVALENT.
3. BEGINS WITH S/N: CMWR15T3AC0000254, CMWRT95HKC0000419, CMWRT95MJC0000404

NOTE:

KIT 190-1613 SUPERSEDES SENSOR 215-1225, SHOWN ON PARTS PAGE ID0183867.

HYDRAULICS

BACKFILL BLADE HYDRAULICS

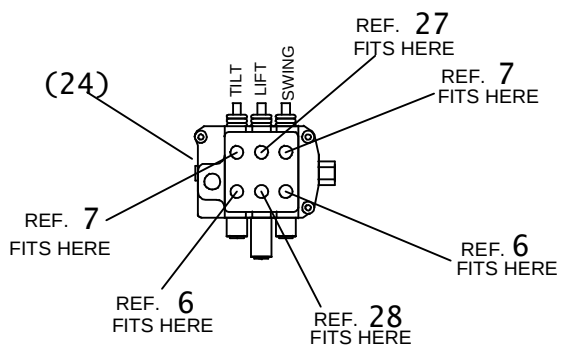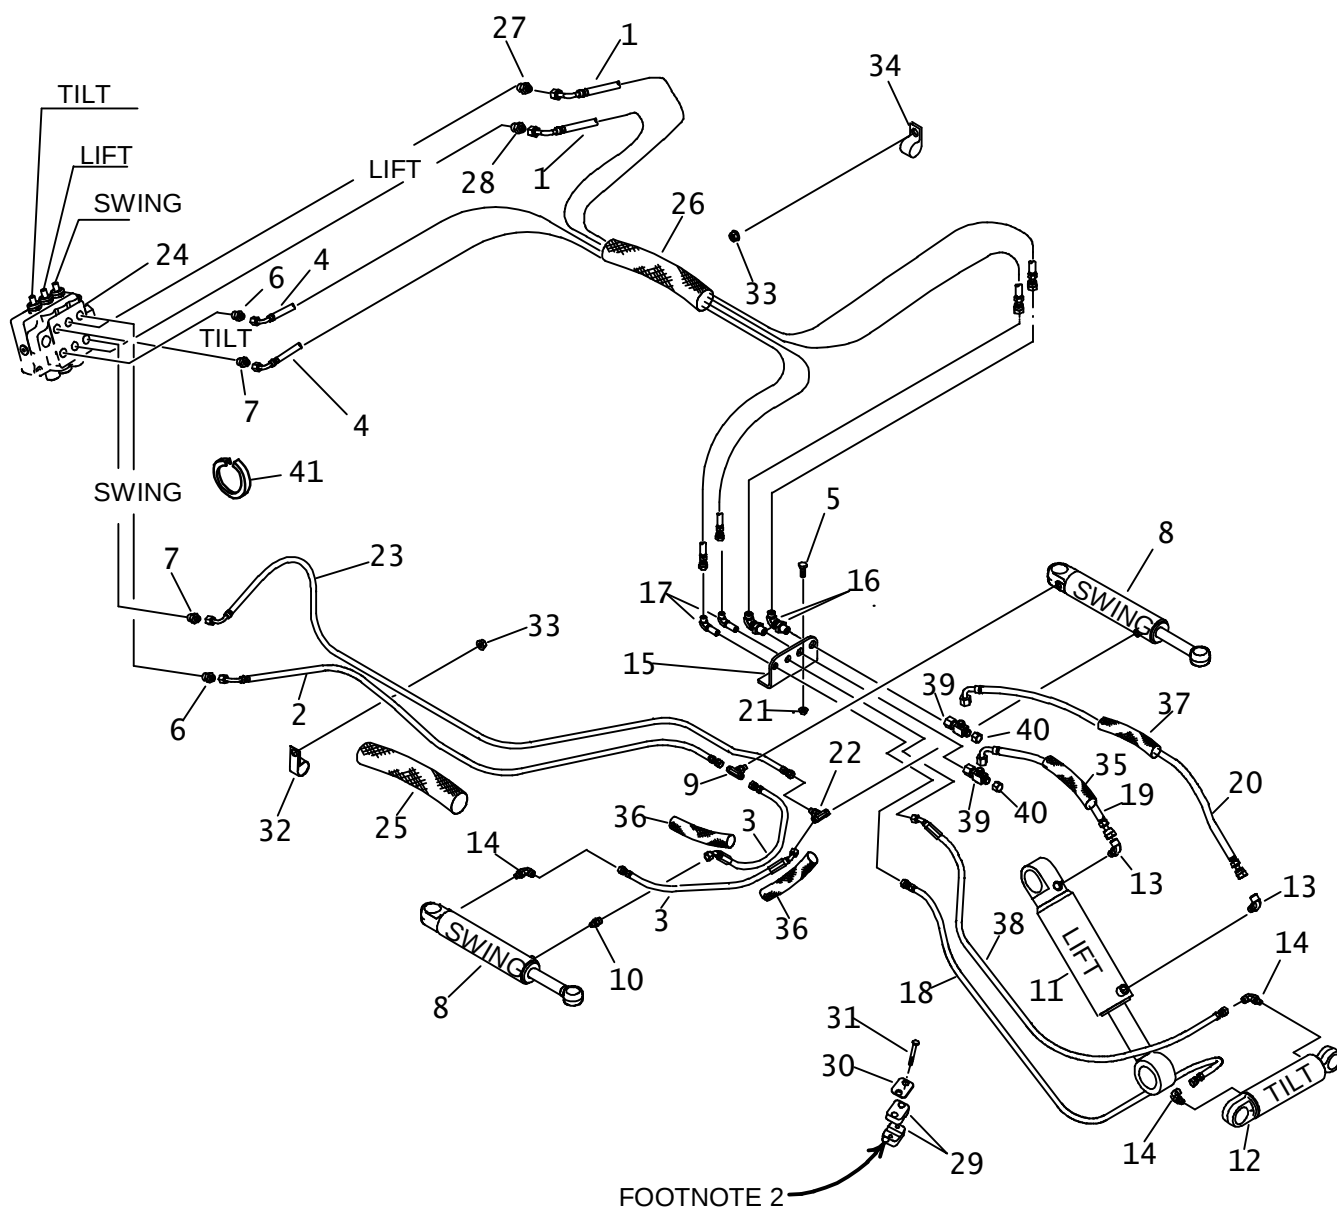

BACKFILL BLADE HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	153-074	2	HOSE (060FX90-88"-3000)	LIFT
2.	153-968	1	HOSE (040FX90S-82"-5000)	SWING
3.	515-310	2	HOSE (040FX45-22"-5000)	SWING
4.	515-137	2	HOSE (040FX90-90"-3000)	TILT
5.	106-327	2	SCREW (M8-1.25 X 30mm)	
6.	154-261	2	CONNECTOR (040-08S)	
7.	154-374	2	CONNECTOR (040-08S, ORF)	
8.	151-057	2	CYL (2.0" X 1.25" X 8.0")	SEE FOOTNOTE 1
9.	154-293	1	BRANCH TEE (04S-040-040)	
10.	154-278	1	CONNECTOR (04S-040)	
11.	151-070	1	CYL (3" X 1.75" X 8")	SEE FOOTNOTE 1
12.	151-202	1	CYL (2" X 1" X 3.38")	SEE FOOTNOTE 1
13.	154-342	2	CONNECTOR (06S-06090)	
14.	154-252	3	CONNECTOR (04S-04090)	
15.	307-416	1	BK BRACKET	
16.	154-229	2	BK CONNECTOR (060-06090BK)	
17.	154-355	2	BK CONNECTOR (040-04090BK)	
18.	154-921	1	HOSE (040FX-54"-3000-AR)	TILT
19.	515-586	1	HOSE (060FX90-21"-3000)	LIFT
20.	515-221	1	HOSE (060FX90S-28"-3000)	LIFT
21.	106-386	2	FLG LOCKNUT (M8-1.25)	
22.	154-316	1	RUN TEE (04S-040-040)	
23.	153-967	1	HOSE (040FX90S-90"-5000)	SWING
24.	159-809	-	HYD. CONTROL VALVE (3-SPOOL)	
25.	117-691	1	ABRASION SLEEVE (1.25" X 68")	
26.	115-920	1	ABRASION SLEEVE (2.38" X 70")	
27.	514-294	1	CONNECTOR (08S-060, ORF)	
28.	154-222	1	CONNECTOR (060-08S)	
29.	110-866	2	CLAMP SET (1/2")	SEE FOOTNOTE 2
30.	110-958	2	BACKUP PLATE	
31.	105-818	4	BOLT (1/4-NC X 1-1/2")	
32.	110-332	1	BOLT-ON CLAMP (1-5/8")	SEE FOOTNOTE 3
33.	105-003	2	FLG LOCKNUT (5/16-NC)	SEE FOOTNOTE 3
34.	110-333	1	BOLT-ON CLAMP (1")	SEE FOOTNOTE 3
35.	117-328	1	ABRASION SLEEVE (1.00" X 18")	
36.	117-672	2	ABRASION SLEEVE (1.00" X 20")	
37.	117-409	1	ABRASION SLEEVE (1.00" X 28")	
38.	153-973	1	HOSE (040FX45-54"-3000-AR)	TILT
39.	154-344	2	UN RUN TEE (060FX-060-060)	
40.	154-326	2	CAP (060F)	
41.	116-259	AR	BULK EDGE (1/2", SOLD PER FT)	USE 1 @ 20" & SEE FOOTNOTE 4


FOOTNOTES:

1. REFER TO PARTS PAGE "BACKFILL BLADE ASSEMBLY" FOR CYLINDER INSTALLATION HARDWARE.
2. CLAMP SET (110-866) BOLTS ONTO WELD PLATE ON BFB LIFT ARM.
3. #110-333, 105-003 & 110-332 ATTACH TO STUD BOLTS ON FRAME PLATES.
4. USE EDGING ON FRAME WHERE HOSE'S PASS THRU.

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

BACKFILL BLADE VALVE RT95

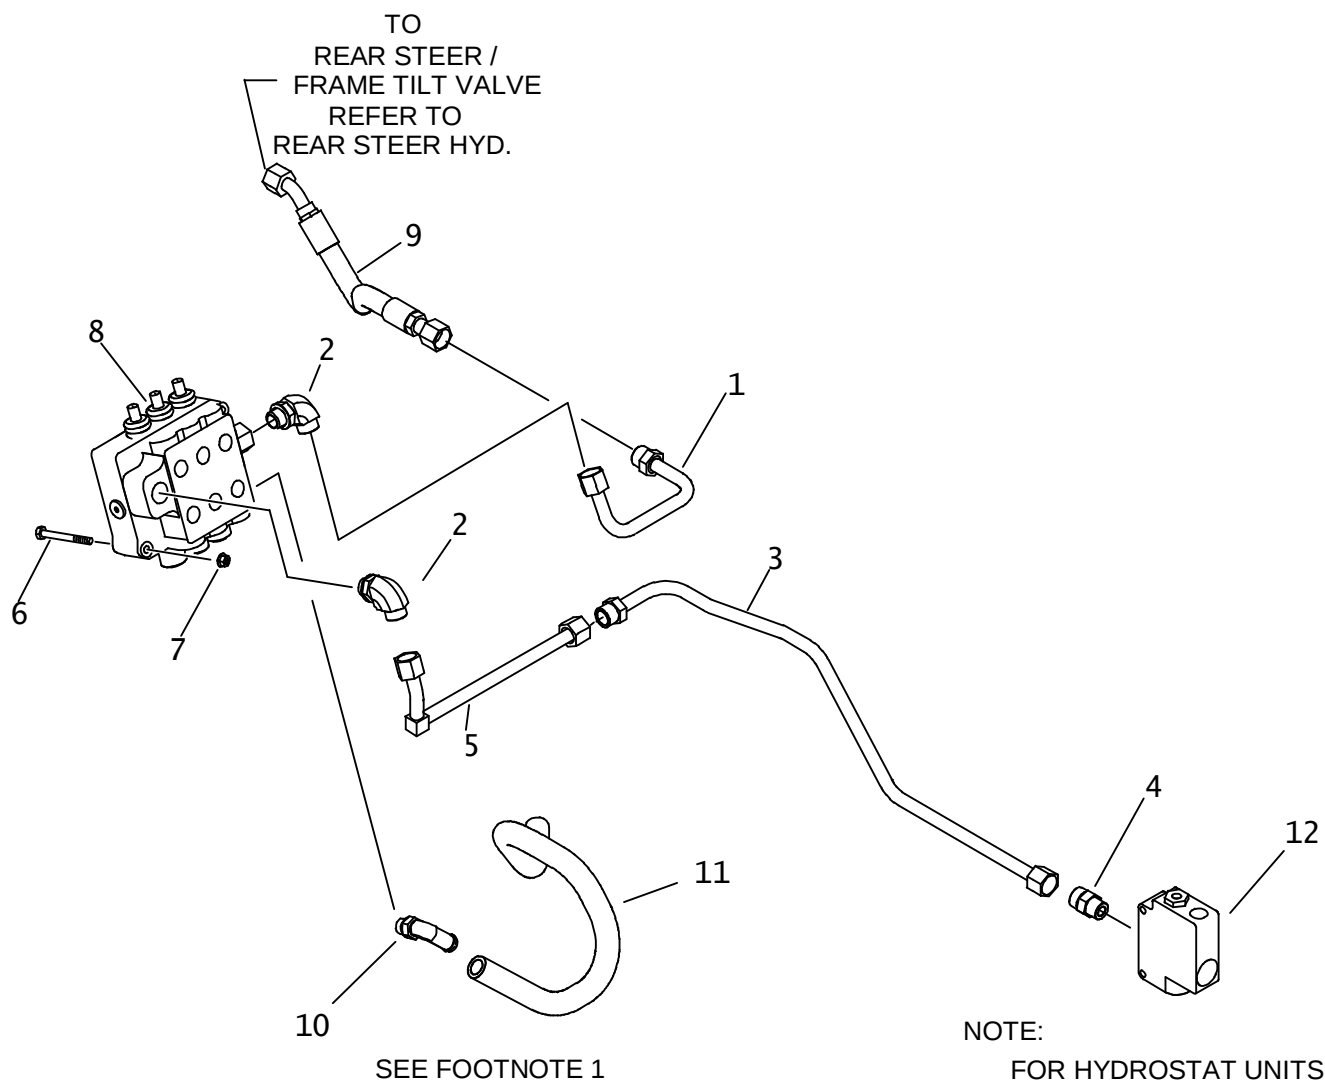

NOTE:

FOR HYDROSTAT UNITS
REFER TO
AUX. HYD.- HYDROSTAT
&

FOR POWER SHIFT UNITS
REFER TO
AUX. HYD.- POWER SHIFT

BACKFILL BLADE VALVE RT95

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	149-851	1	HYD LINE (-10)	
2.	154-298	2	CONNECTOR (10S-10090)	
3.	149-849	1	HYD LINE (-10)	
4.	154-301	1	CONNECTOR (10S-100)	
5.	157-322	1	HYD LINE (-10)	
6.	105-292	3	SCREW (M8-1.25 X 75mm)	
7.	106-386	3	FLG LOCKNUT (M8-1.25)	
8.	<u>158-033</u>	1	HYD. CONTROL VALVE (3-SPOOL)	ENDS WITH S/N_____, SEE FOOTNOTE 1
	159-809	1	HYD. CONTROL VALVE (3-SPOOL)	BEGINS WITH S/N_____.
9.	153-907	1	HOSE (100FX45-16"-3000)	
10.	154-362	-	S/O COUPLER (10S-12H90)	
11.	116-636	-	BULK HOSE (3/4", SOLD PER 1')	USE 1 @ 25"
12.	157-917	-	PRIORITY VALVE	

FOOTNOTES


1. FOR BFB VALVE RETURN HOSE'S REFER TO PAGE "PUMP DRIVE HYDRAULICS" FOR HYDROSTATICS
OR PAGE "GROUND DRIVE MOTOR HYDRAULICS" FOR POWERSHIFTS.

NOTE

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

PUMP DRIVE HYDRAULICS

HYDROSTATIC

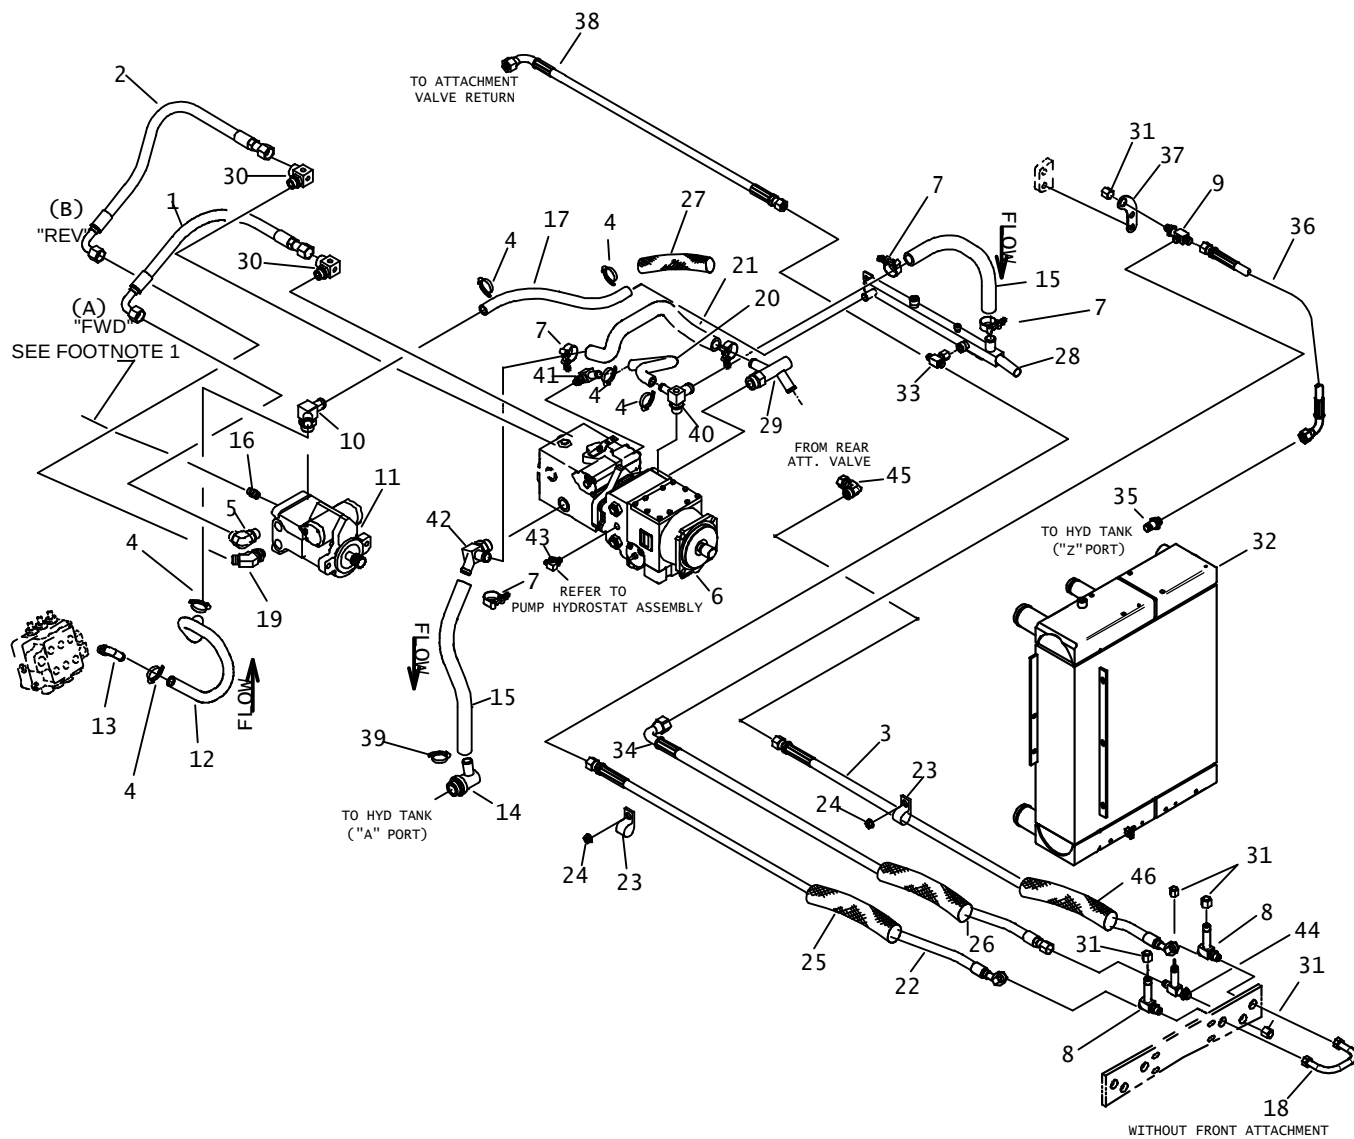

PUMP DRIVE HYDRAULICS HYDROSTATIC

REF	PART			REMARKS
NO.	NUMBER	QTY	DESCRIPTION	
1.	153-076	1	HOSE (120FX90S-28"-5000)	REVERSE
2.	153-077	1	HOSE (120FX90S-32"-5000)	FORWARD
3.	150-1691	1	HOSE (100FX45-120"-3000)	
4.	110-353	6	WORM CLAMP (3/4" TO 1-1/2")	
5.	154-270	1	CONNECTOR (12S-12090)	
6.	158-193	-	TANDEM PUMP	
7.	111-027	5	T-BOLT CLAMP (1.25"-1.50")	
8.	150-1546	2	BK RUN TEE (10045-100-100L)	
9.	154-319	1	BK RUN TEE (100)	
10.	514-307	1	S/O TEE (12S-12H-12H90)	
11.	157-359	-	HYDRAULIC MOTOR	REFER TO "GROUND DRIVE TRANS MOUNT" PAGE
12.	116-636	AR	BULK HOSE (3/4", SOLD PER 1')	USE 1 @ 25"
13.	154-362	1	S/O COUPLER (10S-12H90)	
14.	153-142	1	S/O COUPLER (20S-16H90)	
15.	116-460	AR	BULK HOSE (1", SOLD PER 1')	USE 2 @ 24"
16.	154-278	1	CONNECTOR (04S-040)	SEE FOOTNOTE 1
17.	116-636	AR	BULK HOSE (3/4", SOLD PER 1')	USE 1 @ 24"
18.	150-1689	1	HYD. LINE (-10)	
19.	154-251	1	CONNECTOR (12S-12045)	
20.	116-636	AR	BULK HOSE (3/4", SOLD PER 1')	USE 1 @ 12"
21.	116-460	AR	BULK HOSE (1", SOLD PER 1')	USE 1 @ 20"
22.	150-1690	1	HOSE (100FX45-70"-3000)	
23.	110-333	2	BOLT-ON CLAMP (1")	SEE FOOTNOTE 2
24.	105-003	2	FLG LOCKNUT (5/16-NC)	SEE FOOTNOTE 2
25.	115-755	1	ABRASION SLEEVE (1.59" X 60")	
26.	115-938	1	ABRASION SLEEVE (1.59" X 66")	
27.	115-687	AR	ABRASION SLEEVE (SOLD PER FOOT)	USE 1 @ 12" & SEE FOOTNOTE 3
28.	307-535	1	RETURN MANIFOLD	
29.	149-820	-	S/O COUPLER (16S-16H90-16H45, XL)	
30.	149-058	-	RUN TEE (16S-120-06SF-06SF-06SF)	
31.	154-324	5	CAP (100F)	
32.	195-1115	-	RADIATOR/OIL COOLER	
33.	154-325	1	UN BR TEE (100FX-100-100)	
34.	155-466	1	HOSE (100FX90-74"-2750)	
35.	154-391	1	CONNECTOR (08S-100)	REFER TO HYD. RESERVOIR PARTS PAGE
36.	153-956	1	HOSE (100FX90-50"-3000)	
37.	316-822	1	RETURN BRACKET	
38.	153-956	1	HOSE (100FX90-50"-3000)	
39.	111-011	1	WORM CLAMP (1" TO 1 3/4 ")	
40.	155-224	-	S/O BR TEE (12S-12H-16H90)	
41.	155-198	-	S/O COUPLER (12S-12H90-06SF)	
42.	149-819	-	S/O COUPLER (16S-16H-16H45)	
43.	154-230	-	BRANCH TEE (06S-040-040)	
44.	153-984	1	BK RUN TEE (100-100-100L)	
45.	154-315	1	UNION (100-10FX90)	
46.	117-764	1	ABRASION SLEEVE (1.59" X 90")	


FOOTNOTES:

- FOR DESTINATION OF 154-278 (REF #16) REFER TO "MOTOR SHIFT/DIFF LOCK HYD." PARTS PAGE, REF #6.
- #110-333 & #105-003 ATTACH TO STUD BOLTS ON LEFT FRAME PLATE.
- ABRASION SLEEVE (REF #27) IS USED TO WRAP HOSE (REF #21) AS IT WRAPS AROUND PUMP.

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

PUMP HYDROSTATIC ASSEMBLY

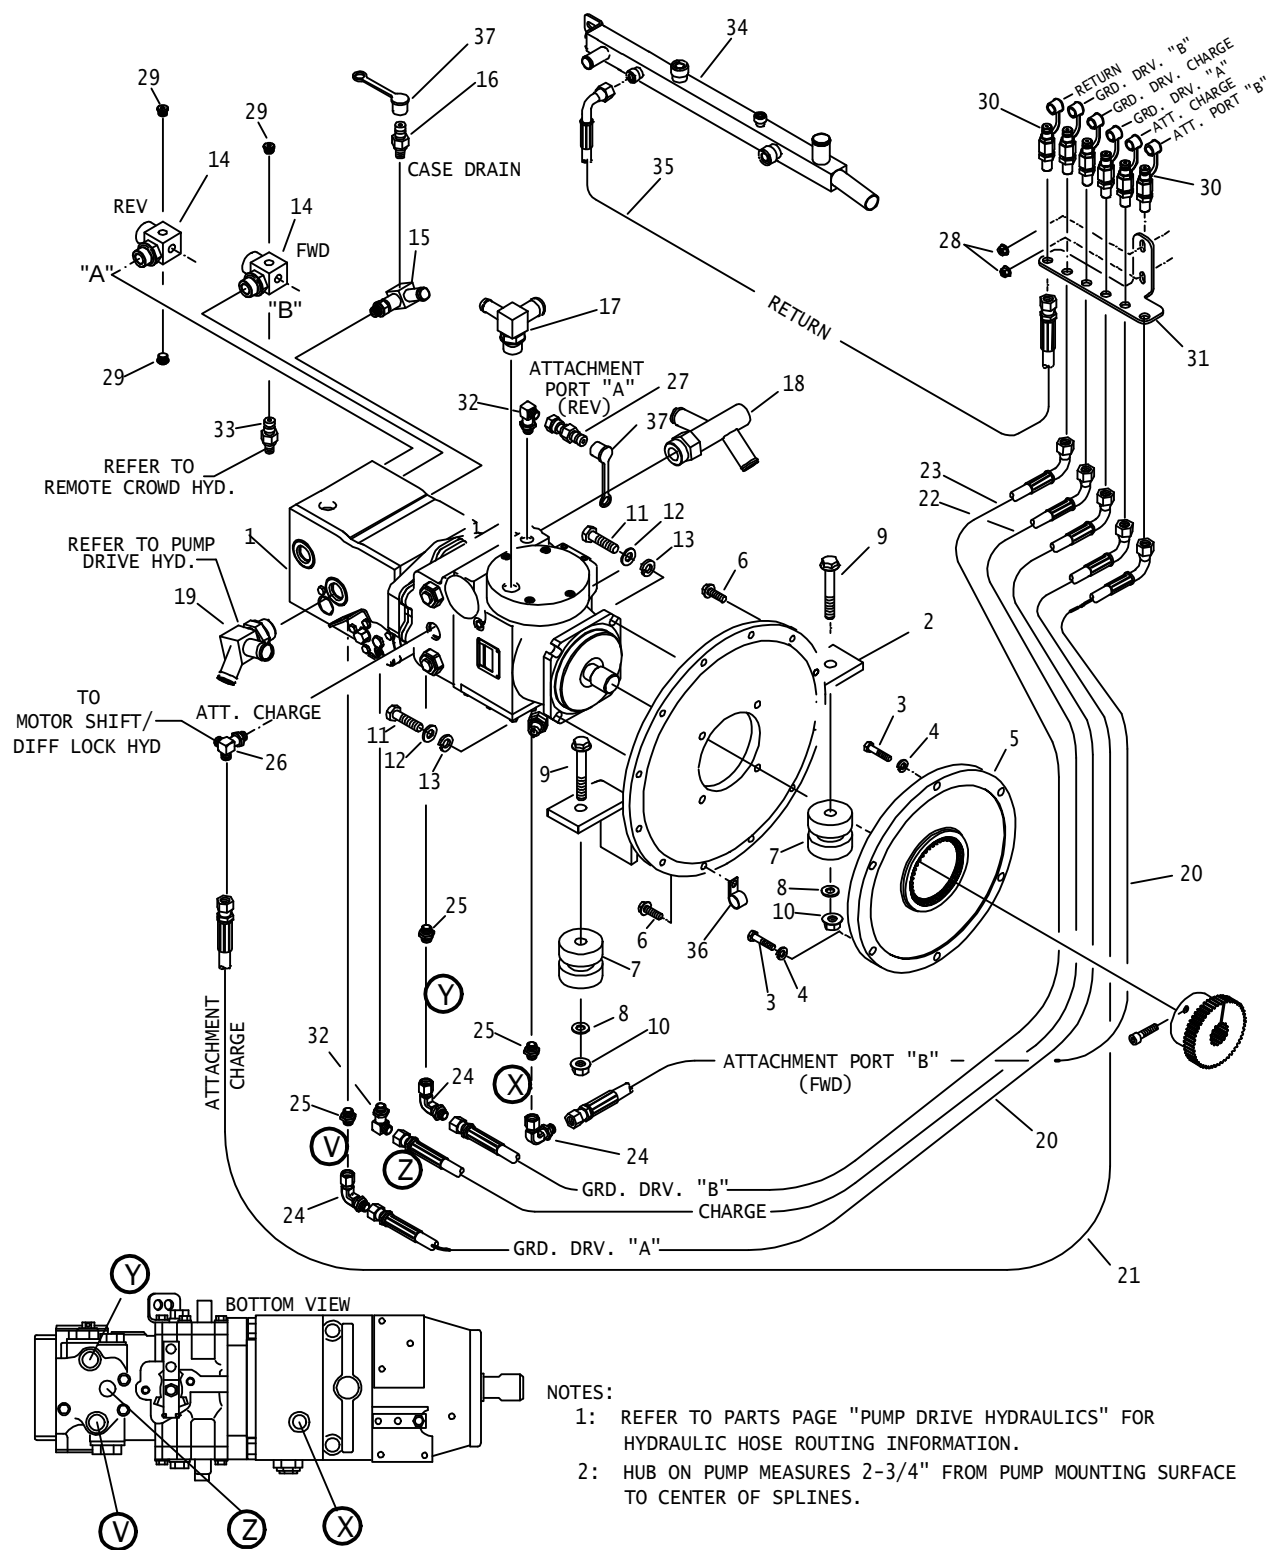

PUMP HYDROSTATIC ASSEMBLY

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	150-3061	1	TANDEM PISTON PUMP	BEGINS WITH S/N _____; SEE FOOTNOTE 6
	158-194		ATTACHMENT PUMP	BEGINS WITH S/N _____.
	214-892		PRESSURE SWITCH	SEE FOOTNOTE 4
	190-679		SEAL REPAIR KIT	
	500-763		MULTIFUNCTION VALVE - RELIEF	
	500-764		MULTIFUNCTION VALVE (#1)	
	158-040		GROUND DRIVE PUMP	
	500-806		SEAL REPAIR KIT	
	499-448		SERVO COVER	
	499-447		SERVO COVER (FULL DISPL.)	
	165-728		SERVO GASKET	
	500-639		NEUTRAL START SWITCH	SEE FOOTNOTE 5
2.	307-330	1	PUMP MOUNT	
3.	107-416	6	BOLT (5/16-NC X 1-1/2")	SEE FOOTNOTE 1
4.	105-072	6	LOCK WASHER (3/8")	
5.	165-889	1	FLYWHEEL COUPLING	SEE FOOTNOTE 3
6.	106-383	12	FLG LK SCREW (M10-1.50 X 30mm)	SEE FOOTNOTE 1
7.	116-151	2	SHOCK MOUNT	
8.	105-475	4	WASHER (1/2")	
9.	105-993	2	FLG BOLT (5/8-NC X 4")	
10.	105-994	2	FLG LOCKNUT (5/8-NC)	
11.	105-066	4	BOLT (1/2-NC X 1-3/4")	SEE FOOTNOTE 1
12.	105-244	4	WASHER (1/2")	
13.	105-070	4	LOCK WASHER (1/2")	
14.	149-058	2	RUN TEE (16S-120-06SF-06SF-06SF)	REFER TO PUMP DRIVE HYD. PARTS PAGE
15.	155-198	1	S/O COUPLER (12S-12H90-06SF)	
16.	159-147	1	QDC ADAPTER (02-06S)	
17.	155-224	1	S/O BRANCH TEE (12S-12H-16H90)	
18.	149-820	1	S/O COUPLER (16S-16H90-16H45, XL)	
19.	149-819	1	S/O COUPLER (16S-16H-16H45)	
20.	153-911	2	HOSE (040FX90-10"-5000-AR)	
21.	515-462	1	HOSE (040FX90-22"-3000-AR)	
22.	515-396	1	HOSE (040FX90-8.0"-5000)	
23.	515-358	1	HOSE (040FX90-11"-5000)	
24.	154-255	3	UNION (040-040FX90)	
25.	154-220	3	CONNECTOR (040-06S)	
26.	154-230	-	BRANCH TEE (06S-040-040)	REFER TO MOTOR SHIFT/DIFF LOCK HYD. PARTS PAGE
27.	159-156	1	QDC ADAPTER (02-040F)	
28.	105-003	2	FLG LOCKNUT (5/16-NC)	
29.	154-384	3	PLUG (06S)	
30.	155-260	6	BK QDC ADAPTER (02-040BK)	
31.	310-246	1	TEST PORT BRACKET	SEE FOOTNOTE 2
32.	154-226	2	CONNECTOR (040-06S90)	
33.	159-381	-	CHECK VALVE (06S-060)	REFER TO PUMP DRIVE HYDRAULICS PARTS PAGE
34.	307-535	-	RETURN MANIFOLD	
35.	515-085	1	HOSE (040FX90-8.5"-3000)	
36.	110-332	1	BOLT-ON CLAMP (1-5/8")	
37.	159-148	2	DUST CAP (1/8")	

NOT SHOWN:

FOOTNOTES:


1. USE LOCTITE NO. 242 OR ITS EQUIVALENT
2. TEST PORT BRACKET (REF 31) BOLTS TO 5/16 " STUD BOLTS ON FRAME.
3. TORQUE TO 90 FT-LBS AND USE 242 LOCTITE.
4. ATTACHMENT PUMP (90 SERIES) NEUTRAL SWITCH.
5. G.D. PUMP (M46) NEUTRAL SWITCH; W/O CRUISE CONTROL.
6. PUMP 150-3061 SUPERSEDES 158-193 AND IS A DIRECT REPLACEMENT.

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

MOTOR SHIFT/DIFF LOCK HYDRAULICS

HYDROSTATIC
BEGINS WITH S/N 5X0710.

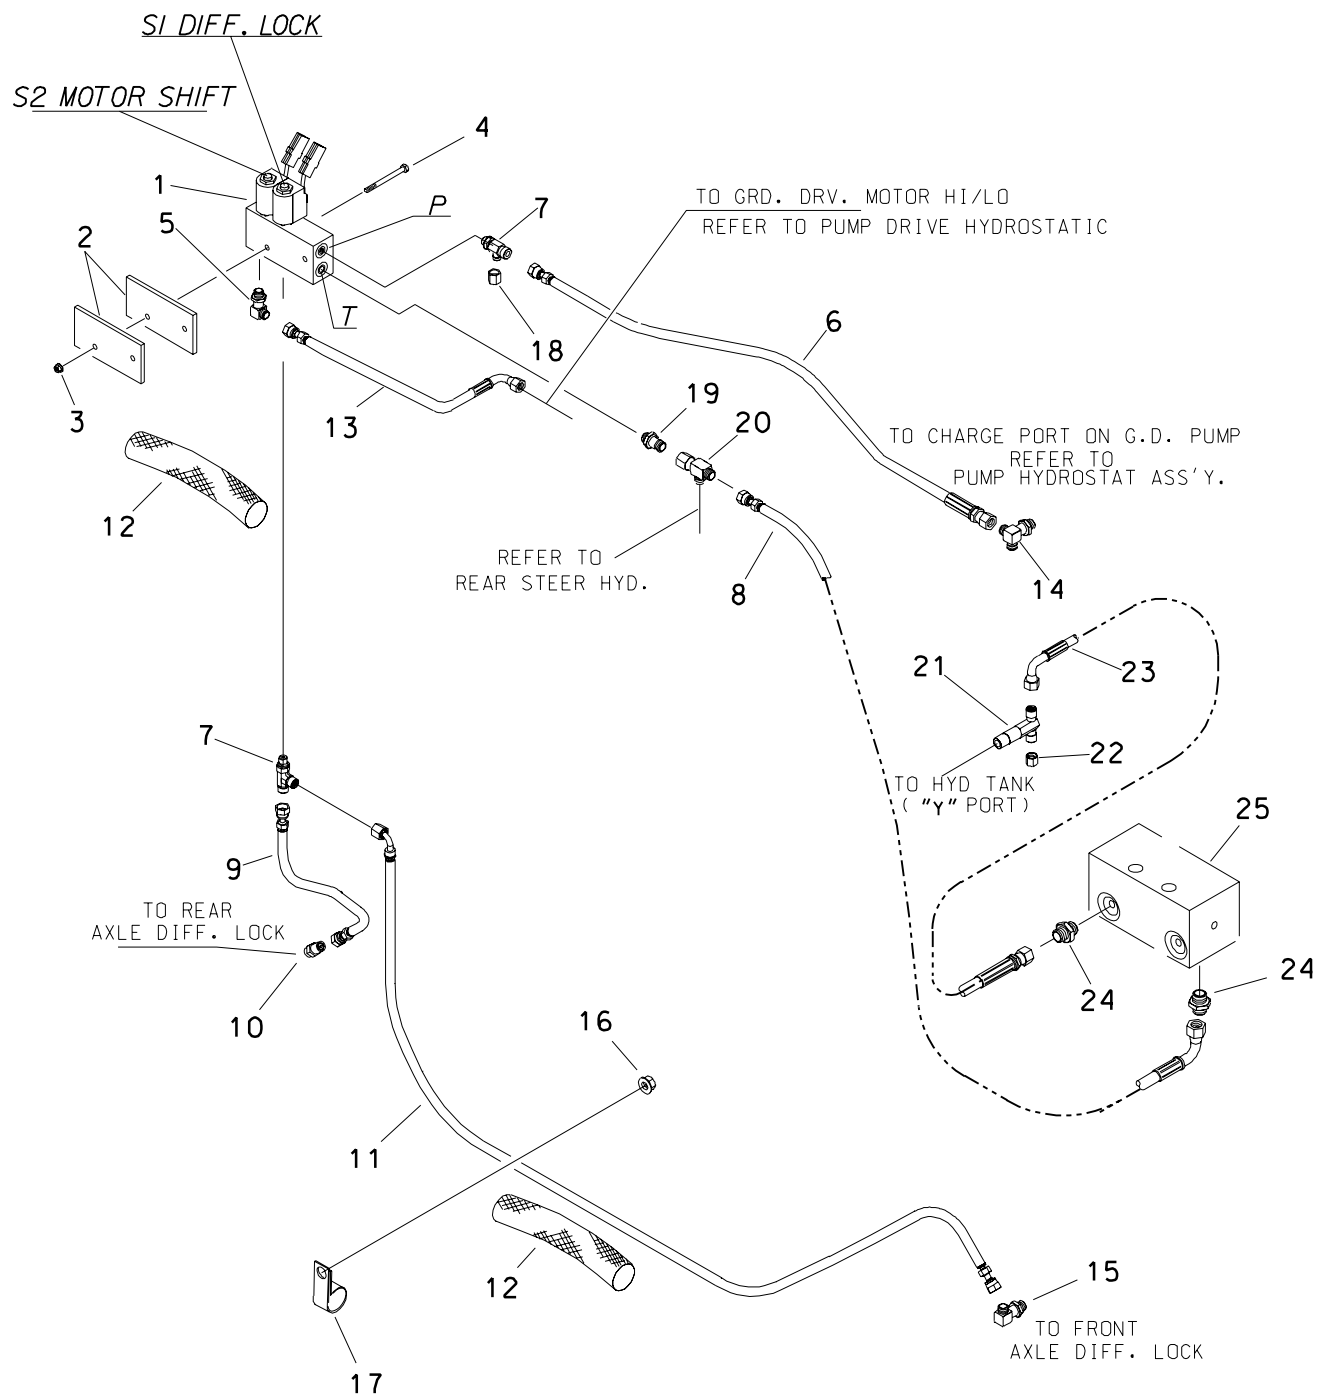

MOTOR SHIFT/DIFF LOCK HYDRAULICS

HYDROSTATIC

BEGINS WITH S/N 5X0710.

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	157-246	1	MANIFOLD (2-SP)	SEE FOOTNOTE 2
	214-491		COIL, 12V	
	499-446		SOLENOID (3 WAY-2 POS VALVE)	
2.	306-885	2	MOUNT PLATE	SEE FOOTNOTE 3
3.	106-385	2	FLG LOCKNUT (M6-1.00)	
4.	106-566	2	SCREW (M6-1.00 X 70mm)	
5.	154-252	1	CONNECTOR (04S-04090)	
6.	515-249	1	HOSE (040FX-26"-3000)	
7.	154-316	2	RUN TEE (04S-040-040)	DIFF. LOCK
8.	515-716	1	HOSE (060FX90-42"-3000)	
9.	154-743	1	HOSE (040FX90S-23"-3000)	
10.	154-220	1	CONNECTOR (040-06S)	
11.	515-174	1	HOSE (040FX90-74"-3000)	
12.	117-611	2	ABRASION SLEEVE (1.00" X 22")	
13.	154-726	1	HOSE (040FX90-15"-3000)	
14.	154-230	1	BRANCH TEE (06S-040-040)	
15.	154-226	1	CONNECTOR (040-06S90)	
16.	105-003	1	FLG LOCKNUT (5/16-NC)	SEE FOOTNOTE 1
17.	110-333	1	BOLT-ON CLAMP (1")	SEE FOOTNOTE 1
18.	154-296	1	CAP (040F)	
19.	154-411	1	CONNECTOR (04S-060)	
20.	154-344	1	UN RU TEE (060FX-060-060)	
21.	159-643	1	TEE (08N-060-060 X 2.375")	
22.	154-326	1	CAP (060F)	
23.	157-899	-	HOSE (060FX90S-11"-3000)	REFER TO PAGE "REMOTE CROWD HYDRAULICS"
24.	154-221	-	CONNECTOR (06S-060)	
25.	159-218	-	HYD. MANIFOLD (4-PORT)	

FOOTNOTES

- #105-003 & #110-333 ATTACH TO STUD BOLTS ON FRAME PLATE.
- EARLY PRODUCTION MANIFOLDS HAVE A CAVITY PLUG WHERE THE RELIEF VALVE WAS LOCATED.
- WHEN "FRAME TILT" OPTION IS USED TWO MOUNT PLATES (306-885) IS REQUIRED, ONE ON EITHER SIDE OF FRAME. WITH NO FRAME TILT ONLY ONE MOUNT PLATE (306-885) IS USED ON OUTSIDE OF FRAME.


NOTE

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

REMOTE CROWD HYDRAULICS

BEGINS WITH S/N 5X0465 RT70/RT75

BEGINS WITH S/N 5X0710 RT90/RT95/RT115

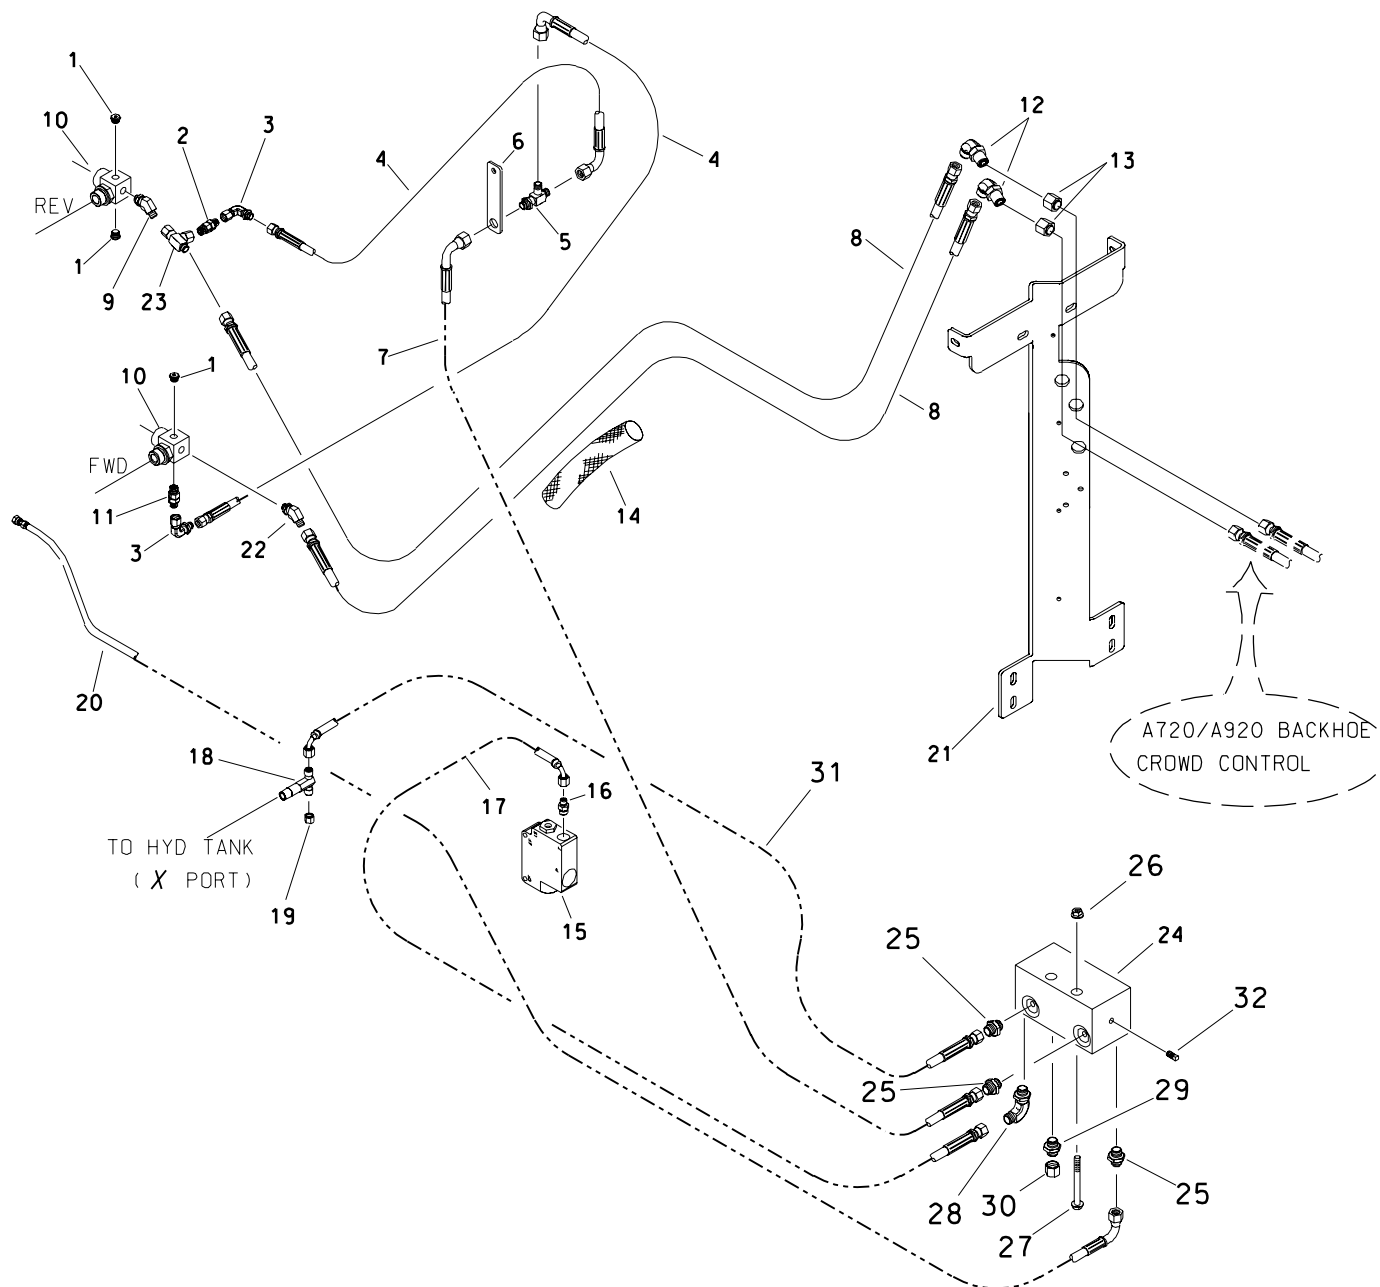

REMOTE CROWD HYDRAULICS

BEGINS WITH S/N 5X0465 RT70/RT75


BEGINS WITH S/N 5X0710 RT90/RT95/RT115

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	154-384	-	PLUG (06S)	
2.	149-871	1	FLOW CHECK VALVE (060-060)	
3.	154-228	2	UNION (060-060FX90)	
4.	149-826	2	HOSE (060FX90L-12"-3000)	
5.	154-400	1	BK RUN TEE (060-060-060BK)	
6.	318-606	1	BULKHEAD BRACKET	
7.	154-887	1	HOSE (060FX45-23"-3000)	
8.	157-263	2	HOSE (040FX-102"-5000)	
9.	154-224	1	CONNECTOR (06S-06045)	
10.	149-058	-	RUN TEE (16S-120-06SF-06SF-06SF)	
11.	159-381	1	CHECK VALVE (06S-060)	
12.	154-355	2	BK CONNECTOR (040-04090BK)	
13.	154-296	2	CAP (040F)	
14.	115-934	1	ABRASION SLEEVE (1.75" X 100")	
15.	157-917	-	PRIORITY VALVE	
16.	154-278	-	CONNECTOR (04S-040)	
17.	154-743	-	HOSE (040FX90S-23"-3000)	
18.	159-643	-	TEE (08N-060-060 X 2.375")	
19.	154-326	-	CAP (060F)	
20.	515-716	-	HOSE (060FX90-42"-3000)	
21.	307-909	-	FRONT HOOD SUPPORT	
22.	154-250	1	CONNECTOR (040-06S45)	
23.	157-264	1	TEE (040-060F-060F)	
24.	159-218	1	HYD. MANIFOLD (4-PORT)	
25.	154-221	3	CONNECTOR (06S-060)	
26.	106-386	2	FLG LOCKNUT (M8-1.25)	
27.	105-665	2	FLG SCREW (M8-1.25 X .55mm)	
28.	154-226	1	CONNECTOR (040-06S90)	
29.	154-220	1	CONNECTOR (040-06S)	
30.	154-296	1	CAP (040F)	REFER TO "GEARBOX & VIBRATOR DRV HYD" H752/H952
31.	157-899	1	HOSE (060FX90S-11"-3000)	
32.	110-264	1	EXPANDER PLUG (.275")	

FOOTNOTES

NOTE

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

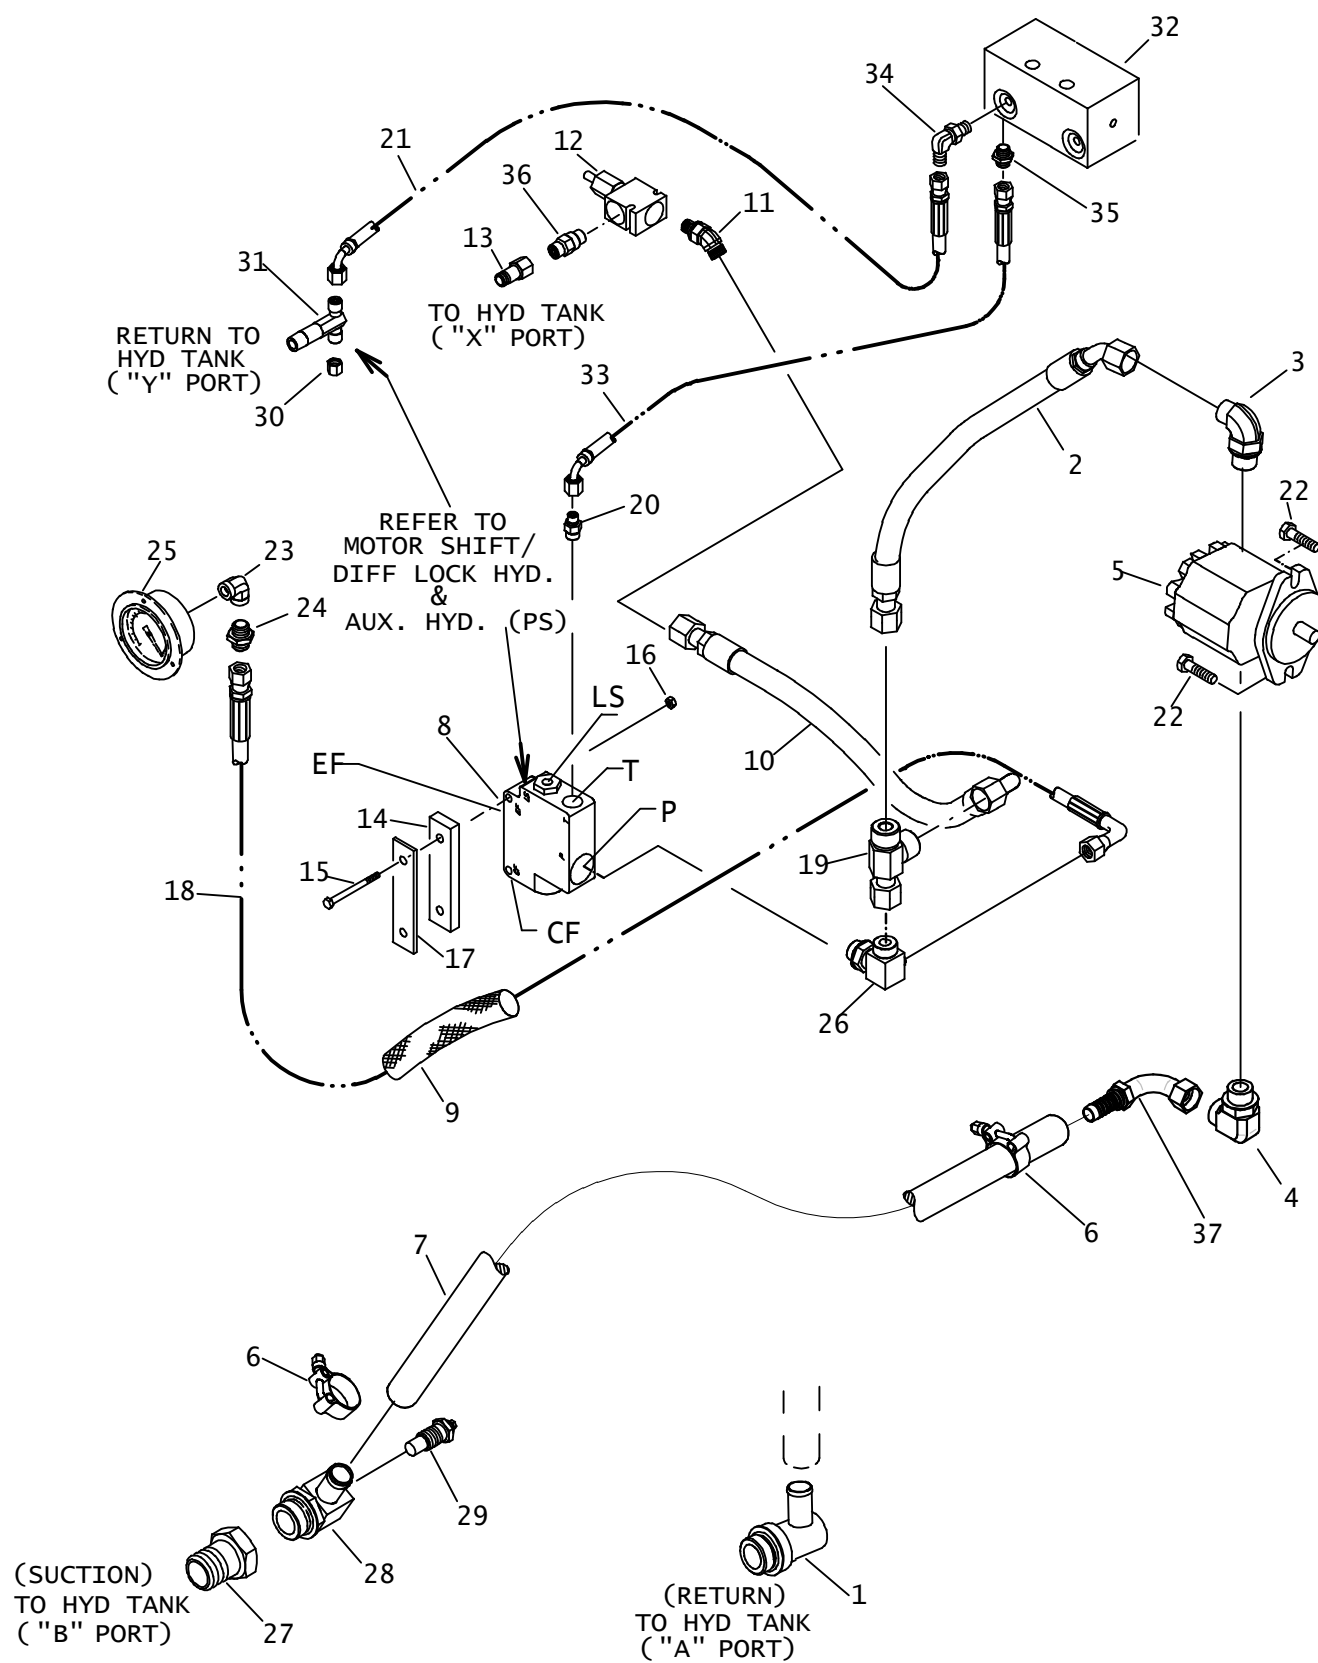

AUXILIARY HYDRAULICS

RT115 T3

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	153-142	1	S/O COUPLER (20S-16H90)	
2.	153-068	1	HOSE (100FX45-24"-3000)	
3.	154-298	1	CONNECTOR (10S-10090)	
4.	154-287	1	CONNECTOR (16S-16090)	
5.	153-807	1	HYDRAULIC PUMP (AUX)	
	500-966	1	SEAL REPAIR KIT	
6.	111-027	2	T-BOLT CLAMP (1.25" - 1.50")	
7.	116-460	1	BULK HOSE (1", SOLD PER 1")	USE 1 @ 42"
8.	157-917	1	PRIORITY VALVE	
9.	117-218	1	ABRASION SLEEVE (1.00" X 52")	
10.	515-605	1	HOSE (100FX90S-20"-3000)	
11.	154-391	1	CONNECTOR (08S-100)	
12.	158-681	1	RELIEF VALVE (AUXILIARY)	PRE SET TO 2500 PSI
13.	153-995	1	CONNECTOR (08S-08SF)	
14.	306-886	1	SPACER	USED ON INSIDE OF FRAME PLATE
15.	107-054	2	SCREW (M6-1.00 X 90mm)	
16.	106-385	2	FLG LOCKNUT (M6-1.00)	
17.	309-817	1	SPACER PLATE	USED ON OUTSIDE OF FRAME PLATE
18.	515-075	1	HOSE (040FX90S-82"-3000)	
19.	154-488	1	UN RUN TEE (100FX-100-100)	
20.	154-278	1	CONNECTOR (04S-040)	
21.	157-899	1	HOSE (060FX90S-11"-3000)	
22.	105-876	2	SCREW (M10-1.50 X 35mm)	
23.	149-896	1	STREET ELBOW (04NF-04NF90)	
24.	154-339	1	CONNECTOR (04N-040)	
25.	217-551	1	PRESSURE GAUGE (3000 PSI)	SEE FOOTNOTE 1
26.	153-787	1	TEE (100-10S-040)	
27.	514-446	-	REDUCER (24S-20SF)	
28.	157-987	1	S/O COUPLER (20S-16H90, 04NF)	
29.	214-854	1	TEMPERATURE SWITCH	
30.	154-326	-	CAP (060F)	
31.	159-643	-	TEE (08N-060-060, X 2.375")	
32.	159-218	-	HYD. MANIFOLD (4-PORT)	
33.	154-743	-	HOSE (040FX90S-23"-3000)	
34.	154-342	-	CONNECTOR (06S-06090)	
35.	154-220	-	CONNECTOR (040-06S)	
36.	154-466	1	CONNECTOR (08S-08S)	
37.	510-313	1	COUPLER (160FX90-16H-3000)	

NOT SHOWN:


FOOTNOTES:

1. REF. #25 (217-551) IS DEPICTED WITH FACE OF GAUGE SHOWING, ACTUALLY IT FITS INSIDE THE FENDER AND FACES THE OPERATOR.

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

HYDROSTAT PUMP ATTACH HYDRAULICS

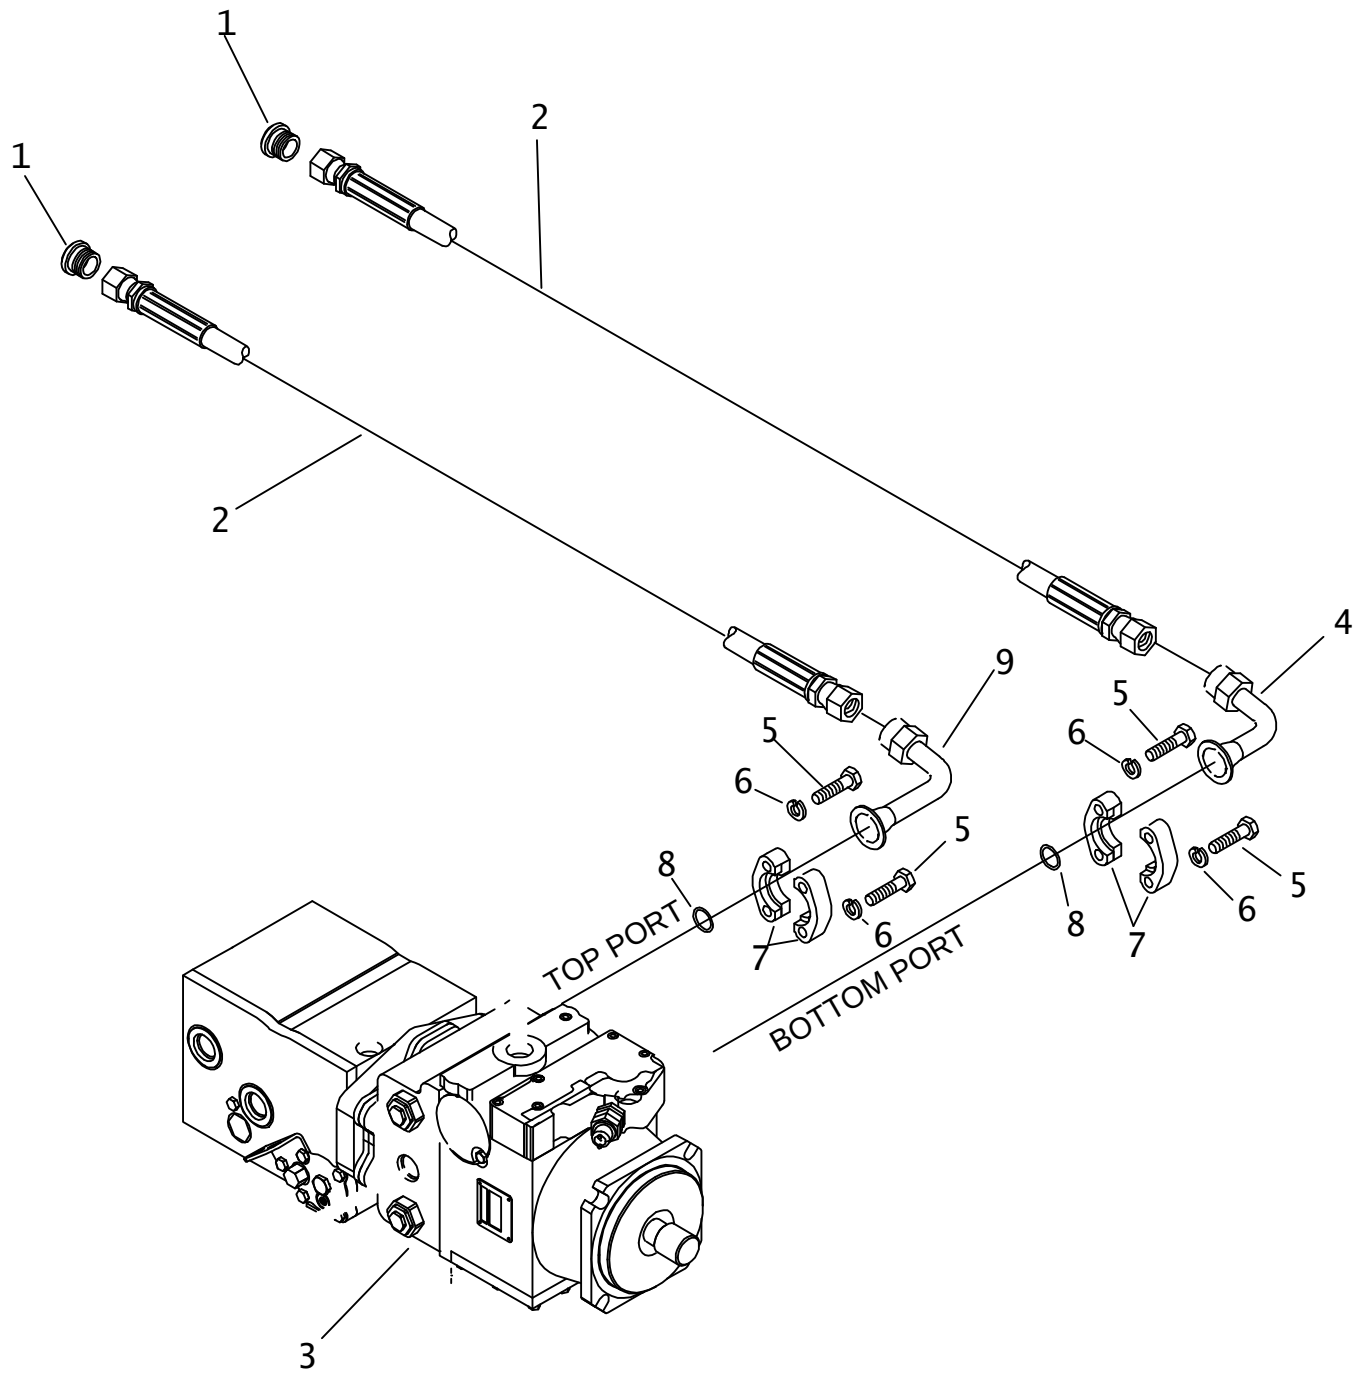


HYDROSTAT PUMP ATTACH HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	154-334	2	PLUG (160)	
2.	515-621	2	HOSE (160FX-50"-6000)	
3.	150-3061	1	TANDEM PISTON PUMP	
4.	154-404	1	CONNECTOR (160-16FL90)	
5.	105-222	8	BOLT (7/16-NC X 1-3/4")	
6.	105-073	8	LOCK WASHER (7/16")	
7.	159-077	2	SPLIT FLANGE (16SFL)	
8.	157-029	2	O-RING (219 D90)	
9.	153-929	1	CONNECTOR (160-16FL90, XL)	

FOOTNOTES

NOTE:

HYDRAULIC FILTER TIER 2 HYDROSTATIC

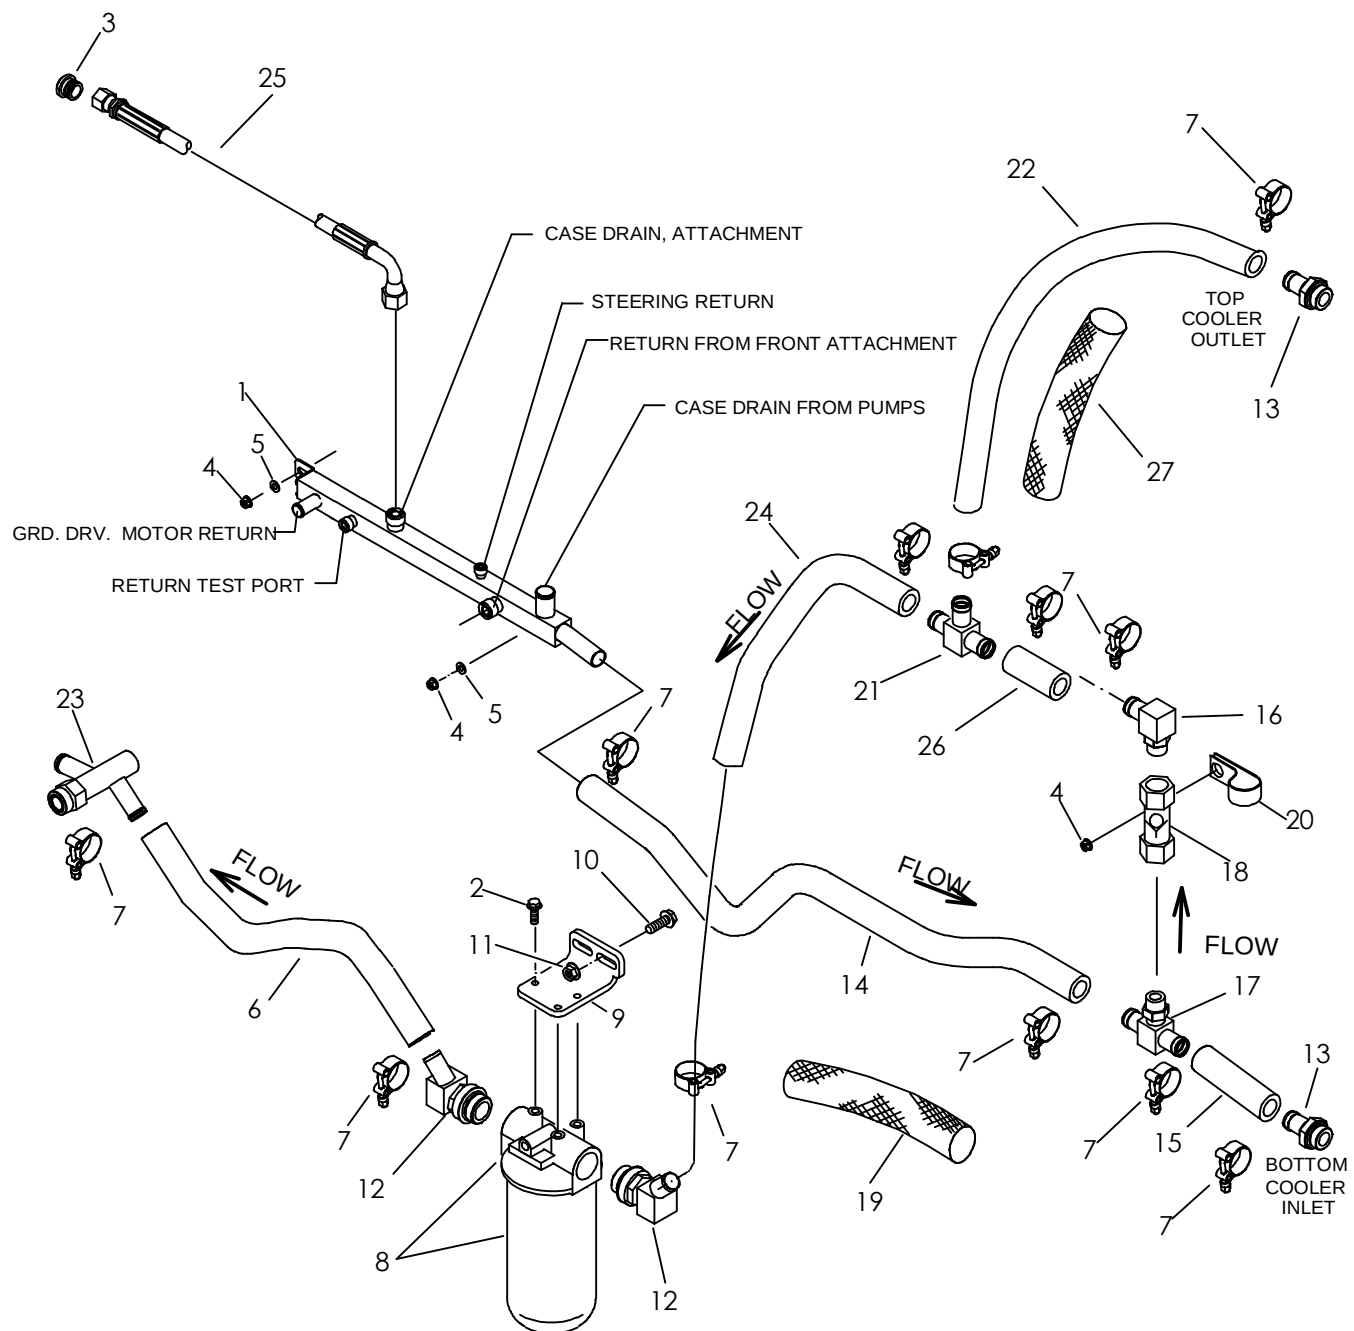

HYDRAULIC FILTER TIER 2 HYDROSTATIC

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	307-535	1	RETURN MANIFOLD	
2.	105-826	3	FLG LK BOLT (3/8-NC X 1")	
3.	154-331	1	PLUG (080)	
4.	105-003	3	FLG LOCKNUT (5/16-NC)	
5.	105-881	2	WASHER (5/16")	
6.	116-460	AR	BULK HOSE (1", SOLD PER 1')	USE 1 @ 24"
7.	111-027	12	T-BOLT CLAMP (1.25"-1.50")	
8.	157-345	1	HYD OIL FILTER (20SF-20SF)	SEE FOOTNOTE 1
	153-792		FILTER ELEMENT (10 MICRON)	
	153-791		FILTER ELEMENT (5 MICRON)	SEE FOOTNOTE 2
	217-765		INDICATOR SWITCH	
9.	306-862	1	BRACKET	
10.	107-003	2	FLG LK SCREW (M12-1.75 X 35mm)	
11.	106-709	2	FLG LK NUT (M12-1.75)	
12.	153-110	2	S/O COUPLER (20S-16H45)	
13.	514-088	2	S/O COUPLER (16S-16H)	
14.	116-460	AR	BULK HOSE (1", SOLD PER 1')	USE 1 @ 44"
15.	116-460	AR	BULK HOSE (1", SOLD PER 1')	USE 1 @ 9"
16.	154-188	1	S/O COUPLER (16S-16H90)	
17.	155-231	1	S/O BR TEE (16S-16H-16H)	
18.	153-888	1	CHECK VALVE (16SF-16SF, 25 PSI)	
19.	115-733	AR	ABRASION SLEEVE (SOLD PER FOOT)	USE 1 @ 12"
20.	110-332	1	BOLT-ON CLAMP (1-5/8")	
21.	154-192	1	S/O RUN TEE (16H-16H-16H)	
22.	116-460	AR	BULK HOSE (1", SOLD PER 1')	USE 1 @ 30"
23.	149-820	-	S/O COUPLER (16S-16H90-16H45XL)	
24.	116-460	AR	BULK HOSE (1", SOLD PER 1')	USE 1 @ 20"
25.	515-025	1	HOSE (080FX90-40"-3000)	
26.	116-460	AR	BULK HOSE (1", SOLD PER 1')	USE 1 @ 4.5"
27.	117-224	1	ABRASION SLEEVE (1.59" X 26")	

NOT SHOWN:

115-687	AR	ABRASION SLEEVE (SOLD PER FOOT)	USE 1 @ 15", SEE FOOTNOTE 3
---------	----	---------------------------------	-----------------------------


FOOTNOTES:

1. 157-345 IS THE FILTER HEAD AND REGULAR ELEMENT 153-792.
2. IF THE HYDRAULIC SYSTEM IS EXPOSED TO CONTAMINATES, A NEW BREAK-IN FILTER 153-791 IS INSTALLED FOR 50 HOURS.
3. PLACE 115-687 OVER REFERENCE #24 HOSE, 116-460

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

HYDRAULIC FILTER GUARD

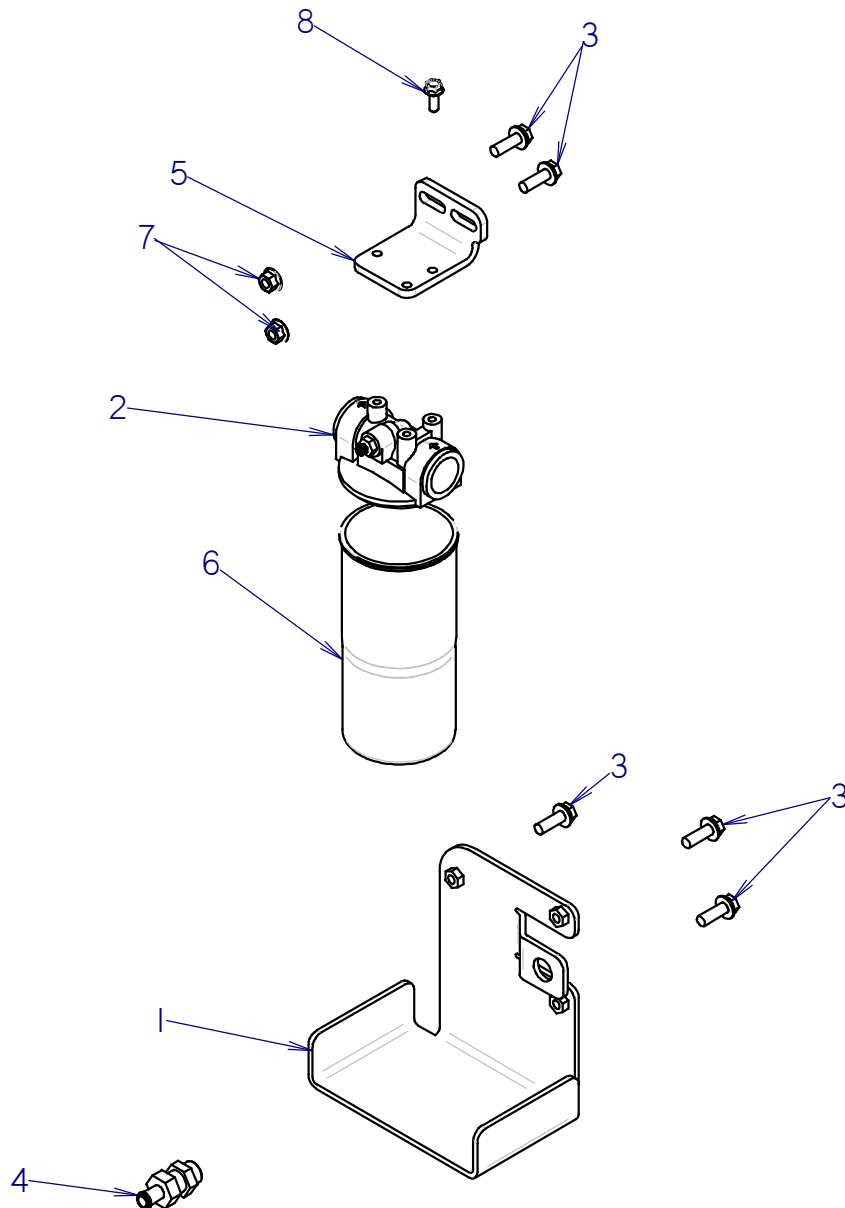

HYDRAULIC FILTER GUARD

REF PART
NO. NUMBER QTY DESCRIPTION

REMARKS

1	322-662	1	HYD FILTER GUARD	
2	157-345	1	FILTER HEAD	REFER TO FOOTNOTE 1
3	107-003	5	FLG LK SCREW (M12-1.75 X 35MM)	REFER TO FOOTNOTE 1
4	149-624	1	BK S/O COUPLER (100-10H)	REFER TO FOOTNOTE 1
5	306-862	1	BRACKET	REFER TO FOOTNOTE 1
6	153-792	1	FILTER ELEMENT (10 MICRON)	REFER TO FOOTNOTE 1
7	106-709	2	FLG LK NUT (M12-1.75)	REFER TO FOOTNOTE 1
8	105-826	3	FLG LK BOLT (3/8-NC X 1")	REFER TO FOOTNOTE 1


FOOTNOTES

1. FOR MORE DETAILS ON REF NO'S 2 THRU 8 REFER TO PARTS PAGE "HYDRAULIC FILTER".

NOTE:

HYDRAULIC FILTER GUARD KIT #191-342 CONSIST OF 1X REF #1 AND 3X REF #3.

POWER STEERING VALVE HYDRAULIC

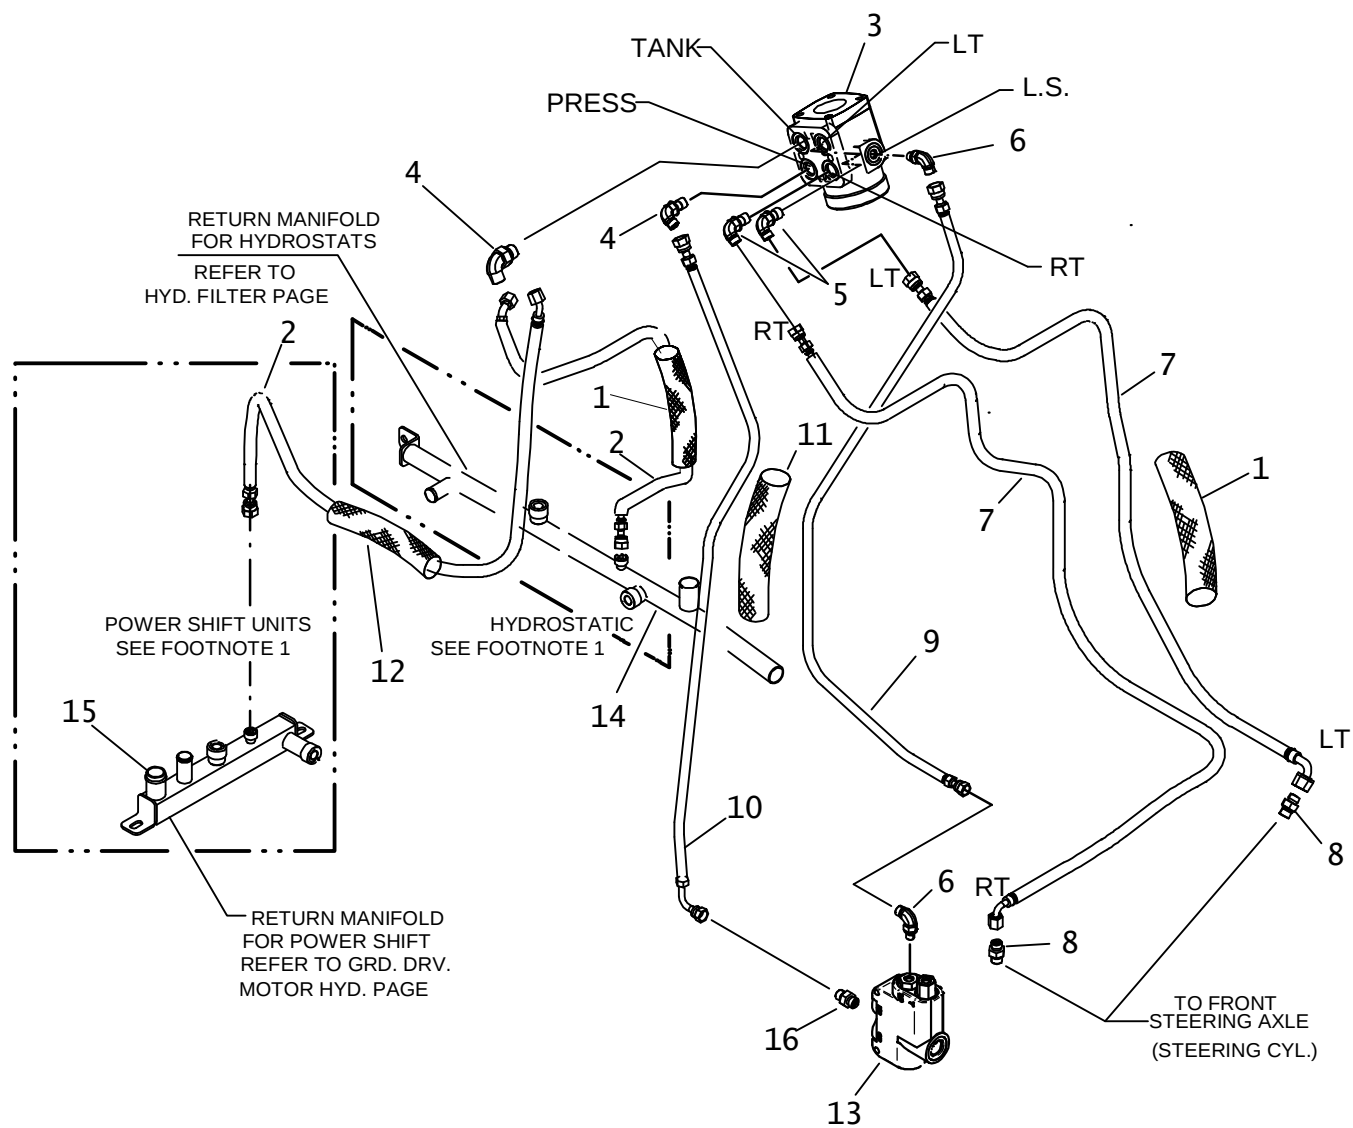

POWER STEERING VALVE HYDRAULIC

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	117-214	2	ABRASION SLEEVE (1.25" X 40")	
2.	515-222	1	HOSE (060FX45-46"-3000)	HYDROSTAT UNITS ONLY & SEE FOOTNOTE 1
	149-358	1	HOSE (060FX45-55"-3000)	POWER SHIFT UNITS ONLY & SEE FOOTNOTE 1
3.	149-371	1	POWER STEERING VALVE	
	190-913	1	SEAL REPAIR KIT	
4.	154-227	2	CONNECTOR (060-08S90)	
5.	154-276	2	CONNECTOR (040-08S90)	
6.	154-252	2	CONNECTOR (04S-04090)	
7.	116-804	2	HOSE (040FX90-69"-3000)	
8.	152-146	2	CONNECTOR (040-08S) SHORT	
9.	154-695	1	HOSE (040FX-38"-3000)	
10.	153-315	1	HOSE (060FX90S-36"-3000)	
11.	117-396	1	ABRASION SLEEVE (1.25" X 28")	
12.	117-387	1	ABRASION SLEEVE (1.00" X 42")	
13.	157-917	-	PRIORITY VALVE	
14.	307-535	-	RETURN MANIFOLD	
15.	153-210	-	HYDRAULIC MANIFOLD (5 PORT)	
16.	154-222	1	CONNECTOR (060-08S)	


FOOTNOTES

1. AS INDICATED BY THE GRAPHICS, "RETURN TO TANK" ON HYDROSTATIC UNITS RETURNS TO RETURN MANIFOLD ON SIDE OF LEFT FRAME PLATE. "RETURN TO TANK" ON POWER SHIFT UNITS RETURNS TO RETURN MANIFOLD ON CROSSMEMBER OF FRAME.

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

REAR STEER HYDRAULICS

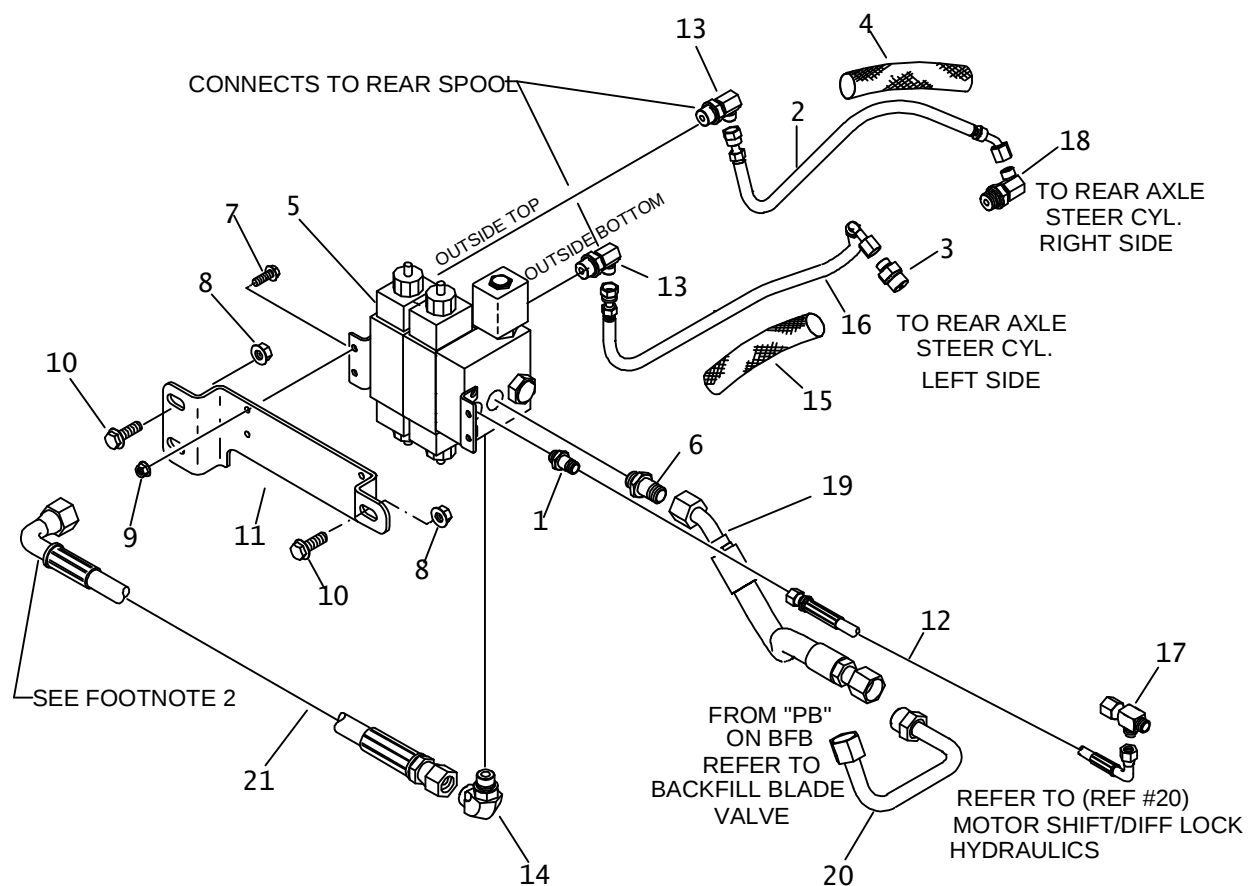

REAR STEER HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	154-222	1	CONNECTOR (060-08S)	
2.	154-934	1	HOSE (040FX45-18"-3000)	
3.	152-146	1	CONNECTOR (040-08S) SHORT	
4.	117-608	1	ABRASION SLEEVE (1.00" X 15")	
5.	153-785	1	HYDRAULIC VALVE (SGL SPOOL)	
	153-786	1	HYDRAULIC VALVE (2-SPOOL)	SEE FOOTNOTE 1, SEAL KIT 500-2201. SEE NOT SHOWN FOR S.P.
	159-505	-	SOLENOID TUBE	
	149-616	-	CAP NUT	
6.	154-391	1	CONNECTOR (08S-100)	
7.	106-379	4	FLG LK SCREW (M6-1.00 X 20mm)	
8.	106-354	3	FLANGE NUT (M12-1.75)	
9.	106-385	4	FLG LOCKNUT (M6-1.00)	
10.	106-632	3	FLG LK SCREW (M12-1.75 X 35mm, SER)	
11.	307-074	1	BRACKET	
12.	153-320	1	HOSE (060FX90L-17"-3000)	
13.	157-334	2	CONNECTOR (040-06S90, ORF)	
14.	154-298	1	CONNECTOR (10S-10090)	
15.	117-328	1	ABRASION SLEEVE (1.00" X 18")	
16.	515-462	1	HOSE (040FX90-22"-3000 AR)	
17.	154-344	-	UN RUN TEE (060FX-060-060)	REFER TO "MOTOR SHIFT/DIFF LOCK HYD" FOR DESTINATION
18.	154-276	1	CONNECTOR (040-08S90)	
19.	153-907	-	HOSE (100FX45-16"-3000)	
20.	149-851	-	HYD. LINE (-10)	
21.	515-129	-	HOSE (100FX90-30"-3000)	SEE FOOTNOTE 2

NOT SHOWN:

500-2372 AR SOLENOID TUBE, UNLOADING VALVE


FOOTNOTES:

1. 153-786 (2 SPOOL VALVE) IS USED WHEN FRAME TILT & REAR STEER OPTIONS ARE BOTH USED.
2. REFERENCE #3 FROM "PUMP DRIVE HYD" WILL ATTACH HERE UNTIL A REAR ATTACHMENT IS ATTACHED ON TRACTOR.

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

FRAME TILT HYDRAULICS

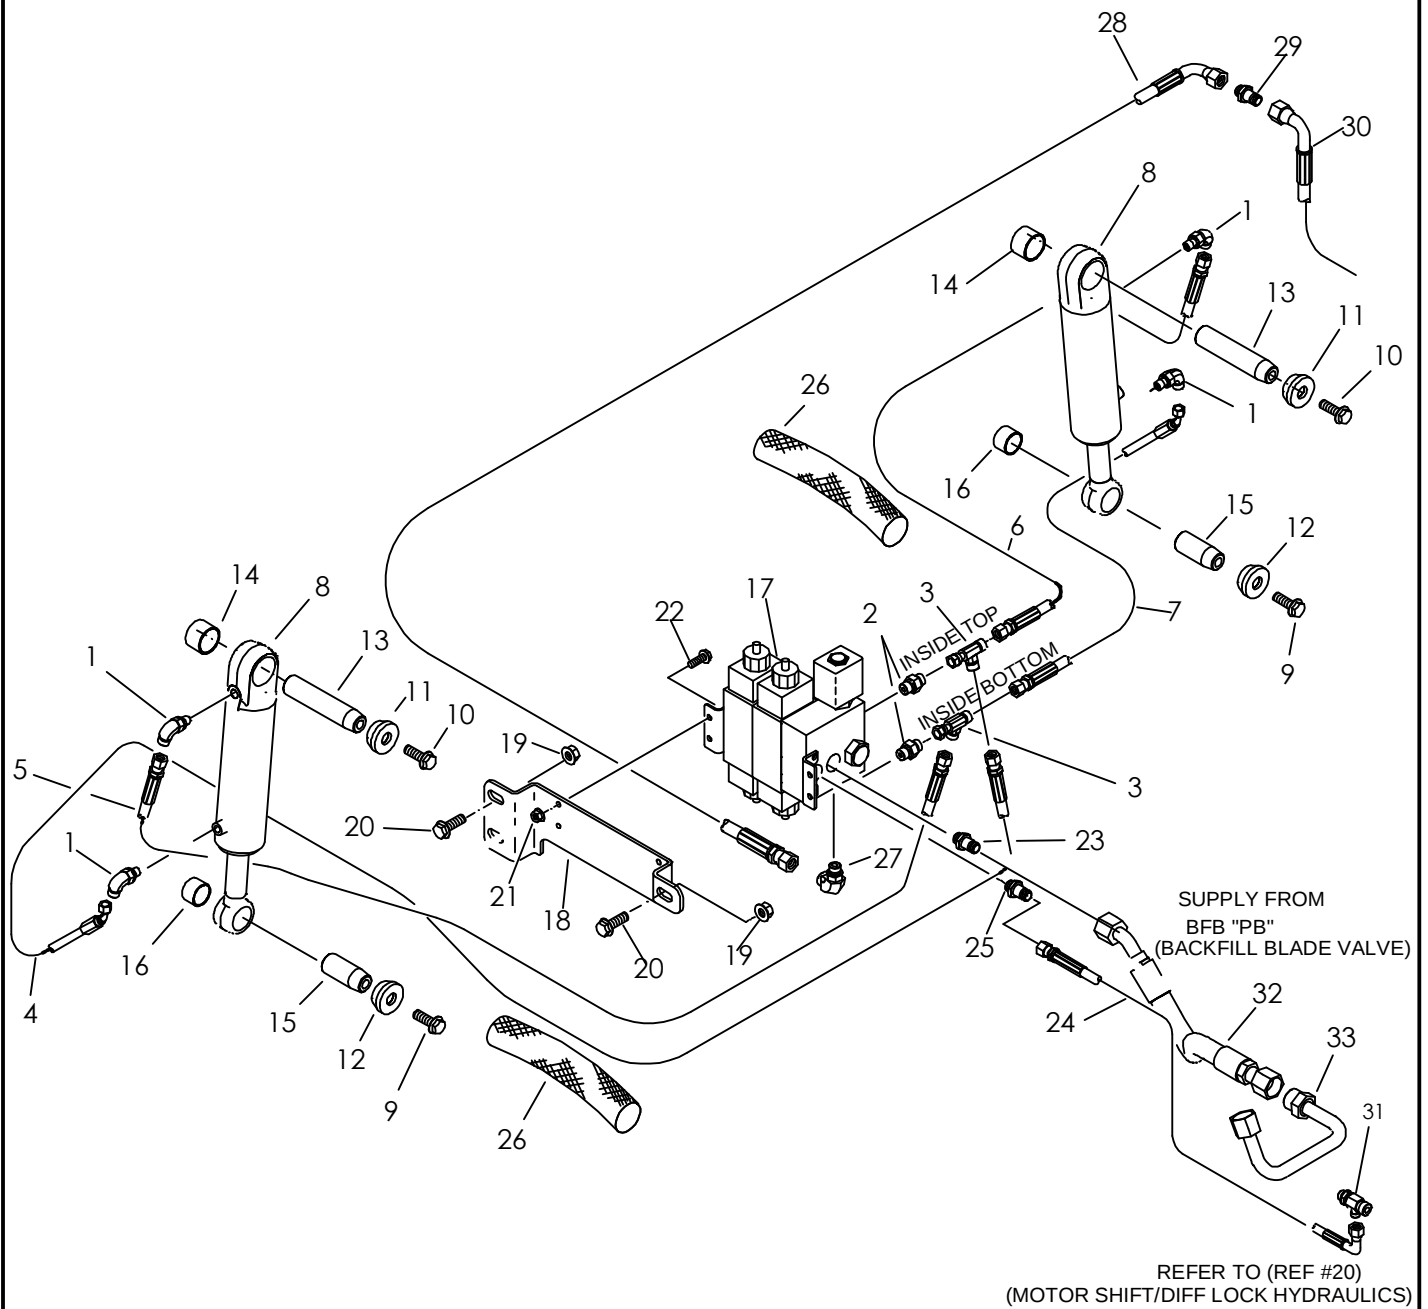

FRAME TILT HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	154-252	4	CONNECTOR (04S-04090)	
2.	154-385	2	CONNECTOR (040-06S, ORF)	
3.	154-265	2	UN RUN TEE (040FX-040-040)	
4.	154-963	1	HOSE (040FX45-24"-3000)	
5.	154-702	1	HOSE (040FX-30"-3000)	
6.	515-229	1	HOSE (040FX-34"-3000)	
7.	515-019	1	HOSE (040FX45-34"-3000)	
8.	151-202	2	CYL (2" X 1" X 3.38")	
9.	106-164	2	FLG LK SCREW (M10-1.50 X 30mm)	
10.	106-469	2	FLG SCREW (M12-1.75 X 30mm)	
11.	181-982	2	TAPERED INSERT (1.25")	
12.	181-981	2	TAPERED INSERT (1")	
13.	183-765	2	TAPERED PIN (31.7mm X 110mm)	
14.	125-771	2	COMPOSITION BUSHING (1.25")	
15.	183-767	2	TAPERED PIN (25.4mm X 60mm)	
16.	125-770	2	COMPOSITION BUSHING (1")	
17.	153-786	1	HYDRAULIC VALVE (2-SPOOL)	SEE FTNT 1, SEAL KIT 500-2201, SEE NOT SHOWN FOR S.P. SEE FOOTNOTE 1,
	153-785	1	HYDRAULIC VALVE (SGL SPOOL)	
	217-948		COIL, 12VDC	
	149-616		CAP NUT	
	499-445		COIL RETAINING NUT	OBSOLETE
	159-505		SOLENOID TUBE	
	499-444		SOLENOID TUBE ASSM'Y	OBSOLETE
	214-909		SOLENOID COIL	
	157-262		DUAL P.O. CHECK	
18.	307-074	1	BRACKET	
19.	106-354	3	FLG NUT (M12-1.75)	
20.	106-632	3	FLG LK SCREW (M12-1.75 X 35mm, SER)	
21.	106-385	4	FLG LK NUT (M6-1.00)	
22.	106-379	4	FLG LK SCREW (M6-1.00 X 20mm)	
23.	154-391	1	CONNECTOR (08S-100)	
24.	154-715	1	HOSE (040FX90-18"-3000)	
25.	154-222	1	CONNECTOR (060-08S)	
26.	115-811	2	ABRASION SLEEVE (1.59" X 20")	
27.	154-298	1	CONNECTOR (10S-10090)	
28.	515-129	1	HOSE (100FX90-30"-3000)	
29.	154-464	1	CONNECTOR (100-100)	
30.	157-343	-	HOSE (100FX90S-120"-3000)	REFER TO REF #3 ON PUMP DRIVE HYDRAULICS
31.	154-344	-	UN RUN TEE (060FX-060-060)	
32.	153-907	-	HOSE (100FX45-16"-3000)	
33.	149-851	-	HYD LINE (-10)	

NOT SHOWN:

500-2372 AR SOLENOID TUBE, UNLOADING VALVE


FOOTNOTES:

1. 153-786 (2-SPOOL VALVE) IS USED WHEN FRAME TILT & REAR STEER OPTIONS ARE BOTH USED. SEE REAR STEER PARTS PAGE FOR REAR STEER OPTION.

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

NO FRAME TILT/NO REAR STEER OPTION

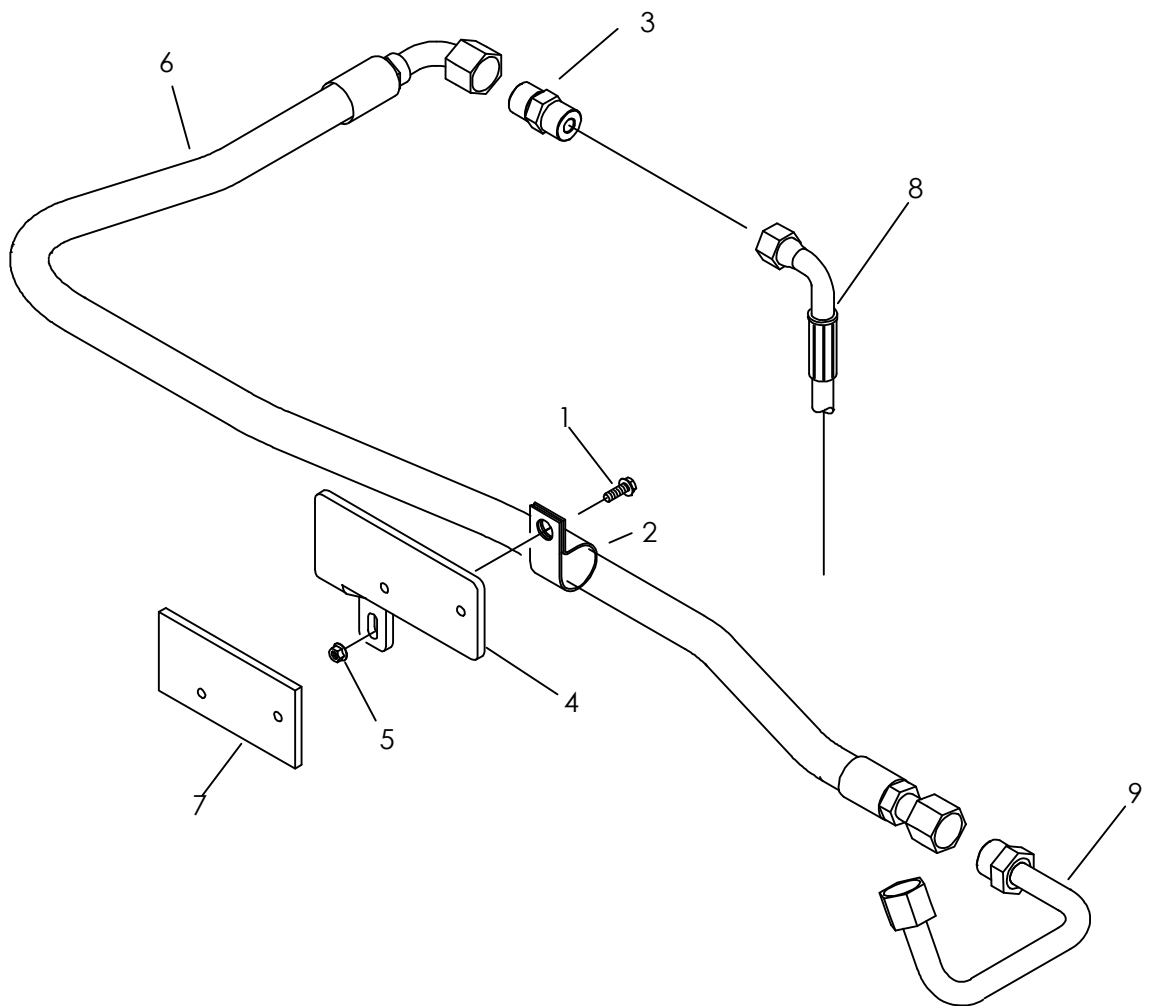

NO FRAME TILT/NO REAR STEER OPTION

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	106-988	1	FLG LK SCREW (M6-1.00 X 20mm)	
2.	110-333	1	BOLT-ON CLAMP (1")	
3.	154-464	1	CONNECTOR (100-100)	
4.	315-176	1	SPACER BRACKET	SEE FOOTNOTE I
5.	106-385	1	FLG LOCKNUT (M6-1.00)	
6.	153-956	1	HOSE (100FX90S-50"-3000)	
7.	306-885	-	MOUNT PLATE	
8.	157-343	-	HOSE (100FX90S-120"-3000)	
9.	149-851	-	HYD LINE (-10)	

NOT SHOWN:


FOOTNOTES:

- I. REFERENCE #4 (315-176) WILL REPLACE (IX) REFERENCE #2 ON PARTS PAGE "MOTOR SHIFT/DIFF LOCK HYD" WHEN "NO FRAME TILT/NO REAR STEER" IS USED.

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

HYDRAULIC CONTROL VALVE 3 SPOOL UPPER VALVE

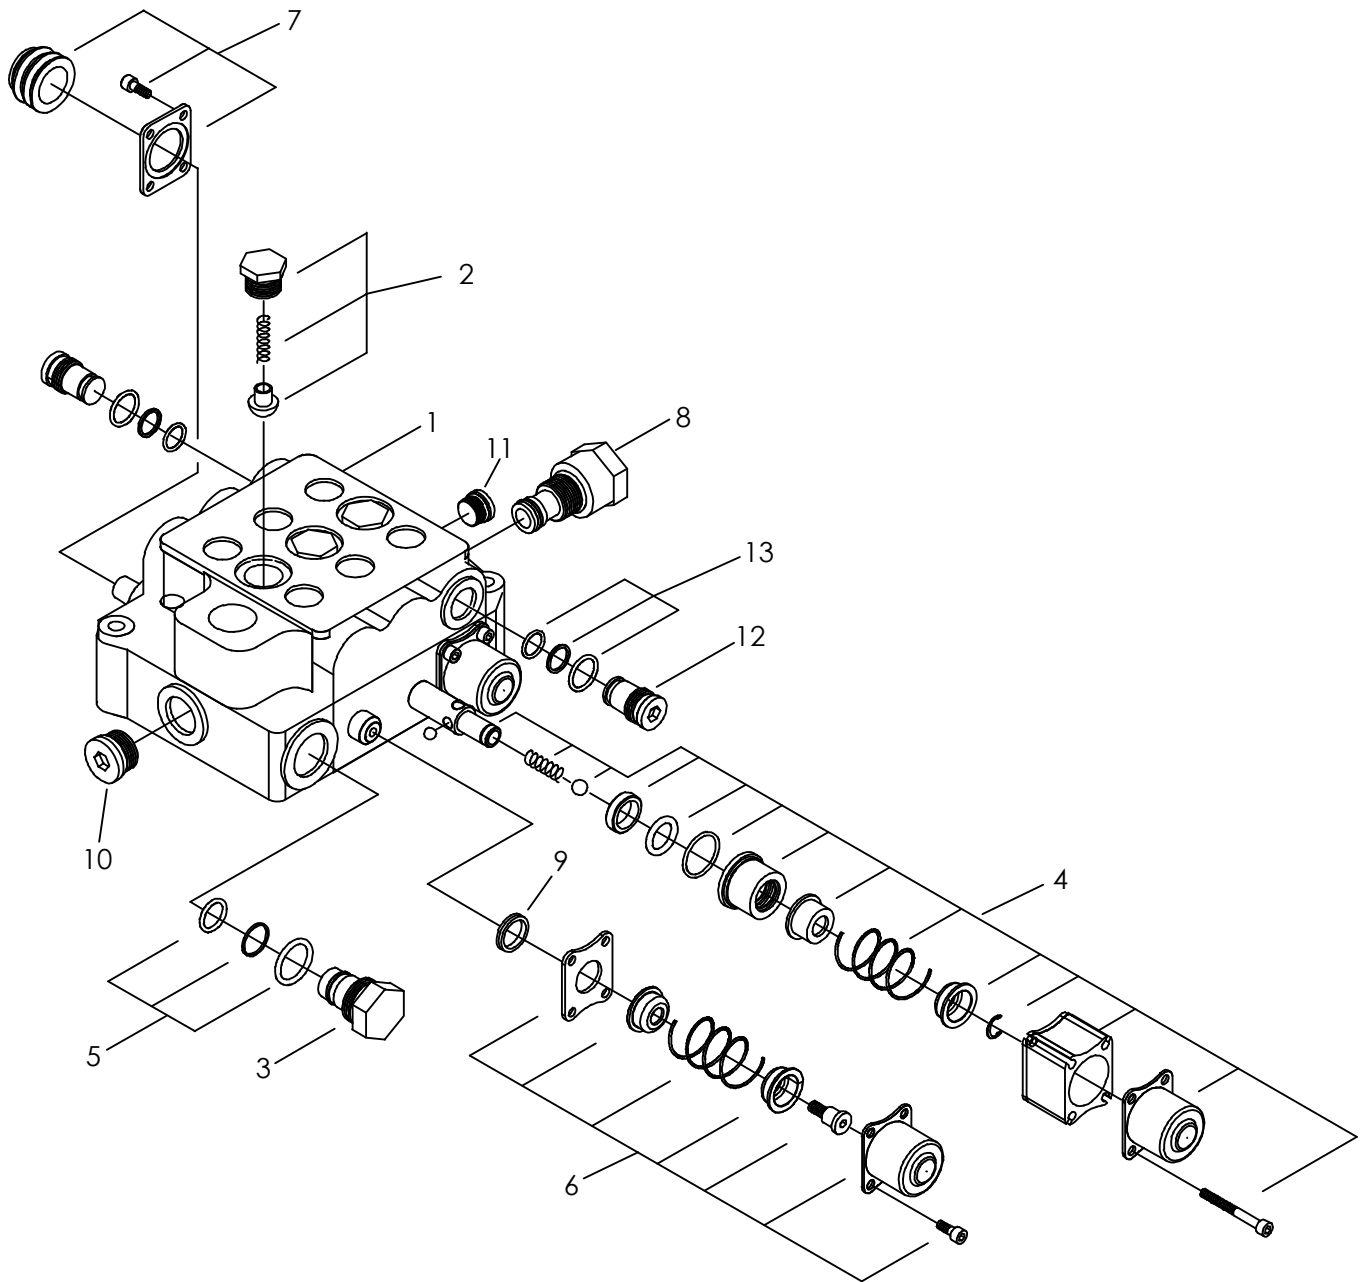

HYDRAULIC CONTROL VALVE

3 SPOOL UPPER VALVE

REF	PART				REMARKS
NO.	NUMBER	QTY	DESCRIPTION		
1.	158-033	1	HYD CONTROL VALVE (3-SPOOL)		ENDS WITH S/N_____. OBSOLETE
	159-809	1	HYD CONTROL VALVE (3-SPOOL)		BEGINS WITH S/N_____. USE FLOAT KIT 500-2020
2.	500-933	3	LOAD CHECK PLUG KIT		
3.	599-278	1	NR PLUG KIT		
4.	500-935	1	FLOAT POSITIONER KIT		
5.	191-149	1	PLUG SEAL KIT		
6.	500-934	2	SPOOL POSITIONER KIT		
7.	191-153	3	SPOOL BOOT KIT		
8.	191-157	1	POWER BEYOND SLEEVE		
9.	191-151	6	SPOOL LIP SEAL KIT		
10.	155-179	1	PLUG (10S, SOC)		
11.	154-384	1	PLUG (06S)		
12.	599-279	2	WORK PORT NR PLUG KIT		
13.	500-928	2	SEAL REPAIR KIT		

NOT SHOWN:

FOOTNOTES:


1. EARLY PRODUCTION VALVES HAVE A MACHINED WORK PORT WITH A PLUG INSTALLED, FUTURE PRODUCTION VALVES WILL NOT HAVE A MACHINED WORK PORT.

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

HYDRAULIC CYLINDER

2.0" X 1.00" X 3.38"

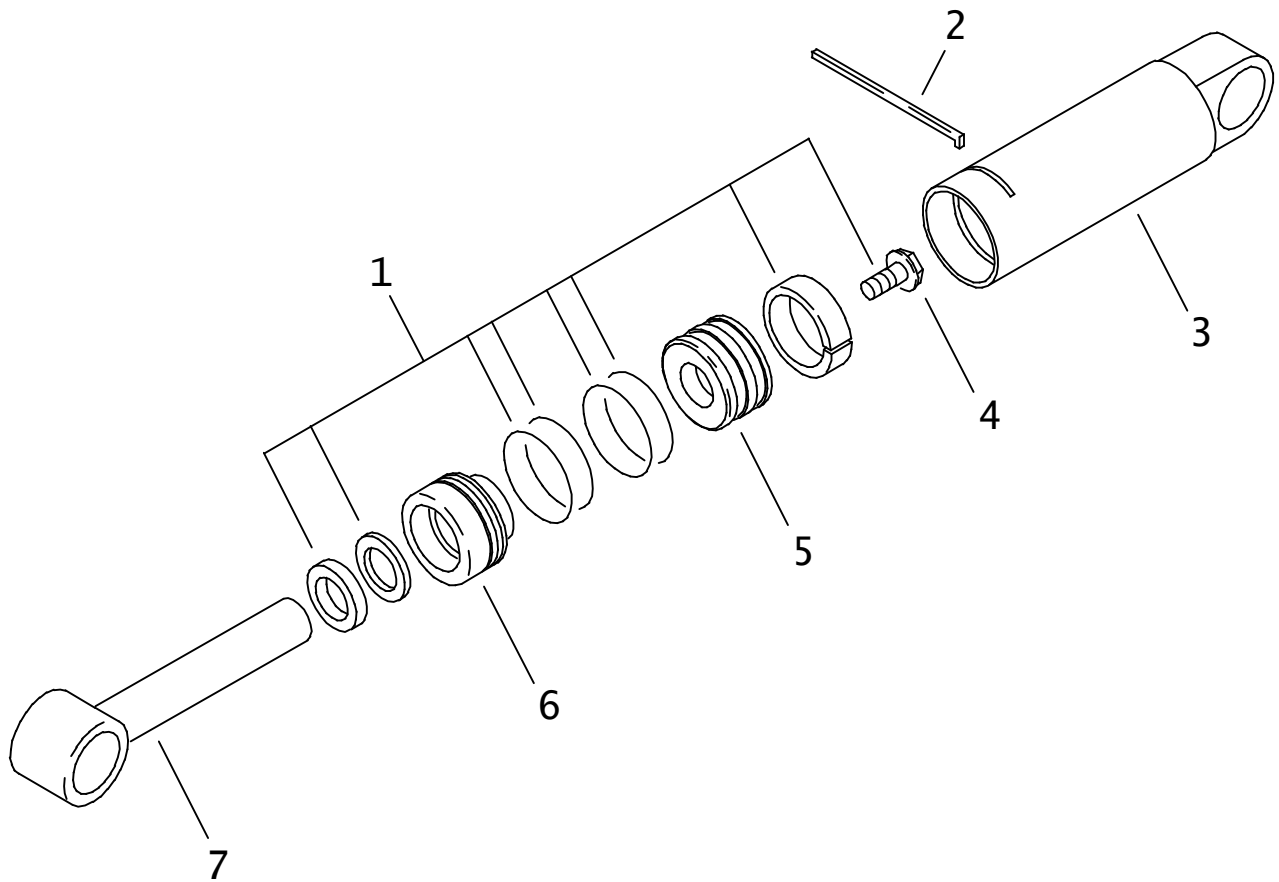

HYDRAULIC CYLINDER

2.0" X 1.00" X 3.38"

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	151-202		HYD CYL (2" X 1" X 3.38")	INCLUDES REF NO'S 1 THRU 7
1.	190-165	1	SEAL REPAIR KIT (2" X 1")	
2.	150-778	1	LOCK RING (2")	
3.	150-700	1	CYLINDER BARREL	
4.	106-096	1	FLG BOLT (1/2-NC X 1-3/4",GD8)	SEE FOOTNOTE I
5.	150-775	1	CYLINDER PISTON (2" X 1")	
6.	150-772	1	CYLINDER HEAD (2" X 1")	
7.	150-698	1	CYLINDER ROD	

NOT SHOWN:

259-100	U-SEAL INSTALLER (1"-1.499")
259-188	CYL HEAD SPANNER - TWO PIN
259-239	WIPER SEAL INSTALLER (2")
259-241	PISTON INSTALLER (2")


FOOTNOTES

I. APPLY LOCTITE 271 OR 277. TORQUE TO 90-100 FT-LBS (120-135 N.M.)

NOTE:

HYDRAULIC CYLINDER

2" X 1.25" X 8"

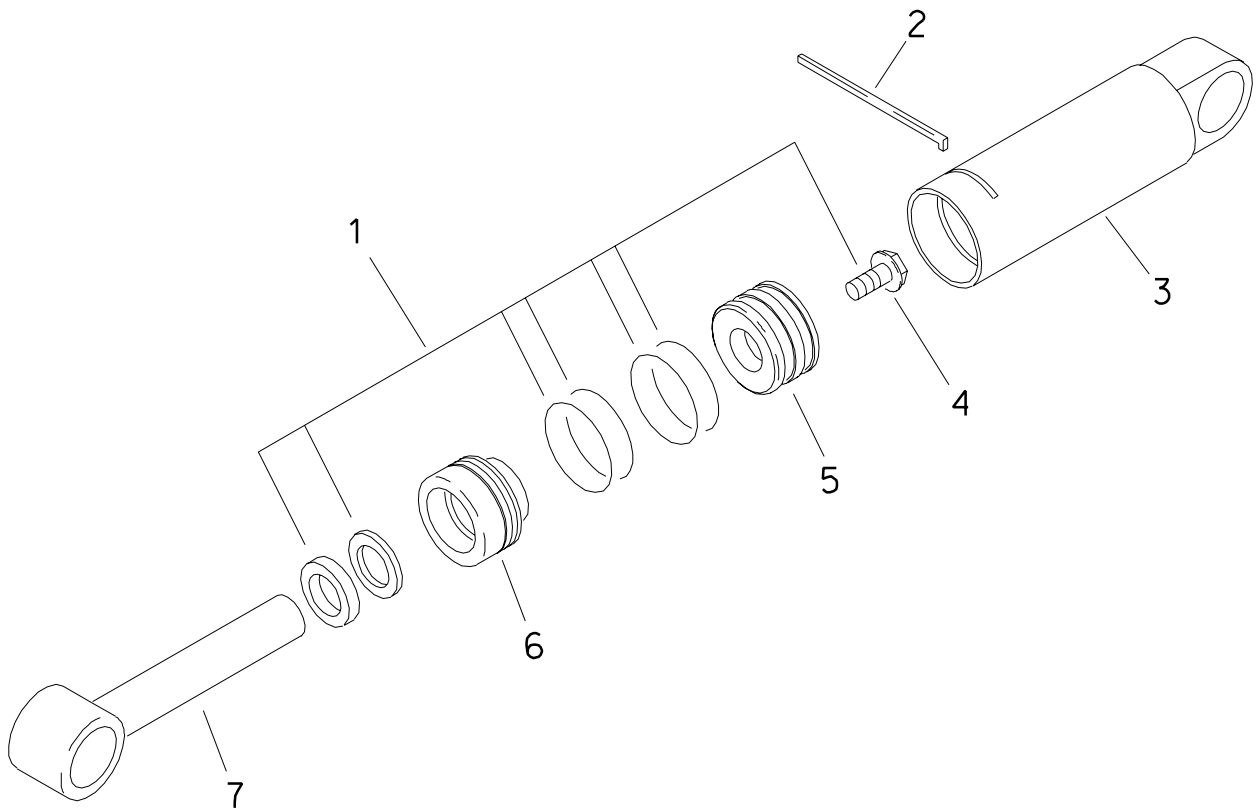

HYDRAULIC CYLINDER

2" X 1.25" X 8"

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	151-057		HYD CYLINDER (2" X 1.25" X 8")	INCL REF NO.'S 1 THRU 7
1.	190-169	1	SEAL REPAIR KIT (2.0" X 1.25")	
2.	150-778	1	LOCK RING (2.0")	
3.	150-285	1	CYLINDER BARREL (2")	
4.	106-097	1	FLG BOLT (5/8-NC X 1-3/4", GD8)	SEE FOOTNOTE 1
5.	150-771	1	CYLINDER PISTON (2" X 1.25")	SEE FOOTNOTE 2
6.	150-770	1	CYLINDER HEAD (2" X 1.25")	
7.	150-427	1	CYLINDER ROD	


NOT SHOWN:

	259-100		U-SEAL INSTALLER (1"-1.499")	
	259-236		WIPER INSTALLER (1.25")	
	259-239		WIPER/SEAL INSTALLER (2")	
	259-241		PISTON INSTALLER (2")	
	259-188		CYLINDER HEAD SPANNER - TWO PIN	

FOOTNOTES

1. USE LOCTITE 277, AND TORQUE TO 180-200 FT-LBS (245-270 N.M)
2. INCLUDES MOLDED-ON WEAR RING, H.P. SEAL, AND O-RING.

HYDRAULIC CYLINDER (3" X 1.75" X 8")

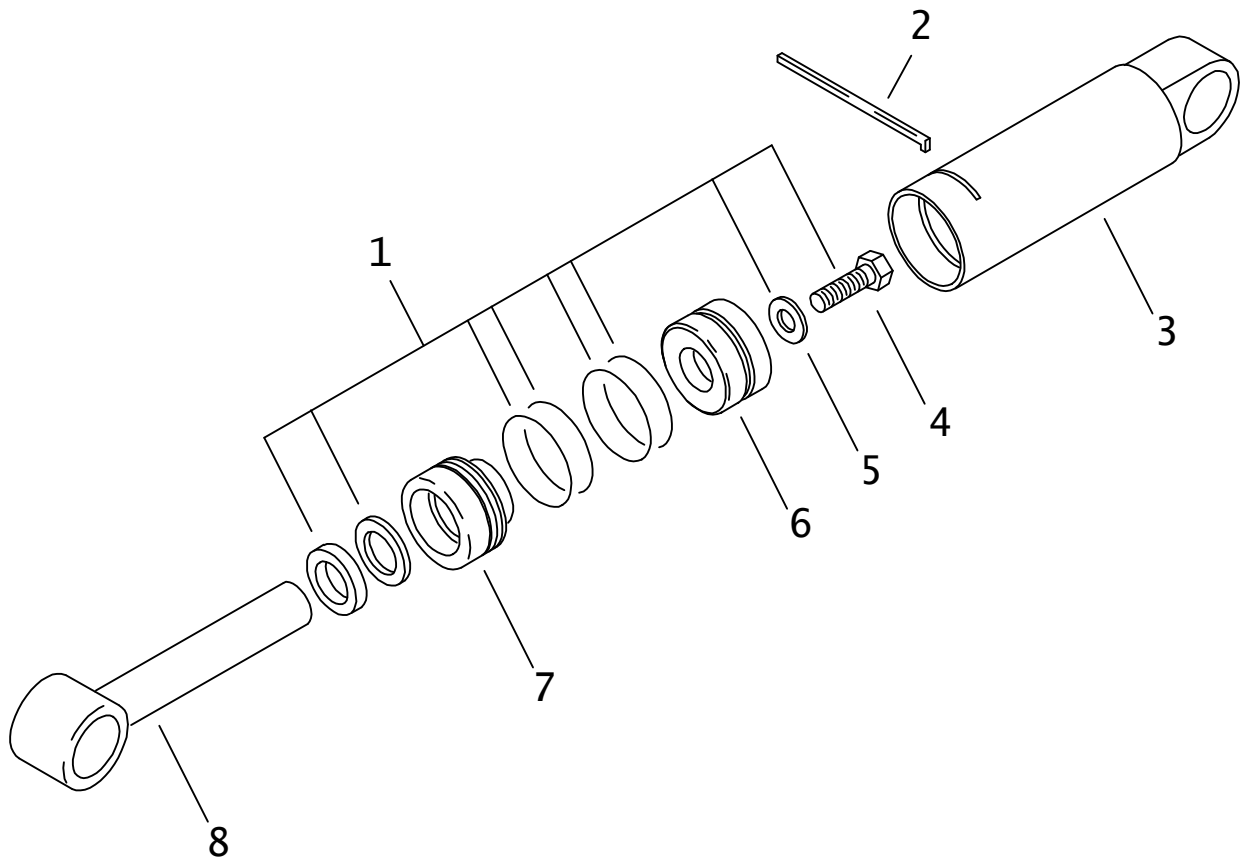

HYDRAULIC CYLINDER

3" X 1.75" X 8"

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	151-070		CYL (3.0" X 1.75" X 8.0")	INCL REF NO.'S 1 THRU 7
1.	190-172	1	SEAL REPAIR KIT (3.0" X 1.75")	INCL REF NO.'S 4 THRU 5
2.	150-911	1	LOCK RING (3")	
3.	152-014	1	CYLINDER BARREL (3")	
4.	106-122	1	BOLT (7/8-NC X 2-1/4", GD8)	SEE FOOTNOTE 1
5.	105-363	1	WASHER (7/8")	
6.	150-765	1	CYLINDER PISTON (3" X 1.75")	INCL MOLDED-ON WEAR RING
7.	150-763	1	CYLINDER HEAD (3" X 1.75")	
8.	150-436	1	CYLINDER ROD (1.75")	

NOT SHOWN:

259-040	U-SEAL INSTALLER (1.5" - UP)
259-238	WIPER INSTALLER (1.75")
259-065	PISTON SEAL INSTALLER (3")
259-066	PISTON INSTALLER (3")
259-188	CYL HEAD SPANNER - TWO PIN

FOOTNOTES:


1. CLEAN & DRY THREADS. APPLY RED LOCTITE (RC 271 OR RC 272). TORQUE TO 410-460 FT-LBS (560-625 N.M.)

NOTE:

NOTES:

ELECTRICAL

BACKUP ALARM KIT

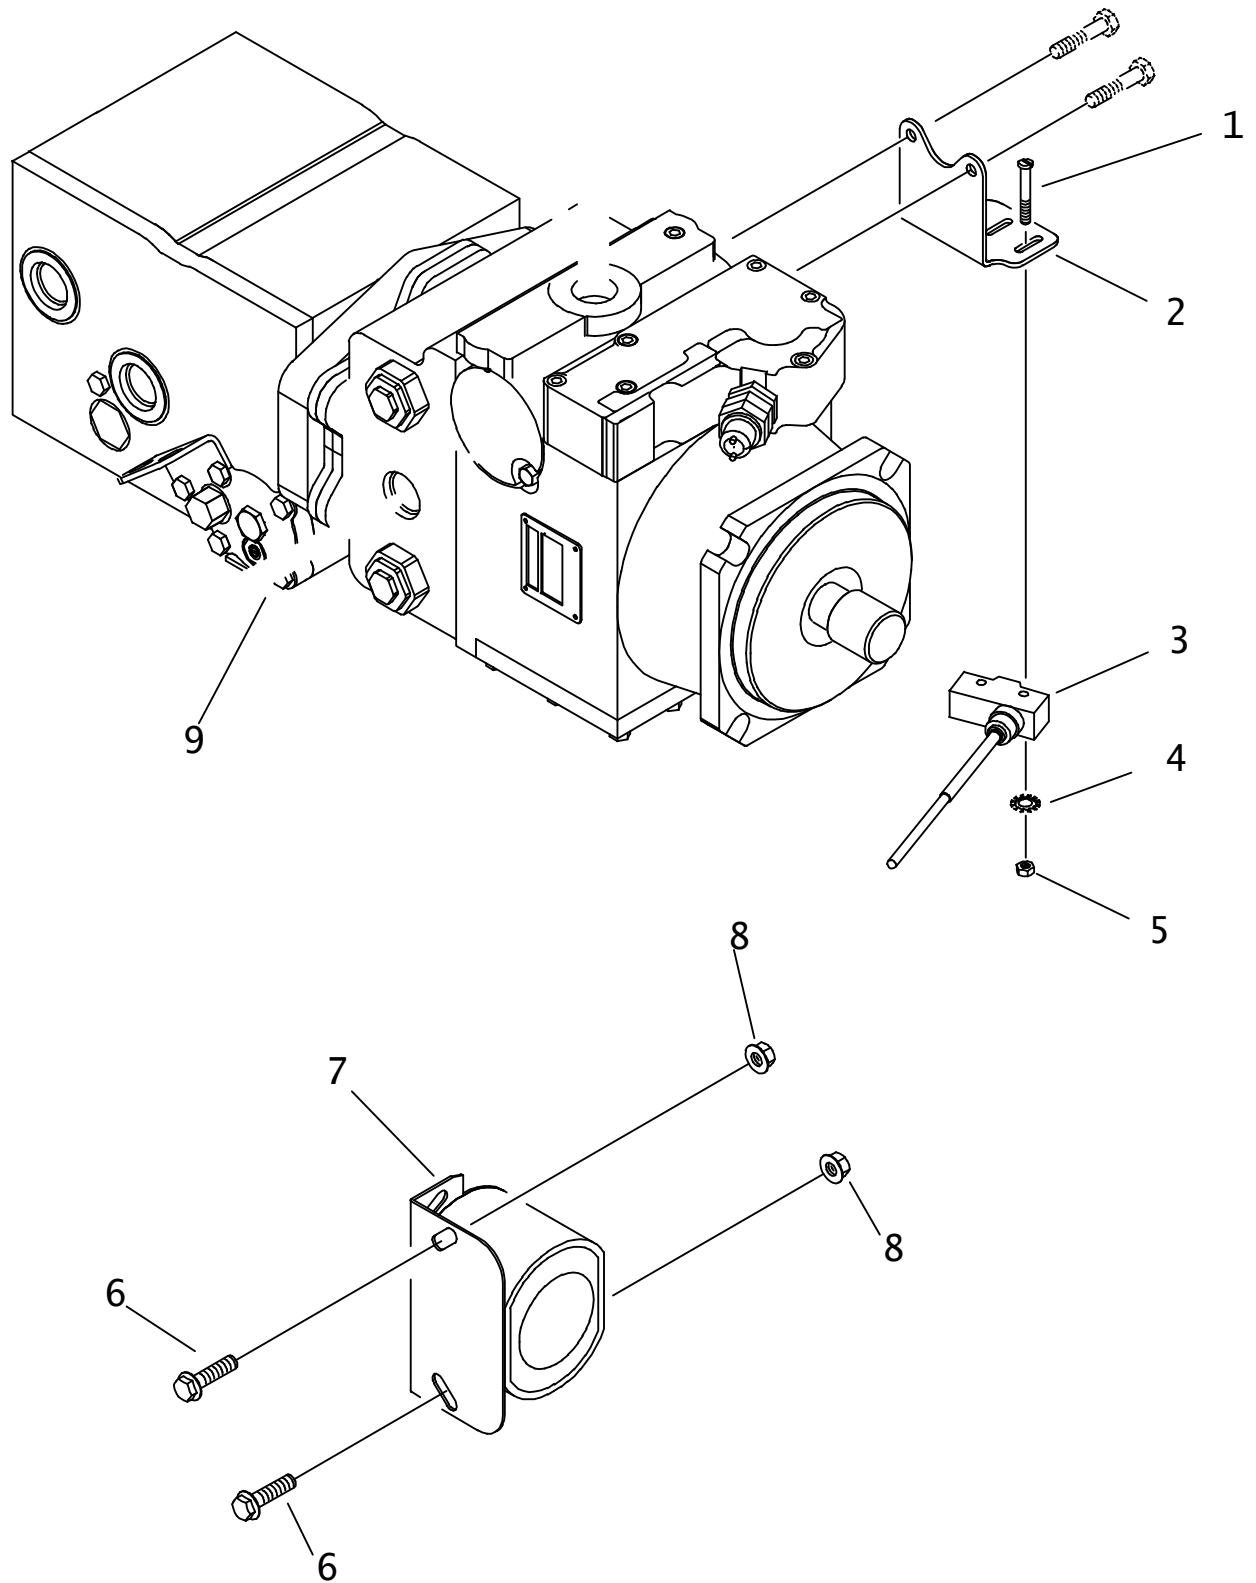

BACKUP ALARM KIT

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	191-137		BACKUP ALARM KIT (W/O CRUISE)	INCLUDES REF NO'S 1-9
	191-265		BACKUP ALARM KIT (W/CRUISE)	INCLUDES REF NO'S 4,5 & 8
1.	106-058	2	BOLT (#6-32 X 1-1/8", RD SLT)	
2.	319-152	1	ALARM SWITCH BRACKET	REFER TO FOOTNOTE 1
3.	217-703	1	OMNI LEVER SWITCH	
4.	106-040	2	EXT STAR WASHER (#6)	
5.	105-215	2	NUT (#6-32)	
6.	106-163	2	FLG SCREW (M8-1.25 X 30mm)	
7.	306-602	1	BACKUP ALARM	
8.	106-386	2	FLG LOCKNUT (M8-1.25)	
9.	158-048	-	TANDEM PUMP	

NOT SHOWN:
 217-293 BACKUP ALARM HARNESS

FOOTNOTES:
 1. TO MOUNT SWITCH BRACKET FIRST REMOVE SCREWS FROM PUMP AND THEN REINSERT THEM THRU BRACKET.

NOTE:

NOTES:

MISCELLANEOUS

SAE Bolt and Nut Torque Value Chart

Grade 5: UNC or UNF Thread

Size	Hex nut, or bolt tapped into hex nut, or d&t hole		Hex top deformed locknut		Flange nut, locknut, or bolt tapped into flange nut or d&t* hole	
	ft•lb	N•m	ft•lb	N•m	ft•lb	N•m
1/4	12	16	8	11	20	27
5/16	25	34	15	20	45	60
3/8	40	54	25	34	75	100
7/16	65	90	40	55	125	170
1/2	100	135	60	80	190	260
9/16	150	200	90	125	270	370
5/8	200	270	120	165	370	500
3/4	350	475	210	285	650	880
7/8	560	760	340	460	1250	1425
1	840	1140	500	680	1580	2145
1-1/8	1030	1400	320	840	1950	3645
1-1/4	1460	1980	880	1195	2760	3475

Grade 8: UNC or UNF Thread

Size	Hex nut, or bolt tapped into hex nut, or d&t hole		Hex top deformed locknut		Flange nut, locknut, or bolt tapped into flange nut or d&t* hole	
	ft•lb	N•m	ft•lb	N•m	ft•lb	N•m
1/4	14	19	10	14	24	33
5/16	30	40	18	25	50	70
3/8	55	73	35	50	90	125
7/16	85	115	50	70	140	190
1/2	130	175	80	110	220	300
9/16	190	260	110	150	310	420
5/8	260	355	160	245	430	585
3/4	450	610	270	365	750	1015
7/8	730	990	440	600	1210	1640
1	1090	1480	650	880	1320	2465
1-1/8	1550	2100	930	1260	2580	3500
1-1/4	2180	2955	1310	1780	3640	4935

*drilled and tapped

Metric Bolt and Cap Screw Torque Values

Size	Class 4.8				Class 8.8 and 9.8				Class 10.9				Class 12.9			
	Lubricated		Dry		Lubricated		Dry		Lubricated		Dry		Lubricated		Dry	
	N•m	ft•lb	N•m	ft•lb	N•m	ft•lb	N•m	ft•lb	N•m	ft•lb	N•m	ft•lb	N•m	ft•lb	N•m	ft•lb
M6	4.8	3.5	6	4.5	9	6.5	11	8.5	13	9.5	17	12	15	11.5	19	14.5
M8	12	8.5	15	11	22	16	28	20	32	24	40	30	37	28	47	35
M10	23	17	29	21	43	32	55	40	63	47	80	60	75	55	95	70
M12	40	29	50	37	75	55	95	70	110	80	140	105	130	95	165	120
M14	63	47	80	60	120	88	150	110	175	130	225	165	205	150	260	190
M16	100	73	125	92	190	140	240	175	275	200	350	225	320	240	400	300
M18	135	100	175	125	260	195	330	250	375	275	475	350	440	325	560	410
M20	190	140	240	180	375	275	475	350	530	400	675	500	625	460	800	580
M22	260	190	330	250	510	375	650	475	725	540	925	675	850	625	1075	800
M24	330	250	425	310	650	475	825	600	925	675	1150	850	1075	800	1350	1000
M27	490	360	625	450	950	700	1200	875	1350	1000	1700	1250	1600	1150	2000	1500
M30	675	490	850	625	1600	950	1650	1200	1850	1350	2300	1700	2150	1600	2700	2000
M33	900	675	1150	850	1750	1300	2200	1650	2500	1850	3150	2350	2900	2150	3700	2750
M36	1150	850	1450	1075	2250	1650	2850	2100	3200	2350	4050	3000	3750	2750	4750	3500

Do not use these values if a different torque value or tightening procedure is given for specific application. Torque values listed are for general use only. Check tightness of fasteners periodically.

Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical property class fasteners.

Fasteners should be replaced with the same or higher property class. If higher property class fasteners are used, these should only be tightened to strength of original.

Make sure fastener threads are clean and that the threads are properly started. This will prevent them from cross threading or galling when tightened.

Tighten plastic insert or crimped type steel locknuts to approximately 50% of dry torque indicated on chart. Apply torque to the nut - not the bolt head. Tighten toothed or serrated type locknuts to full torque value.

LUBRICATED means coated with lubricant. DRY means plain or zinc plated without any type of lubricant.

Hydraulic Cylinder Bolt Torque Chart

Bolt Size (inch)	Bolt Part No.	Cylinder Repair Kit Part No.	Torque (ft•lb)	Torque (N•m)
1/2	106-096	190-165	90-100	120-135
5/8	106-097	190-166 & 190-169	180-200	245-270
3/4	106-098	190-167 & 190-170	290-325	395-440
7/8	106-122	190-172 & 190-174	410-640	550-625
1	106-145	190-175 & 190-189	630-700	855-950
1-1/8	106-146	190-177	770-850	1045-1170

As a general rule:

- 1/2-inch bolts are used in cylinders with 1-inch rods
- 5/8-inch bolts are used in cylinders with 1 1/4-inch rods
- 3/4-inch bolts are used in cylinders with 1 1/2-inch rods
- 7/8-inch bolts are used in cylinders with 1 3/4-inch rods
- 1-inch bolts are used in cylinders with 2-inch rods (one with 1 3/4-inch)
- 1-1/8-inch bolts are used in cylinders with 2-1/4-inch rods

IMPORTANT: Do not reuse cylinder piston bolts when rebuilding a hydraulic cylinder. Each cylinder repair kit contains a new bolt. Use it. Lubricate lightly and torque to value shown on chart.

SAE & ORS Hydraulic Fitting Replacement O-Ring Chart

Fraction Size	Dash Size	SAE (Port Seal O-Ring)		ORS (Face Seal O-Ring)	
		Thread Size	O-Ring P/N	Thread Size	O-Ring P/N
1/16	1	NA	NA	NA	NA
1/8	2	5/16 - 24	NA	NA	NA
3/16	3	3/8 - 24	NA	NA	NA
1/4	4	7/16 - 20	155-760	9/16 - 18	157-037
5/16	5	1/2 - 20	NA	NA	NA
3/8	6	9/16 - 18	155-705	11/16 - 16	157-038
1/2	8	3/4 - 16	155-706	13/16 - 16	157-039
5/8	10	7/8 - 14	155-707	1 - 14	157-040
3/4	12	1-1/16 - 12	155-709	1-3/16 - 12	157-017
7/8	14	1-3/16 - 12	155-747	NA	NA
1	16	1-5/16 - 12	155-748	1-7/16 - 12	155-714
1-1/4	20	1-5/8 - 12	155-702	1-11/16 - 12	NA
1-1/2	24	1-7/8 - 12	157-001	2 - 12	NA
2	32	2-1/2 - 12	NA	NA	NA
2-1/2	40	3 - 12	NA	NA	NA
3	48	3-1/2 - 12	NA	NA	NA

Thread size indicates the diameter of the threaded area in fractions of an inch and number of threads per inch.

NA = not a current CMW part numbered o-ring, or dash size does not occur in current CMW applications

SAE = straight thread fitting that seals by sandwiching a hard o-ring between a shoulder on the male part and an angular surface at the mouth of the female port.

ORS = o-ring face seal; a type of fitting that seals by compressing a hard, captive o-ring between two flat parallel faces, one grooved for the o-ring and the other plain to act as the sealing surface

RT115H Tier 3

Related Publications

Component	Ass'y	P/N
<u>Model:</u>		
RT115 Parts Manual		053-1191
RT115 Operators Manual		054-1214
RT115 Repair Guide (Service Manual)		055-075
RT115 Special Tools Guide		052-901
RT115 Technical Supplement		053-1193
<u>Engine:</u>		
John Deere Operators Manual – PE4045HF285.....	195-1087 ..	053-1233

Filters

<u>Engine:</u>		
Air Filter Parts Ass'y		194-121
Element (primary)		194-147
Element (secondary)		194-148
Oil Filter Element (spin-on) - John Deere		194-478
Fuel Filter Element (slip-on) -		155-941
Primary Filter Sediment Bowl		194-493
Primary Fuel Filter Element-John Deere.....		195-1171
Secondary Fuel Filter Element-John Deere.....		195-1172
<u>Hydraulic:</u>		
Oil Filter Element (1-1/2-UNF, spin-on, Replacement)		153-792
Element (1-1/2-UNF, spin-on, Break-In)		153-791

Optional Kits

O-ring Repair Kit - FLG, ORS & SAE (15 different O-rings)	190-051
O-ring Repair Kit - Field Service (46 different O-rings)	190-052


**Ditch
Witch®**

Parts Manual Change Request

(Please print clearly)

Date: _____ Dealer No. (required): _____

Your Name: _____ Position: _____

Phone: _____ Fax: _____ E-mail: _____

Publication Information:

Parts Manual No.: _____ - _____

Model: _____

Illustration Part No.:

Manual Page No.:

1. _____ - _____	1. _____
2. _____ - _____	2. _____
3. _____ - _____	3. _____

Nature of Change Request:

☐ Text

☐ Graphics

☐ Missing Information

Describe change requested (if possible, include copy of publication page with changes marked.):

**Please fax completed form to
Parts Manual Department (580) 572-3525**

Thank you for taking the time to submit this request. We will contact you if further information is needed to process your request.

**A Note To
Ditch Witch
Equipment Owners:**

If your equipment was purchased through a Ditch Witch dealer, there is no need to read further.

However, if you purchased from any other source, please fill out the form on the reverse side and return it to us.

This will enable you to receive updates on this equipment as well as information on new products of interest.

Thanks for using Ditch Witch equipment.

(Please Fold Along This Line And Seal At Bottom With Tape)




**NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES**

BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO 23 PERRY OKLAHOMA

POSTAGE WILL BE PAID BY

**The Charles Machine Works, Inc.
P.O. Box 66
Perry, Oklahoma 73077-9989**

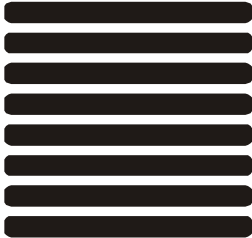

Ditch Witch® Registration Card

Please Type or Print All Information

Purchaser's Company Name

Attention

Street Address or P.O. Box

City

County

State

Zip

Nation

()

Phone Number With Area Code

Model

Serial Number

Attachments/Accessories

Serial Numbers

Attachments/Accessories

Serial Numbers

Attachments/Accessories

Serial Numbers

Name of Ditch Witch Dealership

Your Signature